

THERMA V.

Air-to-Water Heat Pump / Hydrosplit Type R32 / 50Hz 5BPU5-01D(Replaces 5BPU5-01C)

# TOTALHVAC SOLUTION PROVIDER ENGINEERING PRODUCT DATA BOOK



P/No. : MFL66101120



General Information
Indoor unit
Outdoor unit
Design and installation



# **General Information**

- 1.Model Line Up
- 2. Nomenclature

# 1. Model line up

# 1.1 Indoor Unit

Category	External Appearance	Model Name Heating Capacity * (kW)
		16.0
Hydrosplit Type	and the second s	ZHNW16B0 [HN1600MB NK0]

# 1.2 Outdoor Unit

			Model Name					
Category			Heating Capacity (kW)					
		12	14	16				
1 Phase Model 1 Ø, 220-240 V, 50 Hz		ZHBW126B0 [HU121MRB U30]	ZHBW146B0 [HU141MRB U30]	ZHBW166B0 [HU161MRB U30]				
Combination	ZHNW16B0 [HN1600MB NK0]	0	0	0				
_	nase Model 0-415 V, 50 Hz	ZHBW128B0 [HU123MRB U30]	ZHBW148B0 [HU143MRB U30]	ZHBW168B0 [HU163MRB U30]				
Combination	ZHNW16B0 [HN1600MB NK0]	0	0	0				
Externa	l Appearance		THERMAV.					

Note
\*: Actual system capacity would be different accordance with combination of outdoor unit.

# 2.1 Indoor Unit

# **■** Factory Model Name

Model Name	ZH	N	W	16	В	0
No.	1	2	3	4	5	6

No.	Signification
1	Air-to-Water Heat Pump for R32
2	Classification
2	N : Indoor unit
3	Model Type
3	W : Inverter Heat Pump
4	Heating Capacity (kW)
4	Ex) 16kW → '16'
5	Function
3	B : Hydrosplit Type
6	Serial number

# **■** Buyer Model Name

Model Name	Н	N	16	0	0	M	В	N	K	0
No.	1	2	3	4	5	6	7	8	9	10

No.	Signification
1	Air-to-Water Heat Pump
2	Classification
2	N : Indoor unit
3	Heating Capacity (kW)
3	Ex) 16kW → '16'
4	Electrical ratings
4	0 : for both 1Ø, 220-240V, 50 Hz and 3Ø, 380-415V,50Hz
5	Heater Capacity (kW)
3	Ex) 0kW → '0'
6	Leaving Water Combination
J	M : Mid Temperature
7	Function
•	B : Hydrosplit
8	Classification
J	N : Indoor unit
9	Platform (Chassis code)
	K : K1 Chassis
10	Serial number

# 2.2 Outdoor Unit

# **■** Factory Model Name

Model Name	ZH	В	W	16	8	В	0
No.	1	2	3	4	5	6	7

No.	Signification
1	Air-to-Water Heat Pump for R32
2	Classification
	B : Monobloc Type
	Model Type
3	W : Inverter Heat Pump
	Heating Capacity (kW)
4	Ex) 16kW → '16'
	Electrical ratings
5	6: 1Ø, 220-240V, 50 Hz 8 : 3Ø, 380-415V, 50 Hz
	Function
6	B : Hydrosplit
7	Serial number

# **■** Buyer Model Name

Model Name	Н	U	16	3	M	R	В	U	3	0
No.	1	2	3	4	5	6	7	8	9	10

No.	Signification
1	Air-to-Water Heat Pump
2	U : Outdoor unit
3	Heating Capacity (kW)  Ex) 16kW: '16'
4	Electrical ratings  1: 1Ø, 220-240V, 50 Hz 3: 3Ø, 380-415V, 50 Hz
5	Leaving Water Combination  M : Mid Temperature
6	Type of Refrigerant R: R32
7	Function  B: Hydrosplit
8	Classification U : Outdoor unit
9	Platform (Chassis code) 3: U60A Chassis
10	Serial number



# **Indoor unit**

- 1.List of Functions
- 2. Specification
- 3. Dimensions
- 4. Wiring Diagram
- **5.Piping Diagram**
- **6. Hydraulic Performance**
- 7. Sound Levels

# 1. List of Functions

### **■** Basic functions of Unit

Category	Functions	ZHNW16B0 [HN1600MB NK0]
Installation	Backup heater (Operation)	O (Accessory)
Reliability	Self diagnosis	0
	Auto Restart	0
	Child lock	0
Convenience	Sleep mode	0
Convenience	Timer (on/off)	0
	Timer (weekly)	0
	Two thermistor control	Х
Network function	Network solution(LGAP)	0
	Anti-condensation on floor (cooling)	0
	Digital output for external pump	0
	Current flow rate monitoring	0
	Thermostat interface (230V AC)	0
	Thermostat interface (24V AC)	Х
	Solar thermal system	0
	DHW(Domestic Hot Water) heating	O (Accessory)
	PHEX anti-freezing control	0
	Water pump anti-stuck function	0
	Weather compensation for heating and cooling (Auto mode)	0
A:	Low noise operation	0
Air to Water Heat Pump Functions	Anti-overheating of water pipe	0
T dirip i diredene	Emergency operation	0
	Weather Dependent Operation with Thermostat	0
	Scheduler (DHW Tank Heater)	0
	Timer (Domestic Hot Water Tank Heater)	0
	Quick Domestic Hot Water Tank Heating	0
	Screed Drying Mode	0
	Base pan heating	0
	External input and output control(CN_EXT)	0
	Water flow control	0
	Water pressure monitoring	0
	Digital input for energy saving (ESS)	0

### Note

1. O : Applied, X : Not applied
Accessory : Ordered and purchased separately the accessory package referring to the model name provided and install at field.
Accessory line-ups varies by region, so check your local catalogue or local sales material.

# 1. List of Functions

### ■ Accessory Compatibility List

	Category	Product	Remark	ZHNW16B0 [HN1600MB NK0]
Wired Remote Controller	Standard	PREMTW101	New standard (White)	0
	Simple Contact	PDRYCB000	Simple Dry Contact	0
Dry Contact		PDRYCB400	2 Points Dry Contact (For Setback)	X
	Communication Type	PDRYCB320	For 3rd party Thermostat	0
		PDRYCB500	Dry Contact for Modbus	X
	Remote temperature sensor	PQRSTA0	-	0
	Group control wire	PZCWRCG3	0.25 m	X
	2-Remo Control Wire	PZCWRC2	0.25 m	0
	Extension wire	PZCWRC1	10 m	0
ETC	Wi-Fi controller *	PWFMDD200	USB Cable : 0.6 m Extension cable : 0.5 m	0
	Wi-Fi Extension cable	PWYREW000	USB Extension cable : 10 m	0
	Meter Interface***	PENKTH000	Interface between IDU and Meter	0
	2 Zone Valve Controller	PZNVVB200	-	0
	2 2010 VAIVE OUTHOUGH	OSHW-200F	200 L	0
	DHW tanks (Single coil)	OSHW-300F	300 L	0
	ווען tariks (Sirigle coll)	OSHW-300F OSHW-500F	500 L	0
	DHW topke (Dauble sail)			
	DHW tanks (Double coil)	OSHW-300FD	300 L	0
	DI IVA/ 4I I-i4	PHLTA	For Split (1Φ)	0
	DHW tank kit	PHLTB	For Monobloc	X
	BUNK	PHLTC	For Split (3Φ)	0
	DHW sensor	PHRSTA0	included in PHLTA kit	0
	Mixing valve	OSHA-MV	3/4" DN20	0
		OSHA-MV1	1" DN25	0
		AHEH036A [HA031M E1]	220-240 V, 1Ф	X
Accessory Kit		AHEH066A [HA061M E1]	220-240 V, 1Ф	X
or AWHP	Backup heater	AHEH066B [HA061B E1]	220-240 V, 1Ф	0
		AHEH068A [HA063M E1]	380-415 V, 3Ф	X
		AHEH068B [HA063B E1]	380-415 V, 3Ф	0
	3way valve	OSHA-3V	-	0
	Solar thermal kit	PHLLA	-	X
	2nd Circuit or E/Heater Thermistor	PRSTAT5K10	-	0
	5 .	PHDPB	-	X
	Drain pan	PHDPC	-	0
	Cover Plate	PDC-HK10	For K1 Chassis only	0
	Buffer Tank (40ℓ)	OSHB-40KT	For IWT(integrable)	X
	DHW expansion vessel (8 <i>l</i> )	OSHE-12KT	For IWT (integrable)	X
	AC EZ	PQCSZ250S0	AC EZ	X
	AC Ez Touch	PACEZA000	AC Ez Touch	0
	AC Ez Touch			_
	AC Smart	PACS4B000	AC Smart IV	0
Central Controller		PACS5A000	ACD N	0
John Onei	ACP	PACP4B000	ACP IV	0
		PACP5A000	ACP 5	0
	AC Manager **	PACM4B000	AC Manager IV	0
	<u> </u>	PACM5A000	AC Manager 5	0
	IDU PI485	PHNFP14A0	Without case	X
		PSNFP14A0	With case	X
Gateway	ODU PI485	PMNFP14A1	PI 485 Gateway	0
Jaionay	BACnet	PQNFB17C0	ACP BACnet	0
	Lonworks	PLNWKB000	ACP Lonworks	0
	Modbus	PMBUSB00A	-	0
	DDI	PPWRDB000	PDI Standard	0
ETC	PDI	PQNUD1S40	PDI Premium	0
	ACS IO Module	PEXPMB000	<u> </u>	X

- 1. O: Possible, X: Impossible, -: Not applicable, Embedded: Included with product.
  2. \*: Some advanced functions controlled by individual controller cannot be operated.
  3. \*\*: It could not be operated some functions.
  4. If you need more detail, please refer to the *BECON* PDB or the manual of product. (http://partner.lge.com/global: Home> Doc.Library> Product > Control(BECON))

  \*\*\* Meter interface cannot be connected at the same time with 3rd-party controller.

	Indoor Unit			ZHNW16B0 [HN1600MB NK0]
Operation Range	Cooling	Min. ~ Max.	°C DB	5 ~ 27
(Leaving Water	Heating	Min. ~ Max.	°C DB	15 ~ 65
Temperature)	DHW *	Min. ~ Max.	°C DB	15 ~ 80
	Туре		-	Canned type for hot water circulation
	Model			GRUNDFOS UPML 20-105 CHBL
Water Pump	Motor Type		-	BLDC
	Steps of Pump Performance		-	Variable capacity 10% to 100%
	Power input	Min. ~ Max.	W	14 ~ 140
	Туре		-	Vortex
Flavy Canaan	Model		-	SIKA VVX20
Flow Sensor	Measuring Range	Min. ~ Max.	ℓ/min	5 ~ 80
	Flow (Trigger point)	Min.	ℓ/min	15
W B	Model	-	-	Sensata OFM(2HMP)
Water Pressure Sensor	Measuring Range	Min. ~ Max.	bar(G)	0 ~ 20
	Volume	Max.	l	8
Expansion Vessel	Water pressure	Max.	bar	3
	Water pressure	Pre-charged	bar	1
Relief valve	Pressure Limit	Upper Limit	bar	3.0
			-	Relief valve / Flow sensor
<b>Devices for Water Circuit</b>	-		-	Drain hose
			-	Pressure sensor / Air vent valve
Piping Connections	Water Circuit	Inlet	mm(Inch)	Male PT 25.4(1)
Fibility Confidentions	Water Circuit	Outlet	mm(Inch)	Male PT 25.4(1)
Wiring Connections	Power and Communication Cable (I H07RN-F)	ncluded Earth,	mm <sup>2</sup> x cores	0.75 x 4
Sound Power Level	Heating	Rated	dB(A)	44
Dimensions	Unit	W×H×D	mm	490 × 850 × 315
DITTETISIONS	Packed Unit	W×H×D	mm	563 ×1,082 × 375
Weight	Unit		kg	30.3
vveignt	Packed Unit		kg	34.3

### Note


- 1. Due to our policy of innovation some specifications may be changed without notification.
- 2. Wiring cable size must comply with the applicable local and national code. And "Electric characteristics" chapter should be considered for electrical work and design. Especially the power cable and circuit breaker should be selected in accordance with that.
- Sound power level is measured on the rated condition in according with ISO 9614 standard. Therefore, these values can be increased owing to ambient conditions during operation.
- 4. \* DHW 58~80°C operating is available only when the booster heater is operating.

### **♦** Backup Heater


Electrical Specification		AHEH066B [HA061B E1]	AHEH068B [HA063B E1]
Туре	-	Sheath	Sheath
Power Supply	V, Ø, Hz	220-240, 1, 50	380-415, 3, 50
Power Connection Wiring	-	L1, N, Earth	R, S, T, N, Earth
Number of Heating Coil	EA	2	3
Capacity Combination	kW	3 + 3	2 + 2 + 2
Operation	-	Automatic	Automatic
Heating Steps	Step	1	1
Net Dimensions (W X H X D)	mm	-	-
Shipping Dimensions (W X H X D)	mm	738 x 293 x 309	738 x 293 x 309
New Weight	kg	3.47	4.1
Shipping Weight	kg	5.4	5.9
Current(Rated)	А	24	8.7
Power Cable (Included Earth, H07RN-F)	mm² x cores	6.0 x 3C	2.5 x 5C
Communication Cable (H07RN-F)	mm² x cores	-	-
Circuit Breaker( ELCB)	Α	40	20

- 1. Due to our policy of innovation some specifications may be changed without notification.
- Wiring cable size must comply with the applicable local and national code. And "Electric characteristics" chapter should be considered for electrical work and design. Especially the power cable and circuit breaker should be selected in accordance with that.

# 3.1 Internal Layout

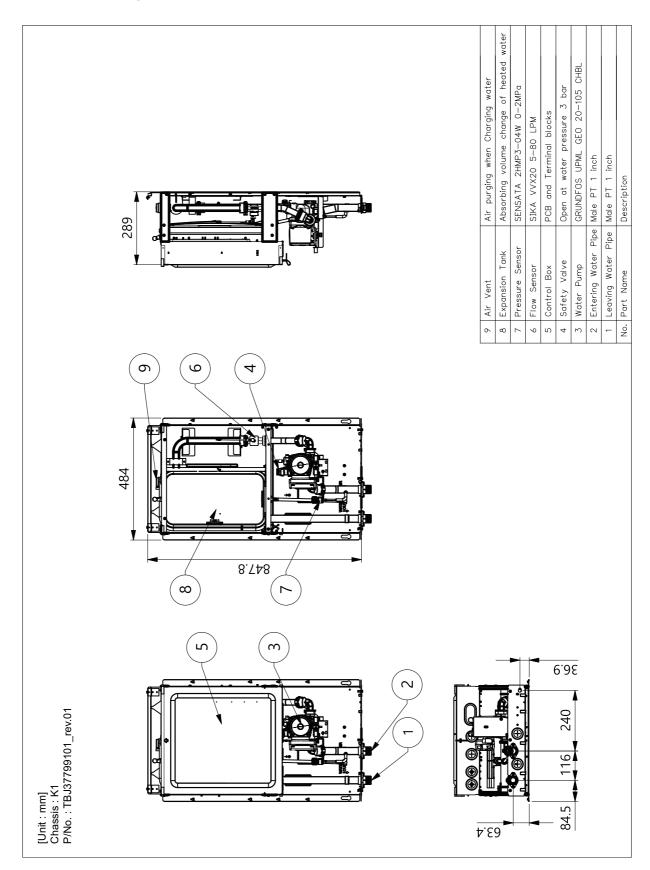


# 3.2 External Layout

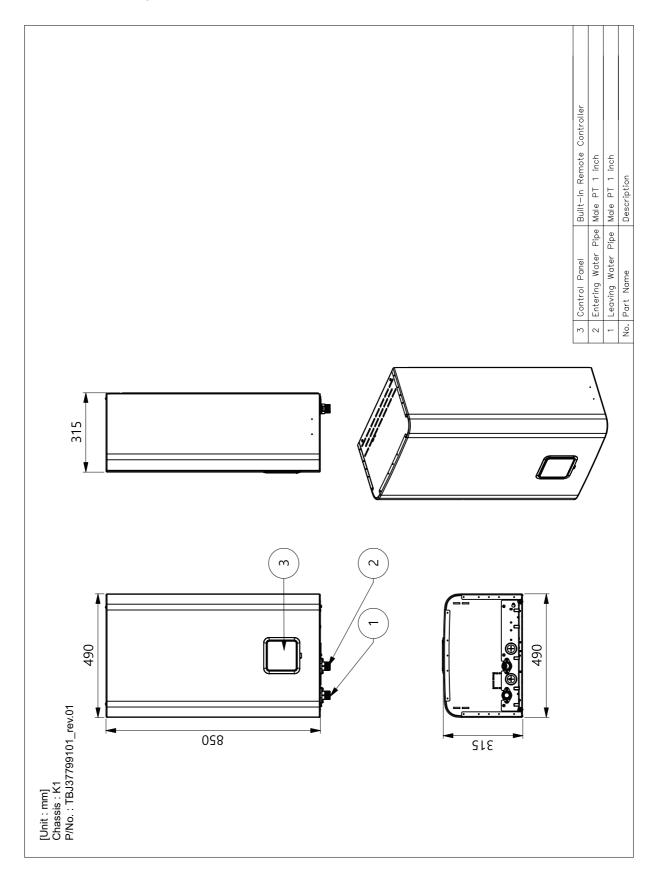


# 3.3 Backup Heater

### **♦** 1Phase

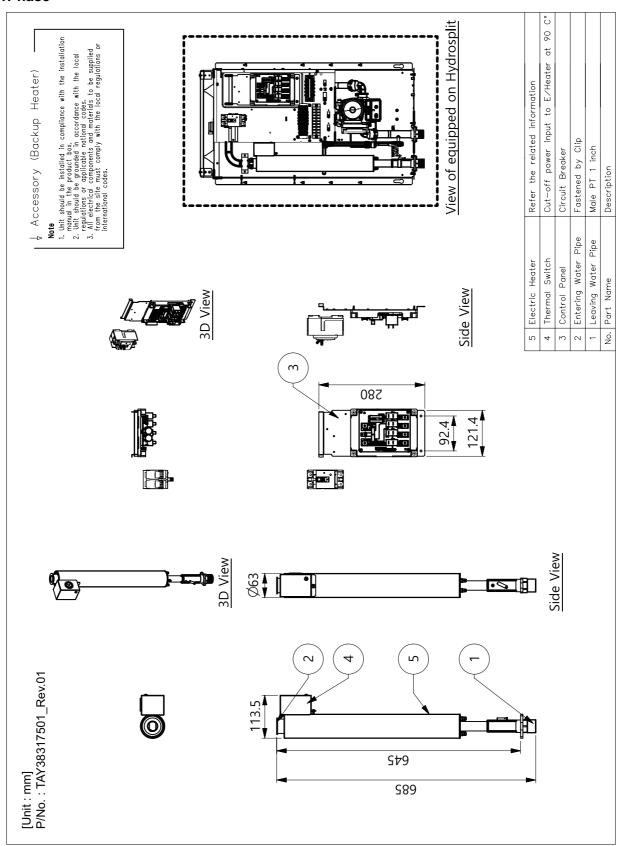


### ♦ 3Phase

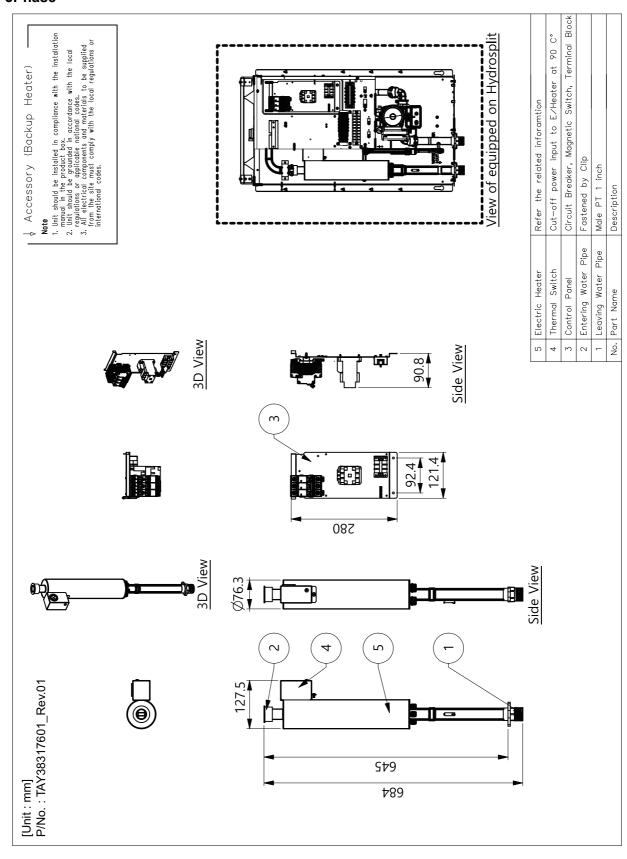


# 4. Wiring Diagrams

### ■ ZHNW16B0 [HN1600MB NK0]

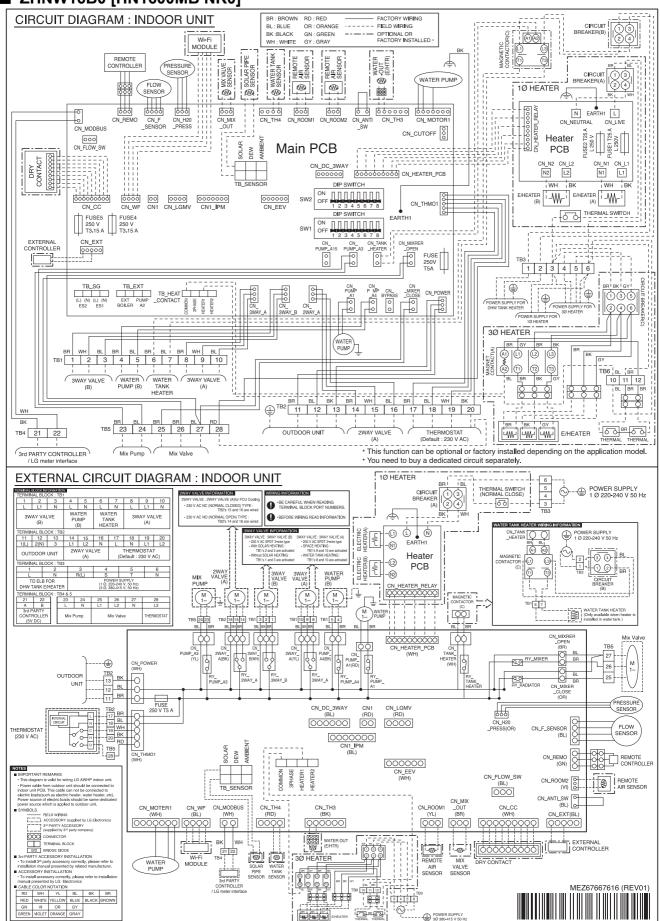

# 5. Piping Diagram

■ ZHNW16B0 [HN1600MB NK0]

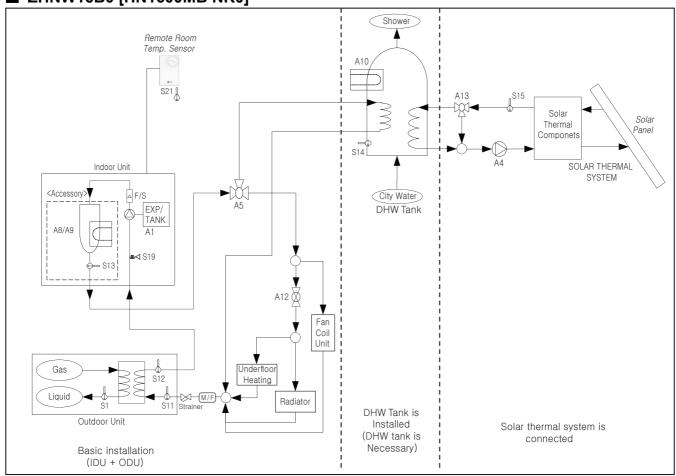



Category	Symbol	Meaning	PCB Connector	Remarks
	S1	Refrigerant temperature sensor (Liquid side)	CN_PIPE_IN	Meaning is expressed based on Cooling mode.
	S12	Outlet water temperature sensor	CN_WATER_OUT	Leaving water temperature sensor
Category  Outdoor Unit  Indoor Unit  Water Heating	S11	Inlet water temperature sensor	CN_WATER_IN	Entering water temperature sensor
	M/F	Magnetic Filter	(No connector)	3rd party accessory and Field installation (sold separately)     It is strongly recommended to install an additional filter on the heating water circuit
	S19	Entering Water Pressure sensor	CN_H20_PRESS	
	A8 / A9	Backup heater	(No connector)	-Optional accessory (sole separately) - HA061B E1 : 1Ø, HA063B E1 : 3Ø
	S13	Outlet sensor of backup heater	CN_TH3	- Accessory supplied with Backup heater
-	A1	Internal Water Pump	CN_MOTOR1 CN_PUMP_A1	- Water Pump is connected at CN_MOTOR1 and CN_PUMP_A1
Indoor Unit	EXP/TANK	Expansion Tank	(No connector)	- Absorb volume change of heated water.
	S17	Flow sensor	CN_F_SENSOR	- To monitor water flow rate in the system
	S21	Remoted Air temperature sensor	CN_ROOM2	- Optional accessory (sold separately) - PQRSTA0
	CTR/PNL	Control Panel (or 'Remote Controller')	CN_REMO	- Pre built-in at indoor unit
A12		To control water flow for Fan Coil Unit	CN_2WAY_A	- 3rd party accessory and Field installation (sold separately) - 2 wire NO and NC type 2way valve is supported
	W/TANK	DHW Tank	(No connector)	3rd party accessory and Field installation (sold separately)     Generating and storing DHW by AWHP or built-in electric heater
	A10	Booster Heater	CN_TANK_HEATER	- 3rd party accessory and Field installation (usually built-in at W/TANK) - Supplying additional water heating capacity
Water Heating	A5	- Flow control for water which is leaving from indoor unit. - Flow direction switching between underfloor and water tank.	CN_3WAY_A	- 3rd party accessory and Field installation (sold separately)
	CITY WATER	Water to be heated by indoor unit and B/HT of W/TANK	(No connector)	- Field installation
	SHOWER	Water supplied to end-user	(No connector)	- Field installation
	S14	W/TANK water temperature sensor	CN_TH4	- S14 are connected at 4 pin type connector CN_TH4- S14 is a part of DHW tank kit (Model : PHLTA)
	S15	Solar-heated water temperature sensor	TB_SENSOR SOLAR	- 3rd party accessory and Field installation (sold separately) - PT1000
Solar Heating	A13	- Flow control for water which is heated and circulated by SOLAR THERMAL SYSTEM. - Flow direction switching between SOLAR THERMAL SYSTEM and W/TANK	CN_3WAY_B	- 3rd party accessory and Field installation (sold separately) - SPDT type 3way valve is supported
	A4	External Water Pump	CN_PUMP_A4	3rd party accessory and Field installation (sold separately)     If water pump of SOLAR THERMAL SYSTEM is incapable of circulation, external water pump can be used.
	SOLAR THERMAL SYSTEM	- This system can include following components: Solar panel, Sensor, Thermostats, Interim heat exchanger, Water pump, etc.	(No connector)	- 3rd party accessory and Field installation (sold separately)

# 6. Hydraulic Performance

The water pump is variable type which is capable to change flow rate, so it may be required to change default water pump capacity in case of noise by water flow. In most case, however, it is strongly recommended to set capacity as Maximum.


### ■ Pressure Drop

Capacity [kW]	Rated flow-rate [LPM]	Pump Head [m] (at rated flow- rate)	Product pressure drop [m] (Plate heat exchanger)	Serviceable Head [m]	Min. flow-rate [LPM] (Recommend)
16	46	9	1.4	7.6	
14	40.25	9.3	1.1	8.2	15
12	34.5	9.8	0.8	9	

### Note

- To secure enough water flow rate, do not set water pump capacity as Minimum.
   It can lead unexpected flow rate error CH14.
- When installing the product, install additional pump in consideration of the pressure loss and pump performance.
- · If flow-rate is low, overloading of product can occur.

### **Q-H Chart**

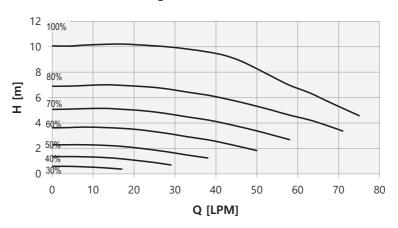

### Note

Performance test based on standard ISO 9906 with pre-pressure 2.0bar and liquid temperature 20°C.

### 7. Sound levels


### ■ Sound Power Level

### Note

- 1. Data is valid at diffuse field condition.
- 2. Reference acoustic intensity 0dB = 10E-6µW/m<sup>2</sup>
- 3. Sound power level is measured on the rated condition in the reverberation rooms. Refer to the Model Specifications for nominal conditions(Power source and Ambient temperature, etc)
- 4. Sound levels can be increased in accordance with installation and operating conditions.
- 5. Sound level will vary depending on a range of factors such as the construction (acoustic absorption coefficient) of particular installed place in which the equipment in installed.
- 6. Sound power level is measured on the rated condition in accordance with ISO 9614 standard. Therefore, these values can be increased owing to ambient conditions during operation.

Model	Sound Power Level [dB(A)]
ZHNW16B0 [HN1600MB NK0]	44

### **ZHNW16B0 [HN1600MB NK0]**

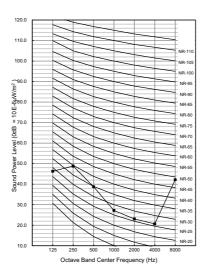



### **Outdoor unit**

- 1.List of functions
- 2. Specification
- 3. Dimensions
- 4. Wiring Diagram
- **5.Piping Diagram**
- **6.Performance Data**
- 7. Operation Range
- **8. Electric Characteristics**
- 9. Sound Levels

# 1. List of functions

### ■ Basic functions of Unit

Category	Functions	ZHBW126B0 [HU121MRB U30] ZHBW146B0 [HU141MRB U30] ZHBW166B0 [HU161MRB U30]	ZHBW128B0 [HU123MRB U30] ZHBW148B0 [HU143MRB U30] ZHBW168B0 [HU163MRB U30]
	Defrost / Deicing	0	0
	High pressure switch	0	0
	Low pressure switch	X	X
Reliability	Phase protection	X	0
	Restart delay (3-minutes)	0	0
	Self diagnosis	0	0
	Soft start	X	X
	Test function	X	X
	Low Noise Operation	0	0
	Wiring Error Check	X	X
	Peak Control	0	0
Convenience	Mode Lock	0	0
	Forced Cooling Operation (Outdoor Unit)	X	Х
	Base Pan Heater	0	0
	SLC(Smart Load Control)	X	X
Network function	Network solution(LGAP)	0	0

### Note

Accessory: Ordered and purchased separately the accessory package referring to the model name provided and install at field. Accessory line-ups varies by region, so check your local catalogue or local sales material.

<sup>1.</sup> O : Applied, X : Not applied

# 2.1 Nominal Capacity and Power Input

	Nominal Capacity and Nominal Input				ZHNW16B0 [HN1600MB NK0]	ZHNW16B0 [HN1600MB NK0]	ZHNW16B0 [HN1600MB NK0]
-	Condition	Outdoor Temp. (℃) DB / WB	Leaving Water Temp. (℃)	Outdoor Unit	ZHBW126B0 [HU121MRB U30]	ZHBW146B0 [HU141MRB U30]	ZHBW166B0 [HU161MRB U30]
	Casling	35 / 24	18	kW	12.00	14.00	16.00
	Cooling	35 / 24	7	kW	12.00	14.00	16.00
Capacity		7/6	35	kW	12.00	14.00	16.00
	Heating	7/6	55	kW	11.00	11.50	12.00
		2/1	35	kW	11.00	12.00	13.80
	Cooling	35 / 24	18	kW	2.53	3.26	4.00
	Cooling	35 / 24	7	kW	4.44	5.38	6.40
Power Input	Heating	7/6	35	kW	2.38	2.86	3.33
		7/6	55	kW	3.79	4.04	4.29
		2/1	35	kW	3.01	3.31	3.83
EER	Cooling	35 / 24	18	W/W	4.75	4.30	4.00
LEK	Cooling	35 / 24	7	W/W	2.70	2.60	2.50
		7/6	35	W/W	5.04	4.89	4.80
COP	Heating	7/6	55	W/W	2.90	2.85	2.80
		2/1	35	W/W	3.65	3.63	3.60
SCOP (Low temp. Average)*				4.60	4.57	4.55	
SCOP (High te	mp. Average)*				3.50	3.47	3.45
Rated Water Fl	low Rate (at LW	∕T 35℃)		LPM	34.5	40.3	46.0

	Floatrical Specifications				ZHNW16B0 [HN1600MB NK0]	ZHNW16B0 [HN1600MB NK0]
Electrical Specifications			Outdoor Unit	ZHBW126B0 [HU121MRB U30]	ZHBW146B0 [HU141MRB U30]	ZHBW166B0 [HU161MRB U30]
Power Supply			V, Ø, Hz	220-240, 1, 50	220-240, 1, 50	220-240, 1, 50
	Cooling	Step1	Α	23.0	24.0	25.0
Peak Control Running		Step2	Α	20.0	21.0	22.0
Current	Heating	Step1	Α	23.0	24.0	25.0
		Step2	Α	20.0	21.0	22.0
Rated Running Current	Cooling		Α	11.2	14.4	17.7
Rated Rulling Current	Heating		Α	10.6	12.7	14.8
Circuit breaker (Minimum)		Α	40.0	40.0	40.0	
Wiring Connections	Power Supply Cable (Included	Earth, H07RN-F)	mm <sup>2</sup> x cores	6.0 x 3C	6.0 x 3C	6.0 x 3C

Technical Specifications				ZHNW16B0 [HN1600MB NK0]	ZHNW16B0 [HN1600MB NK0]	ZHNW16B0 [HN1600MB NK0]
recinical specifications			Outdoor Unit	ZHBW126B0 [HU121MRB U30]	ZHBW146B0 [HU141MRB U30]	ZHBW166B0 [HU161MRB U30]
	Heating	Max.	dB(A)	67	68	69
Sound Power Level		Rated	dB(A)	61	62	63
		Low Noise	dB(A)	60	60	60
Dimensions	Unit	W×H×D	mm	950 × 1,380 × 330	950 × 1,380 × 330	950 × 1,380 × 330
Differsions	Packed Unit	W×H×D	mm	1,140 × 1,462 × 461	1,140 × 1,462 × 461	1,140 × 1,462 × 461
Weight	Unit		kg	91.7	91.7	91.7
vveignt	Packed Unit		kg	104.7	104.7	104.7

- 1. Due to our policy of innovation some specifications may be changed without notification.
- Wiring cable size must comply with the applicable local and national codes. And "Electric characteristics" chapter should be considered for electrical work and design. Especially the power cable and circuit breaker should be selected in accordance with that.
   Sound power level is measured on the rated condition in accordance with ISO 9614 standard. Therefore, these values can be increased owing to ambient conditions during operation.
- 4. Performances are based on the following conditions (It is according to EN14511):
- Interconnected Pipe Length is standard length and difference of Elevation (Outdoor ~ Indoor Unit) is 0m.
- This product contains Fluorinated greenhouse gases.
   These values are accordance with EN14825.

	Nominal Capa	city and Nominal In	put	Indoor Unit	ZHNW16B0 [HN1600MB NK0]	ZHNW16B0 [HN1600MB NK0]	ZHNW16B0 [HN1600MB NK0]
-	Condition	Outdoor Temp. (℃) DB / WB	Leaving Water Temp. (℃)	Outdoor Unit	ZHBW128B0 [HU123MRB U30]	ZHBW148B0 [HU143MRB U30]	ZHBW168B0 [HU163MRB U30]
	Casling	35 / 24	18	kW	12.00	14.00	16.00
	Cooling	35 / 24	7	kW	12.00	14.00	16.00
Capacity		7/6	35	kW	12.00	14.00	16.00
	Heating	7/6	55	kW	11.00	11.50	12.00
		2/1	35	kW	11.00	12.00	13.80
	Cooling	35 / 24	18	kW	2.53	3.26	4.00
	Cooling	35 / 24	7	kW	4.44	5.38	6.40
Power Input	Heating	7/6	35	kW	2.38	2.86	3.33
		7/6	55	kW	3.79	4.04	4.29
		2/1	35	kW	3.01	3.31	3.83
EER	Caaling	35 / 24	18	W/W	4.75	4.30	4.00
EER	Cooling	35 / 24	7	W/W	2.70	2.60	2.50
		7/6	35	W/W	5.04	4.89	4.80
COP	Heating	7/6	55	W/W	2.90	2.85	2.80
		2/1	35	W/W	3.65	3.63	3.60
SCOP (Low temp. Average)*					4.60	4.57	4.55
SCOP (High te	mp. Average)*				3.50	3.47	3.45
Rated Water F	low Rate (at LW	∕T 35℃)		LPM	34.5	40.3	46.0

				ZHNW16B0 [HN1600MB NK0]	ZHNW16B0 [HN1600MB NK0]	ZHNW16B0 [HN1600MB NK0]
Electrical Specifications			Outdoor Unit	ZHBW128B0 [HU123MRB U30]	ZHBW148B0 [HU143MRB U30]	ZHBW168B0 [HU163MRB U30]
Power Supply			V, Ø, Hz	380-415, 3, 50	380-415, 3, 50	380-415, 3, 50
	Cooling	Step1	Α	8.0	9.0	10.0
Peak Control Running	Cooling	Step2	Α	6.0	7.0	8.0
Current	Heating	Step1	Α	8.0	9.0	10.0
		Step2	Α	6.0	7.0	8.0
Rated Running	Cooling	<u>.</u>	Α	3.7	4.8	5.9
Current	Heating		Α	3.5	4.2	4.9
Circuit breaker (Minimum)		Α	16.0	16.0	16.0	
Wiring Connections Power Supply Cable (Included Earth, H07RN-F)		mm <sup>2</sup> x cores	2.5 x 5C	2.5 x 5C	2.5 x 5C	

Technical Specifications				ZHNW16B0 [HN1600MB NK0]	ZHNW16B0 [HN1600MB NK0]	ZHNW16B0 [HN1600MB NK0]
recimical Speci	recinical Specifications			ZHBW128B0 [HU123MRB U30]	ZHBW148B0 [HU143MRB U30]	ZHBW168B0 [HU163MRB U30]
		Max.	dB(A)	67	68	69
Sound Power Level	Heating	Rated	dB(A)	61	62	63
		Low noise	dB(A)	60	60	60
Dimensions	Unit	W×H×D	mm	950 × 1,380 × 330	950 × 1,380 × 330	950 × 1,380 × 330
Dimensions	Packed Unit	W×H×D	mm	1,140 × 1,462 × 461	1,140 × 1,462 × 461	1,140 × 1,462 × 461
Maight	Unit		kg	91.7	91.7	91.7
Weight	Packed Unit		kg	104.7	104.7	104.7

- Due to our policy of innovation some specifications may be changed without notification.
   Wiring cable size must comply with the applicable local and national codes. And "Electric characteristics" chapter should be considered for electrical work and design. Especially the power cable and circuit breaker should be selected in accordance with that.
   Sound power level is measured on the rated condition in accordance with ISO 9614 standard. Therefore, these values can be increased owing to ambient conditions during operation.

- Performances are based on the following conditions (It is according to EN14511):
   Interconnected Pipe Length is standard length and difference of Elevation (Outdoor ~ Indoor Unit) is 0m.
- This product contains Fluorinated greenhouse gases.
   These values are accordance with EN14825.

### 2.2 Outdoor unit


	Outdoor Units	i		ZHBW126B0 [HU121MRB U30]	ZHBW146B0 [HU141MRB U30]	ZHBW166B0 [HU161MRB U30]				
Operation Range	Cooling	Min. ~ Max.	°C DB	5 ~ 48	5 ~ 48	5 ~ 48				
(Outdoor Temp.)	Heating	Min. ~ Max.	°C DB	-25 ~ 35	-25 ~ 35	-25 ~ 35				
	Туре	-	-		Hermetic Sealed Scroll					
Compressor	Model		Model × No.		RJB036MAA × 1					
Compressor	Motor Type		-	BLDC	BLDC	BLDC				
	Displacement		cm³/Rev.	31.6	31.6	31.6				
	Туре		-	R32	R32	R32				
	GWP (Global \ Potential)	Varming	-	675.0	675.0	675.0				
Refrigerant	Precharged Ar	nount	g	2,100	2,100	2,100				
	t-CO2 eq.		-	1.418	1.418	1.418				
	Control		-	Electronic Expansion Valve	Electronic Expansion Valve	Electronic Expansion Valve				
D-filmonat Oil	Туре		-	FW68D	FW68D	FW68D				
Refrigerant Oil	Charged Volur	ne	cc × No.	1,100	1,100	1,100				
	Туре		-	Fin & Tube	Fin & Tube	Fin & Tube				
	Quantity		-	2	2	2				
Heat Exchanger		Row	EA	32	32	32				
	Specification	Column	EA	2	2	2				
		FPI	EA	14	14	14				
	Туре	-	-	Brazed Plate HEX	Brazed Plate HEX	Brazed Plate HEX				
Plate Heat Exchanger	Quantity		-	1	1	1				
	Number of Pla	te	EA	76	76	76				
Piping Connections	Water Circuit	Inlet	mm(Inch)	Male PT 25.4(1)	Male PT 25.4(1)	Male PT 25.4(1)				
Piping Connections	water Circuit	Outlet	mm(Inch)	Male PT 25.4(1)	Male PT 25.4(1)	Male PT 25.4(1)				
Ot	Mesh size	-	-	30 mesh	30 mesh	30 mesh				
Strainer	Material		-	Stainless Steel	Stainless Steel	Stainless Steel				
Fan	Туре		-	Propeller	Propeller	Propeller				
ran	Air Flow Rate	Rated	m³/min × No.	76.3 × 2	76.3 × 2	76.3 × 2				
For Motor	Туре		-	BLDC	BLDC	BLDC				
Fan Motor	Output		W × No.	124 × 2	124 × 2	124 × 2				

- $1. \ \, \text{Due to our policy of innovation some specifications may be changed without notification}.$
- Wiring cable size must comply with the applicable local and national codes. And "Electric characteristics" chapter should be considered for electrical work and design.
  Especially the power cable and circuit breaker should be selected in accordance with that.
- Sound power level is measured on the rated condition in according with ISO 9614 standard. Therefore, these values can be increased owing to ambient conditions during operation.
- 4. Performances are based on the following conditions (It is according to EN14511):
  - Interconnected Pipe Length is standard length and difference of Elevation (Outdoor ~ Indoor Unit) is 0m.
- 5. This product contains Fluorinated greenhouse gases.
- 6. Strainer is accessory provided with the outdoor unit.

	Outdoor Units	i		ZHBW128B0 [HU123MRB U30]	ZHBW148B0 [HU143MRB U30]	ZHBW168B0 [HU163MRB U30]				
Operation Range	Cooling	Min. ~ Max.	°C DB	5 ~ 48	5 ~ 48	5 ~ 48				
(Outdoor Temp.)	Heating	Min. ~ Max.	°C DB	-25 ~ 35	-25 ~ 35	-25 ~ 35				
	Туре	•	-		Hermetic Sealed Scroll					
Campragar	Model		Model × No.		RJB036MAA × 1					
Compressor	Motor Type		-	BLDC	BLDC	BLDC				
	Displacement		cm³/Rev.	31.6	31.6	31.6				
	Туре		-	R32	R32	R32				
	GWP (Global \ Potential)	Varming	-	675.0	675.0	675.0				
Refrigerant	Precharged Ar	nount	g	2,100	2,100	2,100				
	t-CO2 eq.		-	1.418	1.418	1.418				
	Control		-	Electronic Expansion Valve	Electronic Expansion Valve	Electronic Expansion Valve				
D-frit Oil	Туре		-	FW68D	FW68D	FW68D				
Refrigerant Oil	Charged Volur	ne	cc × No.	1,100	1,100	1,100				
	Туре		-	Fin & Tube	Fin & Tube	Fin & Tube				
	Quantity		-	2	2	2				
Heat Exchanger		Row	EA	32	32	32				
	Specification	Column	EA	2	2	2				
		FPI	EA	14	14	14				
	Туре	•	-	Brazed Plate HEX	Brazed Plate HEX	Brazed Plate HEX				
Plate Heat Exchanger	Quantity		-	1	1	1				
	Number of Pla	te	EA	76	76	76				
Dining Connections	Water Circuit	Inlet	mm(Inch)	Male PT 25.4(1)	Male PT 25.4(1)	Male PT 25.4(1)				
Piping Connections	water Circuit	Outlet	mm(Inch)	Male PT 25.4(1)	Male PT 25.4(1)	Male PT 25.4(1)				
Strainer	Mesh size	•	-	30 mesh	30 mesh	30 mesh				
Strattlel	Material		-	Stainless Steel	Stainless Steel	Stainless Steel				
Fan	Туре		-	Propeller	Propeller	Propeller				
ran	Air Flow Rate	Rated	m³/min × No.	76.3 × 2	76.3 × 2	76.3 × 2				
Fan Motor	Туре		-	BLDC	BLDC	BLDC				
Fall MUM	Output		W × No.	124 × 2	124 × 2	124 × 2				


- $1. \ \, \text{Due to our policy of innovation some specifications may be changed without notification}.$
- 2. Wiring cable size must comply with the applicable local and national codes. And "Electric characteristics" chapter should be considered for electrical work and design. Especially the power cable and circuit breaker should be selected in accordance with that.
- 3. Sound power level is measured on the rated condition in according with ISO 9614 standard. Therefore, these values can be increased owing to ambient conditions during operation.
- Performances are based on the following conditions (It is according to EN14511):
   Interconnected Pipe Length is standard length and difference of Elevation (Outdoor ~ Indoor Unit) is 0m.
- 5. This product contains Fluorinated greenhouse gases.

◆ ZHBW126B0 [HU121MRB U30], ZHBW146B0 [HU141MRB U30], ZHBW166B0 [HU161MRB U30], ZHBW128B0 [HU123MRB U30], ZHBW148B0 [HU143MRB U30], ZHBW168B0 [HU163MRB U30]

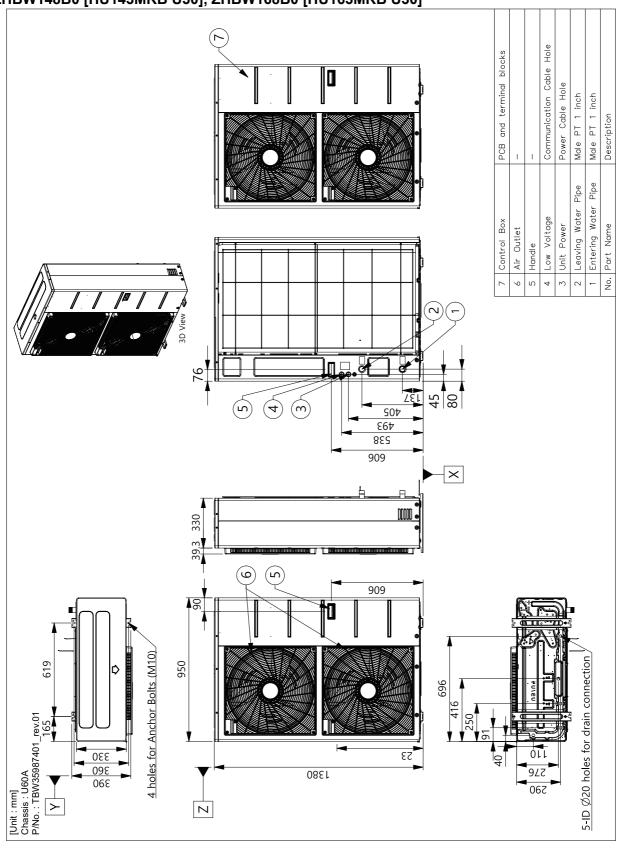


# 4. Wiring Diagram

**◆** ZHBW126B0 [HU121MRB U30], ZHBW146B0 [HU141MRB U30], ZHBW166B0 [HU161MRB U30]

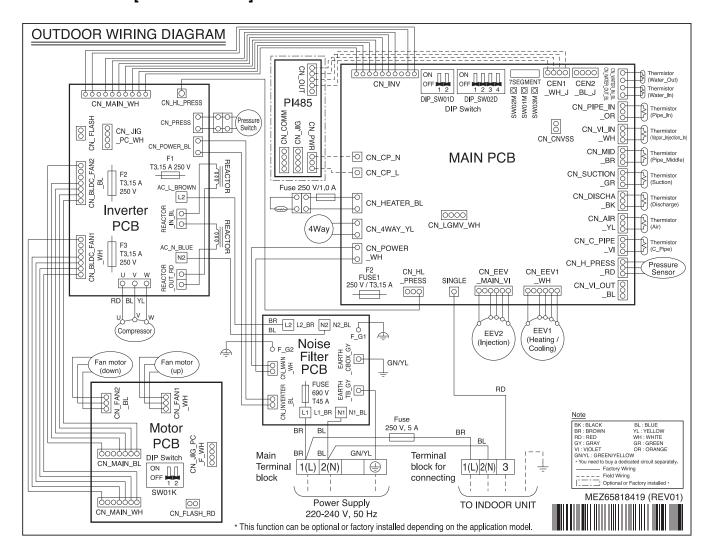


# 4. Wiring Diagram

◆ ZHBW128B0 [HU123MRB U30], ZHBW148B0 [HU143MRB U30], ZHBW168B0 [HU163MRB U30]

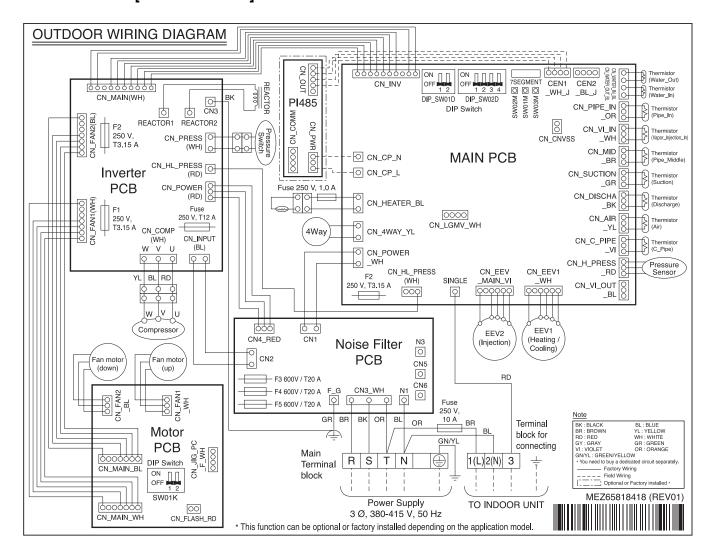

# 5. Piping Diagram

◆ ZHBW126B0 [HU121MRB U30], ZHBW146B0 [HU141MRB U30], ZHBW166B0 [HU161MRB U30], ZHBW128B0 [HU123MRB U30], ZHBW148B0 [HU143MRB U30], ZHBW168B0 [HU163MRB U30]

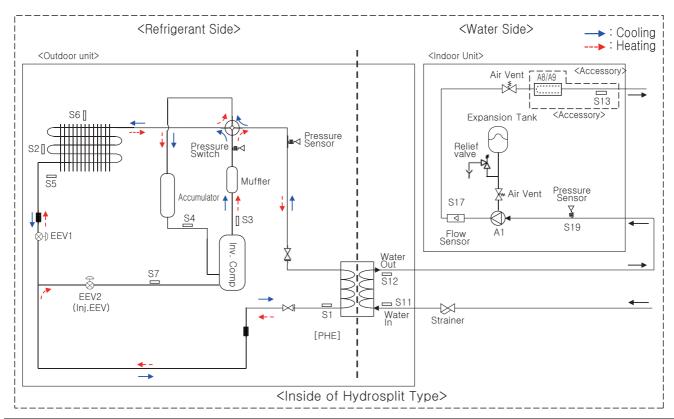

			•
Category	Symbol	Meaning	PCB Connector
	S1	PHEX liquid temperature sensor	CN_PIPE_IN
	S2	Outdoor-HEX middle temperature sensor	CN_MID
	S3	Compressor-discharge pipe temperature sensor	CN_DISCHARGE
	S4	Compressor-suction pipe temperature sensor	CN_SUCTION
Refrigerant side	S5	Outdoor-HEX temperature sensor	CN_C_PIPE
	S6	Outdoor air temperature sensor	CN_AIR
	S7	Compressor-injection pipe temperature sensor	CN_VI_IN
	EEV1	Electronic Expansion Valve (Heating/Cooling)	CN_EEV1
	EEV2	Electronic Expansion Valve (Injection)	CN_EEV_MAIN
	S12	Outlet water temperature sensor	CN_WATER_OUT
	S11	Inlet water temperature sensor	CN_WATER_IN
	S13	Backup heater outlet sensor	CN_TH3
Motor Side	S17	Flow sensor	CN_F_SENSOR
Water Side	S19	Water pressure sensor	CN_H20_PRESS
	A1	Main Water Pump	CN_PUMP_A1 CN_MOTOR1
	A8	Electric backup heater (1Ø, Optional accessory)	CN_HEATER_PCB
	A9	Electric backup heater (3Ø, Optional accessory)	HEATER1

# 6. Performance Data

# **6.1 Cooling Operation**

### ■ Maximum Cooling Capacity

### ◆ ZHBW126B0 [HU121MRB U30] / ZHBW128B0 [HU123MRB U30]

Outdoor		Water flow rate 34.5 LPM														
Temperature	LWT 7 °C		LWT 10 °C		LWT 13 °C		LWT 15 °C		LWT 18 °C		LWT	20 °C	LWT 22 °C			
[°C DB]	TC	EER	TC	EER	TC	EER	TC	EER	TC	EER	TC	EER	TC	EER		
10	12.00	5.19	12.00	5.61	12.00	6.08	12.00	6.44	12.00	7.04	12.00	7.50	12.00	8.01		
20	12.00	5.00	12.00	5.60	12.00	6.36	12.00	6.99	12.00	8.17	12.00	9.19	12.00	10.49		
30	12.00	3.89	12.00	4.38	12.00	5.02	12.00	5.55	12.00	6.57	12.00	7.49	12.00	8.68		
35	12.00	3.29	12.00	3.68	12.00	4.19	12.00	4.60	12.00	5.39	12.00	6.08	12.00	6.96		
40	11.75	2.69	12.00	3.06	12.00	3.44	12.00	3.75	12.00	4.32	12.00	4.81	12.00	5.42		
45	11.50	2.20	12.00	2.53	12.00	2.81	12.00	3.04	12.00	3.45	12.00	3.80	12.00	4.21		

### ◆ ZHBW146B0 [HU141MRB U30] / ZHBW148B0 [HU143MRB U30]

Outdoor						Wa	ter flow r	ate 40.3 L	PM.					
Temperature	LWT 7 °C		LWT 10 °C		LWT 13 °C		LWT 15 °C		LWT 18 °C		LWT 20 °C		LWT 22 °C	
[°C DB]	TC	EER	TC	EER	TC	EER	TC	EER	TC	EER	TC	EER	TC	EER
10	14.00	4.82	14.00	5.21	14.00	5.62	14.00	5.91	14.00	6.36	14.00	6.68	14.00	7.00
20	14.00	4.67	14.00	5.24	14.00	5.93	14.00	6.47	14.00	7.44	14.00	8.22	14.00	9.13
30	14.00	3.66	14.00	4.14	14.00	4.73	14.00	5.21	14.00	6.10	14.00	6.85	14.00	7.78
35	14.00	3.10	14.00	3.49	14.00	3.96	14.00	4.34	14.00	5.04	14.00	5.63	14.00	6.35
40	13.75	2.56	14.00	2.90	14.00	3.26	14.00	3.55	14.00	4.07	14.00	4.49	14.00	5.01
45	13.50	2.10	14.00	2.40	14.00	2.67	14.00	2.89	14.00	3.26	14.00	3.57	14.00	3.92

### ◆ ZHBW166B0 [HU161MRB U30] / ZHBW168B0 [HU163MRB U30]

Outdoor		Water flow rate 46.0 LPM														
Temperature	LWT 7 °C		LWT 10 °C		LWT 13 °C		LWT	LWT 15 °C		18 °C	LWT 20 °C		LWT 22 °C			
[°C DB]	TC	EER	TC	EER	TC	EER	TC	EER	TC	EER	TC	EER	TC	EER		
10	16.00	4.49	16.00	4.92	16.00	5.34	16.00	5.60	16.00	5.94	16.00	6.12	16.00	6.25		
20	16.00	4.11	16.00	4.65	16.00	5.26	16.00	5.69	16.00	6.39	16.00	6.86	16.00	7.34		
30	16.00	3.26	16.00	3.71	16.00	4.24	16.00	4.64	16.00	5.33	16.00	5.85	16.00	6.43		
35	16.00	2.82	16.00	3.19	16.00	3.64	16.00	3.97	16.00	4.56	16.00	5.01	16.00	5.51		
40	15.75	2.38	16.00	2.72	16.00	3.08	16.00	3.35	16.00	3.82	16.00	4.18	16.00	4.59		
45	15.50	2.01	16.00	2.31	16.00	2.60	16.00	2.81	16.00	3.18	16.00	3.46	16.00	3.77		

- 1. DB : Dry bulb temperature(°C), LWT : Leaving water temperature(°C), LPM : Liter per minute ( $\ell$ /min)
- $2. \ \ TC: Total\ capacity(kW),\ EER: Energy\ efficiency\ ratio(kW/kW),\ COP: Coefficient\ of\ performance\ (kW/kW)$
- 3. Direct interpolation is permissible. Do not extrapolate.
- 4. Measuring procedure follows EN14511.
  - Rated values are based on standard conditions, and it can be found on specifications.
  - Above table values may not be matched according to installation condition. Except for rated value, the performance is not guaranteed.
  - In accordance with the test standard(or nations), the results may vary.
- 5. The Shaded areas are not guaranteed continuous operation.

### 6. Performance Data

# 6.2 Heating Operation

### ■ Maximum Heating Capacity (Include defrost effect)

### ◆ ZHBW126B0 [HU121MRB U30] / ZHBW128B0 [HU123MRB U30]

Outdoor			Wat	er flow r	ate 34.5 l	-PM			Wat	er flow r	ate 21.6L	-PM	Water flow rate 17.3 LPM			
Temperature	LWT	30 °C	LWT	35 °C	LWT 40 °C LWT 45 °C			LWT 50 °C LWT 55 °C			LWT 60 °C		LWT	65 °C		
[°C DB]	TC	COP	TC	COP	TC	COP	TC	COP	TC	COP	TC	COP	TC	COP	TC	COP
-25	9.66	2.13	8.85	1.85	8.42	1.58	8.29	1.47								
-20	10.13	2.34	10.00	2.13	9.88	1.91	9.75	1.70	9.63	1.49						
-15	11.50	2.55	11.50	2.40	11.50	2.25	11.50	2.10	11.50	1.95	11.50	1.80				
-7	12.00	3.16	12.00	3.00	12.00	2.85	12.00	2.70	12.00	2.55	12.00	2.40	12.00	2.25		
-4	12.00	3.58	12.00	3.26	12.00	2.97	12.00	2.78	12.00	2.59	12.00	2.39	12.00	2.20	12.00	2.05
-2	12.00	3.80	12.00	3.45	12.00	3.14	12.00	2.90	12.00	2.77	12.00	2.53	12.00	2.34	12.00	2.15
2	12.00	4.42	12.00	3.86	12.00	3.46	12.00	3.16	12.00	2.93	12.00	2.73	12.00	2.54	12.00	2.35
7	12.00	5.25	12.00	5.04	12.00	4.28	12.00	3.93	12.00	3.60	12.00	3.10	12.00	2.82	12.00	2.60
10	12.00	5.58	12.00	5.29	12.00	4.62	12.00	4.17	12.00	3.83	12.00	3.46	12.00	3.10	12.00	2.75
15	12.00	6.49	12.00	5.89	12.00	5.26	12.00	4.90	12.00	4.35	12.00	3.87	12.00	3.45	12.00	3.09
18	12.00	6.94	12.00	6.30	12.00	5.60	12.00	5.33	12.00	4.71	12.00	4.18	12.00	3.72	12.00	3.32
20	12.00	7.23	12.00	6.56	12.00	5.93	12.00	5.38	12.00	4.96	12.00	4.38	12.00	3.89	12.00	3.47
35	12.00	8.50	12.00	7.87	12.00	7.22	12.00	6.90	12.00	6.20	12.00	5.25	12.00	4.94	12.00	4.54

### ◆ ZHBW146B0 [HU141MRB U30] / ZHBW148B0 [HU143MRB U30]

		-			-			-			-					
Outdoor			Wat	er flow r	ate 40.3	LPM			Wat	er flow r	ate 25.2 l	LPM	Wat	er flow r	ate 20.1L	-PM
Temperature	LWT	LWT 30 °C		LWT 35 °C L		LWT 40 °C		45 °C	LWT	50 °C	LWT 55 °C		LWT	60 °C	LWT 65 °C	
[°C DB]	TC	COP	TC	COP	TC	COP	TC	COP	TC	COP	TC	COP	TC	COP	TC	COP
-25	10.04	2.08	9.21	1.80	8.76	1.53	8.62	1.41								
-20	11.82	2.26	11.25	2.05	10.95	1.84	10.67	1.63	10.59	1.55						
-15	12.52	2.57	12.90	2.30	13.26	2.15	12.88	2.00	12.81	1.85	12.63	1.72				
-7	14.00	3.12	14.00	2.95	14.00	2.79	14.00	2.63	14.00	2.46	14.00	2.30	14.00	2.14		
-4	14.00	3.47	14.00	3.16	14.00	2.90	14.00	2.70	14.00	2.50	14.00	2.35	14.00	2.10	14.00	1.96
-2	14.00	3.68	14.00	3.34	14.00	3.04	14.00	2.82	14.00	2.68	14.00	2.43	14.00	2.24	14.00	2.05
2	14.00	4.26	14.00	3.72	14.00	3.34	14.00	3.04	14.00	2.83	14.00	2.63	14.00	2.44	14.00	2.25
7	14.00	5.09	14.00	4.89	14.00	4.17	14.00	3.85	14.00	3.50	14.00	3.10	14.00	2.82	14.00	2.51
10	14.00	5.42	14.00	4.94	14.00	4.48	14.00	4.17	14.00	3.83	14.00	3.38	14.00	3.03	14.00	2.73
15	14.00	6.30	14.00	5.72	14.00	5.13	14.00	4.90	14.00	4.35	14.00	3.87	14.00	3.45	14.00	3.09
18	14.00	6.74	14.00	6.12	14.00	5.43	14.00	5.33	14.00	4.71	14.00	4.18	14.00	3.72	14.00	3.32
20	14.00	7.02	14.00	6.37	14.00	5.76	14.00	5.38	14.00	4.96	14.00	4.38	14.00	3.89	14.00	3.47
35	14.00	8.24	14.00	7.64	14.00	7.00	14.00	6.90	14.00	6.20	14.00	5.25	14.00	4.94	14.00	4.54

### ◆ ZHBW166B0 [HU161MRB U30] / ZHBW168B0 [HU163MRB U30]

Outdoor			Wat	er flow r	ate 46.0 I	_PM			Wat	er flow r	ate 28.8	LPM	Wat	er flow r	ate 23.0 l	LPM
Temperature	LWT	LWT 30 °C		LWT 35 °C		LWT 40 °C		45 °C	LWT	50 °C	LWT	55 °C	LWT	60 °C	LWT	65 °C
[°C DB]	TC	COP	TC	COP	TC	COP	TC	COP	TC	COP	TC	COP	TC	COP	TC	COP
-25	10.98	1.96	10.00	1.70	9.50	1.44	9.33	1.36								
-20	13.43	2.34	12.54	2.18	12.03	2.08	11.78	1.60	11.47	1.56						
-15	14.23	2.70	14.39	2.26	14.50	2.17	13.95	1.92	13.86	1.78	13.12	1.65				
-7	16.00	3.05	16.00	2.80	16.00	2.64	16.00	2.48	16.00	2.31	16.00	2.15	16.00	1.99		
-4	16.00	3.36	16.00	3.07	16.00	2.80	16.00	2.59	16.00	2.40	16.00	2.20	16.00	2.05	16.00	1.82
-2	16.00	3.51	16.00	3.19	16.00	2.91	16.00	2.76	16.00	2.51	16.00	2.30	16.00	2.10	16.00	1.92
2	16.00	3.76	16.00	3.41	16.00	3.14	16.00	3.13	16.00	2.83	16.00	2.56	16.00	2.33	16.00	2.12
7	16.00	5.13	16.00	4.80	16.00	4.09	16.00	3.72	16.00	3.38	16.00	2.96	16.00	2.67	16.00	2.41
10	16.00	5.71	16.00	5.08	16.00	4.51	16.00	4.02	16.00	3.60	16.00	3.24	16.00	2.89	16.00	2.60
15	16.00	6.76	16.00	5.97	16.00	5.28	16.00	4.67	16.00	4.16	16.00	3.69	16.00	3.29	16.00	2.95
18	16.00	7.38	16.00	6.52	16.00	5.75	16.00	5.07	16.00	4.49	16.00	3.98	16.00	3.54	16.00	3.16
20	16.00	7.78	16.00	6.87	16.00	6.06	16.00	5.34	16.00	4.72	16.00	4.17	16.00	3.71	16.00	3.31
35	16.00	8.62	16.00	7.98	16.00	7.28	16.00	6.57	16.00	5.90	16.00	5.28	16.00	4.71	16.00	3.81


- 1. DB : Dry bulb temperature(°C), LWT : Leaving water temperature(°C), LPM : Liter per minute ( $\ell$ /min)
- 2. TC : Total capacity(kW), EER: Energy efficiency ratio(kW/kW), COP : Coefficient of performance (kW/kW)
- 3. Direct interpolation is permissible. Do not extrapolate.
- 4. Measuring procedure follows EN14511.
  - Rated values are based on standard conditions, and it can be found on specifications.
  - Above table values may not be matched according to installation condition. Except for rated value, the performance is not guaranteed.
  - In accordance with the test standard(or nations), the results may vary
- 5. The Shaded areas are not guaranteed continuous operation.

# 7. Operation Range

### ■ Cooling


Cooling

(Settings: Outlet temp. control / Fan coil unit used)

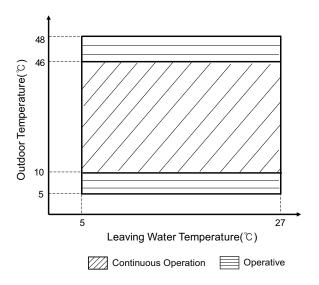


Cooling

(Settings: Inlet temp. control / Fan coil unit used)

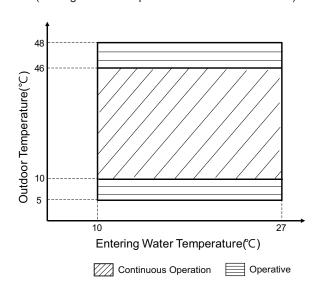


Cooling

(Settings: Outlet temp. control / Fan coil unit not used)

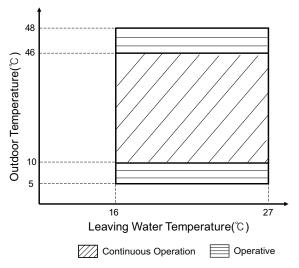

Cooling


(Settings: Inlet temp. control / Fan coil unit not used)

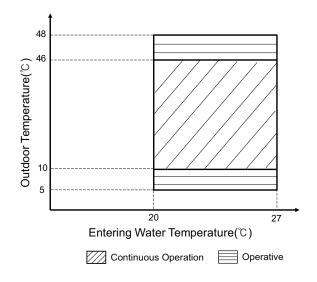


- Continuous Operation: It is possible to operate continuously, but capacity is not guaranteed.
- · Operative : It is not guaranteed continuous operation.

# 7. Operation Range

### Heating

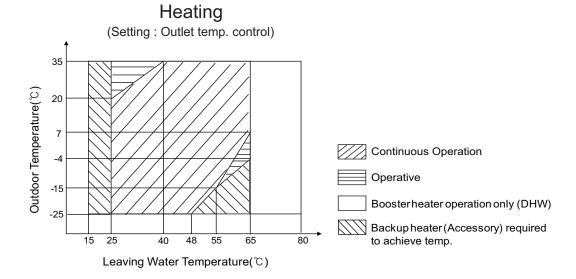

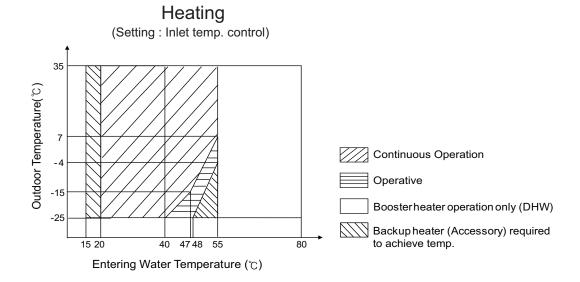

- Continuous Operation : It is possible to operate continuously, but capacity is not guaranteed.
- Operative : It is not guaranteed continuous operation.
- DHW Heat pump operation : max. 58 °C
- DHW operation with booster heater : max. 80 °C

### 8. Electric characteristics

### ■ Wiring of Main Power Supply and Equipment Capacity

- 1. Use a separate power supply for the Outdoor Unit and Backup Heater.
- 2. Bear in mind ambient conditions (ambient temperature, direct sunlight, rain liquid, etc.) when proceeding with the wiring and connections
- 3. The wire size is the minimum value for metal conduit wiring. The power cord size should be 1 rank thicker taking into account the line voltage drops. Make sure the power-supply voltage does not drop more than 10%.
- 4. Specific wiring requirements should adhere to the wiring regulations of the region.
- 5. Power supply cords of parts of appliances for outdoor use should not be lighter than polychloroprene sheathed flexible cord.
- 6. Don't install an individual switch or electrical outlet to disconnect the indoor unit separately from the power supply.

# Λ

### WARNING

- Follow ordinance of your governmental organization for technical standard related to electrical equipment, wiring regulations and guidance of each electric power company.
- Make sure to use specified wires for connections so that no external force is imparted to terminal connections. If connections are not fixed firmly, it may cause heating or fire.
- Make sure to use the appropriate type of overcurrent protection switch. Note that generated overcurrent may include some amount of direct current.



### **CAUTION**


- All installation site must require attachment of an earth leakage breaker. If no earth leakage breaker is installed, it may cause an electric shock.
- Do not use anything other than breaker and fuse with correct capacity. Using fuse and wire or copper wire with too large capacity may cause a malfunction of unit or fire.

## 8. Electric characteristics


Model				
Indoor Unit	Outdoor Unit	Phase / Volts / Hz		
	ZHBW126B0 [HU121MRB U30]			
	ZHBW146B0 [HU141MRB U30]	1Ø / 220-240V / 50Hz		
ZHNW16B0 [HN1600MB NK0]	ZHBW166B0 [HU161MRB U30]			
ZHIWW 1080 [HIN 1000INIB INKO]	ZHBW128B0 [HU123MRB U30]			
	ZHBW148B0 [HU143MRB U30]	3 Ø / 380-415 V /50Hz		
	ZHBW168B0 [HU163MRB U30]			

DHW Boost Heater	Power Supply for	DHW Boost Heater
Driv Boost neater	Phase / Volts / Hz	Capacity (kW)
Integral part of DHW tanks [OSHW-x00F(D)]	1 Ø / 220-240 V / 50 Hz	2.4


#### [Power Supply for Heat Pump]

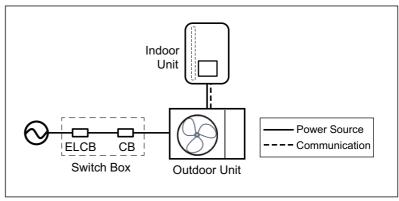

[Power Supply for Backup Heater]

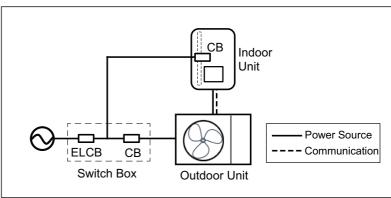

[Power Supply for DHW Boost Heater]

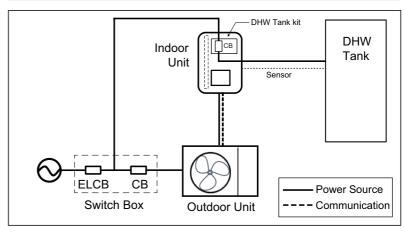

#### Note

- Voltage supplied to the unit terminals should be within the minimum and maximum range.
- 2. Maximum allowable voltage unbalance between phase is 2%
- 3. All installation site must require attachment of an earth leakage breaker. [circuit breaker type is ELCB(Earth Leakage Circuit Breaker)].

## 9. Sound levels


## 9.1 Sound power level

#### Note


- 1. Data is valid at diffuse field condition.
- 2. Reference acoustic intensity 0dB = 10E-6µW/m<sup>2</sup>
- 3. Sound power level is measured on the rated condition in the reverberation rooms. Refer to the Model Specifications for nominal conditions(Power source and Ambient temperature, etc)
- 4. Sound levels can be increased in accordance with installation and operating conditions.
- 5. Sound level will vary depending on a range of factors such as the construction (acoustic absorption coefficient) of particular installed place in which the equipment in installed.
- 6. Sound power level is measured on the rated condition in accordance with ISO 9614 standard. Therefore, these values can be increased owing to ambient conditions during operation.

	So	und Power Level [dB	(A)]		
Model	Heating				
	Rated	Low Noise	Max		
ZHBW126B0 [HU121MRB U30] ZHBW128B0 [HU123MRB U30]	61	60	67		
ZHBW146B0 [HU141MRB U30] ZHBW148B0 [HU143MRB U30]	62	60	68		
ZHBW166B0 [HU161MRB U30] ZHBW168B0 [HU163MRB U30]	63	60	69		


#### ZHBW126B0 [HU121MRB U30] ZHBW128B0 [HU123MRB U30]

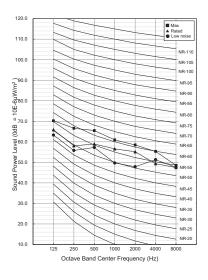

#### ZHBW146B0 [HU141MRB U30] ZHBW148B0 [HU143MRB U30]

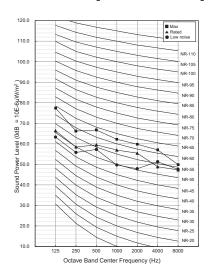

#### ZHBW166B0 [HU161MRB U30] ZHBW168B0 [HU163MRB U30]

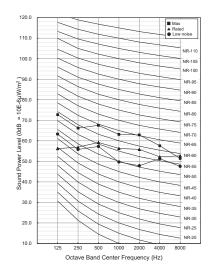



# Design and installation

- 1.Refrigerant R32
- 2. Select the Best Location
- 3.Installation Space
- **4.Water Control**
- 5. Dip Switch Setting

# 1. Refrigerant R32

The refrigerant R32 has the higher efficiency and more friendly for environment in comparison with R410A. It has a lower GWP (Global Warming Potential) value, and higher efficiency than R410A. The Ozone Depletion Potential (ODP) of R32 is 0, and Global Warming Potential(GWP) is 675.

Refrigerant piping consists of copper/steel pipes, joints, and other fittings. All components must be selected and installed in conformity with the standards pertaining to the Refrigeration Safety Regulation. Same piping as for R410A can be used.

## $\Lambda$

#### WARNING

- This product contains fluorinated greenhouse gases (Refrigerant type: R32). Do NOT emit refrigerant gases into the atmosphere.
- The refrigerant R32 is Slightly Flammable gas. But it does not leak normally. If the refrigerant leaks in the installed place and contact with burning energy, it may cause fire, or a harmful gas.
- If there are some leak, turn off any combustible devices, ventilate the installed place, and contact the dealer from which you purchased the unit. Do not use the unit until the refrigerant leaked is repaired.
- Only use R32 as refrigerant. Other substances may cause explosions and accidents.

## A

#### CAUTION

- The wall thickness of the piping should comply with the relevant local and national regulations for the designed pressure.
- For high-pressure refrigerant, any unapproved pipe must not be used.
- Do not heat pipes more than necessary to prevent them from softening.

## 2. Select the Best Location


Select space for installing unit, which will meet the following conditions:

- · No direct thermal radiation from other heat sources
- · No possibility of annoying neighbors by noise from unit
- · No exposition to strong wind
- · With strength which bears weight of unit
- With space for air passage and service work shown next
- Because of the possibility of fire, do not install unit to the space where generation, inflow, stagnation, and leakage of combustible gas is expected.
- Avoid unit installation in a place where acidic solution and spray (sulfur) are often used.
- Do not use unit under any special environment where oil, steam and sulfuric gas exist.
- · It is recommended to fence round the unit in order to prevent any person or animal from accessing the unit.
- · If installation site is area of heavy snowfall, then the following directions should be observed.
  - Make the foundation as high as possible.
  - Fit a snow protection hood.
- Select installation location considering following conditions to avoid bad condition when additionally performing defrost operation.
  - 1. Install the unit at a place well ventilated and having a lot of sunshine in case of installing the product at a place with a high humidity in winter (near beach, coast, lake, etc).
  - 2. Performance of heating will be reduced and pre-heat time of the unit may be lengthened in case of installing the unit in winter at following location:
    - 1) Shade position with a narrow space
    - 2) Location with much humidity around.
    - 3) Location where liquid gathers since the floor is not even.
- When installing the unit in a place that is constantly exposed to a strong wind like a coast or on a high story of a building, secure a normal fan operation by using a duct or a wind shield.
  - 1. Install the unit so that its discharge port faces to the wall of the building. Keep a distance 300 mm or more between the unit and the wall surface.
  - 2. Supposing the wind direction during the operation season of the unit, install the unit so that the discharge port is set at right angle to the wind direction.

## 3. Installation Space

## 3.1 Clearance around outdoor units

- If an awning is built over the unit to prevent direct sunlight or rain exposure, make sure that heat radiation from the condenser is not restricted.
- Ensure that the spaces indicated by arrows around front, back and side of the unit
- Do not place animals and plants in the path of the warm or cold air.
- Take the unit weight into account and select a place where noise and vibration are minimum.
- Select a place so that the air flow and noise from the unit do not disturb neighbors.
- Place that can sufficiently endure the weight and vibration of the outdoor unit and where even installation is possible.
- Place that has no direct influence of snow or rain
- Place with no danger of extreme snowfall or icicle drop.
- Place without weak floor or base such as decrepit part of the building or with a lot of snow accumulation.

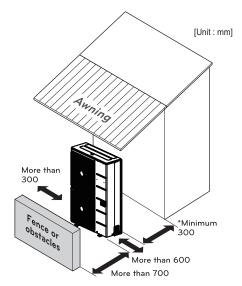

\* Please secure the space, considering field installation of the shut-off valve and strainer.

## 4. Water Control

## 4.1 Water quality

Water quality should be complied with EN 98/83 EC Directives.

# $\Lambda$

#### **CAUTION**

- If the product is installed at existing hydraulic water loop, it is important to clean hydraulic pipes to remove sludge and scale.
- · Installing sludge strainer in the water loop is very important to prevent performance degrade.
- · Chemical treatment to prevent rust should be performed by installer.
- It is strongly recommended to install an additional filter on the heating water circuit. Especially to remove metallic
  particles from the heating piping, it is advised to use a magnetic or cyclone filter, which can remove small
  particles. Small particles may damage the unit and will NOT be removed by the standard filter of the heat pump
  system.
- Water quality check should be implemented before completing the installation of system.
   Detailed guide can be found in the table as below.

Water contents	Value				
pH	7.5~9.0				
Conductivity		10~500	) uS/cm		
TDS (Total dissolved solids)		8~400	) ppm		
Alkalinity (HCO <sub>3</sub> -)		60~300	(mg/L)		
Total hardness		4 ~ 8.			
		71.4 ~ 15	1.7 (mg/L)		
Iron (Fe)	≤ 0.2 (mg/L)				
Sulphate (SO <sub>4</sub> <sup>2-</sup> )	≤ 100 (mg/L)				
Nitrite (NO <sub>3</sub> -)	≤ 100 (mg/L)				
Free chlorine (Cl <sub>2</sub> )	≤ 1 (mg/L)				
	ppm		STS316	STS304	
		15℃	3,000	180	
	m117	40℃	500	50	
	pH7	60℃	200	30	
Chlorides (Cl⁻)		80℃	125	20	
		15℃	18,000	700	
	рН9	40℃	2,600	250	
		60℃	1,000	170	
		80℃	550	130	

## 4. Water Control

## 4.2 Frost protection

In areas of the country where entering water temperatures drop below 0 °C, the water pipe must be protected by using an approved antifreeze solution. Consult your heat pump unit supplier for locally approved solutions in your area.

Calculate the approximate volume of water in the system. And add the water volume contained in the heat pump to this total volume.

Antifreeze type	Antifreeze mixing ratio (by volume)					
Antineeze type	0°C	-5°C	-10°C	-15°C	-20°C	-25°C
Methanol	0%	6%	12%	16%	24%	30%
Ethylene glycol	0%	12%	20%	30%	-	-
Propylene glycol	0%	17%	25%	33%	-	-

#### **CAUTION**


- Use only one of the above antifreeze.
- If a antifreeze is used, pressure drop and capability degradation of the system can be occurred.
- If one of antifreezes is used, corrosion can be occurred. So please add corrosion inhibitor.
- Please check the concentration of the antifreeze periodically to keep same concentration.
- When the antifreeze is used (for installation or operation), take care to ensure that antifreeze must not be touched.
- Ensure to respect all laws and norms of your country about antifreeze usage.

## 4. Water Control


# 4.3 Capacity correction factor by antifreeze

Antifreeze Type	Item	Antifreeze % by wt				
Antifreeze Type	item	10%	20%	30%	40%	50%
	Cooling	0.998	0.997	0.995	0.993	0.992
Methanol	Heating	0.995	0.990	0.985	0.979	0.974
	Pressure Drop	1.023	1.057	1.091	1.122	1.160
	Cooling	0.996	0.991	0.987	0.983	0.979
Ethylene glycol	Heating	0.993	0.985	0.977	0.969	0.961
	Pressure Drop	1.024	1.068	1.124	1.188	1.263
	Cooling	0.993	0.987	0.980	0.974	0.968
Propylene glycol	Heating	0.966	0.973	0.960	0.948	0.935
	Pressure Drop	1.040	1.098	1.174	1.273	1.405

## ◆ Correction factor of cooling capacity

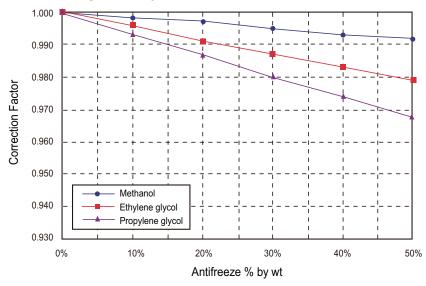

## ◆ Correction factor of heating capacity

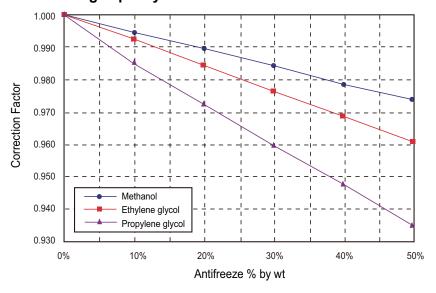


# 5. Dip Switch Setting

## 5.1 Information

Turn off electric power supply before setting DIP switch

• Whenever adjusting DIP switch, turn off electric power supply to avoid electric shock.

#### **■** Indoor PCB

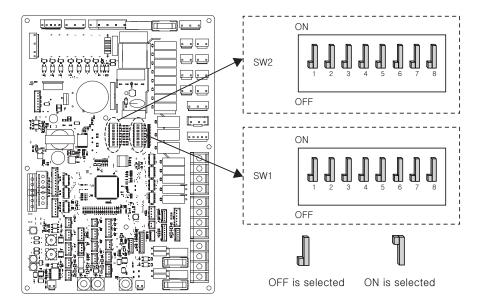

# 5. Dip Switch Setting

## ♦ Dip switch SW1

Description	Setting		Default
MODBUS	1 🗐	As Master (LG extension modules)	, N
Communication Type	1 🖺	As Slave (3rd party controller)	ं स
MODBUS	2	REGINE	2 <b>n</b>
Function	2 ¶	Unified Open Protocol	2 📙
ANTIFREF7F	8 🌡	Antifreeze agent is not used	8 🗐
/ NYTH FIELZE	8 ¶	Antifreeze agent in used*	<u>~</u> dl

#### Note

\*Possibility to allow colder water temperature by setting.


Bridge at CN\_ANTI\_SW on Hydro\_PCB must be dis-connected to enable setting.

#### ♦ Dip switch SW2

Description	Setting		Default
Croup Control	1 📗	As Master	
Group Control	1 🖣	As Slave	1 🗐
	<b>1 1</b> 2 3	Heat pumpe is installed (Heating(Cooling) circuit only)	
Accessory installation information	<b>1 1</b> 2 3	Heat Pump + DHW tank is installed	2 🗐
	2 3	Heat Pump + DHW tank + Solar thermal system is installed	2 <b>]</b> 3 <b>]</b>
Cycle	4 🌡	Heating Only	4 10
Gyelo	4 ¶	Heating & Cooling	4 🗐
Room Air Sensor	5 📗	Room Air Sensor is not installed	5 <b>.</b> ]
riodii 7 iii odrisoi	5 ¶	Room Air Sensor is installed	े धा
	<b>1 1</b> 6 7	Backup heater is not used	
Calaatian haaluus	<b>9 1</b> 6 7	Full capacity is used	n
Selecting backup heater capacity	<b>1 1</b> 6 7	Backup heater is not used	6 <b>.</b> ] 7 <b>.</b> ]
	<b>1 1</b> 6 7	Backup heater is not used	
Thermostat installation	8 🗐	Thermostat is NOT installed	_ n
information	8 ¶	Thermostat is installed	8 🗐

# 5. Dip Switch Setting

#### ■ Outdoor Unit Main PCB

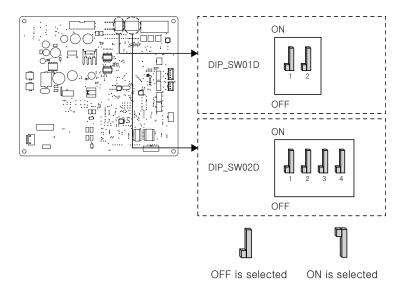

#### ♦ Dip switch SW1

Description	Setting		Default
Low Noise Mode	2 🌡	Always mode : Maintain Low noise mode for target temperature	2 🌡
LOW HOISE WIGGE	2 ¶	Parial mode : Escape Low noise mode for target temperature	- w

## ♦ Dip switch SW2

Description	Setting	Default
	Max Mode 1 2	
Peak Control	Peak Control Ste To limit maximur 1 2 (Power saving)	
	Peak Control Ste To limit maximur 1 2 (Super Power sa	n current

- Only the switch in the table has a function.
- When setting the Partial mode, mode can be exited to secure capacity after oprating for a certain time.





#### **Air Solution**

LG Electronics Inc, 128, Yeoui-daero, Yeongdeungpo-gu, Seoul, Korea (07336) http://partner.lge.com

Copyright © 2020 -2021 LG Electronics Inc. All Rights Reserved. Printed in Korea January / 2021 The air conditioners manufactured by LG have received ISO9001 certificate for quality assurance and ISO14001 certificate for environmental management system.

The specifications, designs, and information in this brochure are subject to change without notice.