

INSTALLATION MANUAL

AIR-TO-WATER HEAT PUMP

Please read this installation manual completely before installing the product.
Installation work must be performed in accordance with the national wiring standards by authorized personnel only. Please retain this installation manual for future reference after reading it thoroughly.

THERMAV™

Original instruction



MFL68026607
Rev.16_092722

Copyright © 2018 - 2022 LG Electronics Inc. All Rights Reserved.

www.lg.com

PORTUGUÊS

ENGLISH

MAGYAR

ITALIANO

БЪЛГАРСКИ

ESPAÑOL

SRPSKI

FRANÇAIS

HRVATSKI

DEUTSCH

SLOVENŠČINA

EAHNIKA

DANSK

ČEŠTINA

NEDERLANDS

POLSKI

LIMBA ROMÂNĂ

TABLE OF CONTENTS

7 PREFACE

[Chapter 1]

8 SAFETY INSTRUCTIONS

[Chapter 2]

16 INSTALLATION PART

[Chapter 3]

17 GENERAL INFORMATION

- 17 Model Information
- 19 Model name and related information
- 20 Parts and Dimensions
- 26 Control Parts
- 28 Remote Controller
- 29 Typical Installation Example
- 35 Cycle Diagram
- 38 Water cycle

[Chapter 4]

41 INSTALLATION

- 41 Transporting the Unit
- 42 Installation places
- 43 Multiple installation
- 45 Installation at Seaside
- 45 Seasonal Wind and Cautions in Winter
- 46 Foundation for Installation
- 47 Electrical Wiring
- 57 Wiring of main power supply and equipment capacity
- 58 Water Piping and Water Circuit Connection
- 59 Pipe Insulation
- 60 Water Charging
- 61 Water pump Capacity
- 61 Pressure Drop
- 62 Performance curve
- 63 Water Quality
- 63 Frost protection by antifreeze

- 64 Frost protection by antifreeze valve
- 66 Water Volume and Expansion Vessel Pressure

[Chapter 5]

67 ACCESSORIES INSTALLATION

- 67 Accessories supported by LG Electronics
- 69 Accessories supported by 3rd party Companies
- 70 Before Installation
- 70 Thermostat
- 75 2nd Circuit
- 80 3rd Party Boiler
- 81 3rd Party Controller
- 82 Meter Interface
- 83 Central Controller
- 84 Remote Controller
- 88 DHW Tank
- 93 DHW Tank Kit
- 95 Solar Thermal Kit
- 97 Dry Contact
- 99 External Controller - Setting up programmable digital input operation
- 100 Remote Temperature Sensor
- 103 Solar pump
- 104 External pump
- 105 Wi-fi Modem
- 106 Energy State
- 107 Digital Input for energy saving (ESS, Smart Grid)
- 108 2Way Valve
- 110 3Way Valve(A)
- 111 3Way Valve(B)
- 112 Electric Heater
- 118 Typical Installation Example
- 120 Final check

[Chapter 6]

121 CONFIGURATION

- 121 DIP Switch Setting

[Chapter 7]

131 SERVICE SETTING

- 131 How to enter service setting
- 131 Service setting

132	Service Contact
133	Model Information
134	RMC Version Information
135	Open Source License

[Chapter 8]

136 INSTALLER SETTING (For 3 Series)

136	How to enter installer setting
137	Installer setting (For 3 Series)
139	3 Minutes Delay
140	Select Temperature Sensor
141	Dry Contact Mode
142	Central Control Address
143	Pump test run
144	Air cooling set temp
145	Water cooling set temp
146	Air heating set temp
147	Water heating set temp
148	DHW set temp
149	Screed drying
151	Heater on temperature
153	Water supply off temp. during cooling
155	Tank disinfection setting 1, 2
156	Tank setting1
157	Tank setting2
159	Heater priority
160	DHW time setting
162	TH on/off Variable, heating air
163	TH on/off Variable, heating water
164	TH on/off Variable, cooling air
165	TH on/off Variable, cooling water
166	Heating temp. setting
167	Cooling temp. setting
168	Pump setting in heating
169	Pump setting. in cooling
170	Forced operation
171	CN_CC
172	Pump Capacity
173	Seasonal auto temp
175	Modbus Address
176	CN_EXT
177	Anti-freezing Temperature

178	Add Zone
179	Use External Pump
180	3rd Party Boiler
181	Meter Interface
182	Pump Prerun/Overrun
183	Solar Thermal System
185	Energy state
188	Data logging
189	Password Initialization

190 INSTALLER SETTING (For 4 Series)

193	Select Temperature Sensor
194	Use Heating Tank Heater
195	Mixing Circuit
197	Use External Pump
198	RMC master/slave
199	LG Therma V Configuration
200	Forced operation
201	Pump Prerun/Overrun
202	Water Flow Control
203	Energy Monitoring
204	Anti-Freezing Option 1
205	Password Reset
206	Screed drying
208	Heater on temperature
209	Air heating set temp.
210	Water heating set temp.
211	Hysteresis Room Air(Heating)
212	Hysteresis Heating Water
213	Heating temp. setting
214	Pump setting in heating
215	Air cooling set temp.
216	Water cooling set temp.
217	Water supply off temp. during cooling
219	Hysteresis Room Air(Cooling)
220	Hysteresis Cooling Water
221	Cooling temp. setting
222	Pump setting in cooling
223	Seasonal auto temp.
226	Heater priority
227	DHW set temp.
228	Tank disinfection setting 1, 2
229	Tank setting1

230	Tank setting2
232	DHW time setting
234	Recirculation time
235	Solar Thermal System
237	Pump test run
238	Frost Protection Temp.
239	Dry Contact Mode
240	Central Control Address
241	CN_CC
242	LG Therma V Configuration
243	Energy state
246	Thermostat control type
247	Pump operation time
248	IDU operation time
249	Modbus Address
250	Modbus gateway memory map
253	CN_EXT
254	3rd Party Boiler
255	Meter Interface
256	Current flow rate
257	Data logging

[Chapter 9]

258 COMMISSIONING

258	Check List before Starting Operation
259	Starting Operation
260	Starting Operation flow chart
260	Airborne Noise Emission
261	Vacuum & Charge of Refrigerant
263	How to drain remaining water in the product
264	Troubleshooting





PREFACE

This installation manual is to present information and guide about understanding, installing, and checking **THERMAV™**.


Your careful reading before installation is highly appreciated to make no mistake and to prevent potential risks. The manual is divided into nine chapters. These chapters are classified according to installation procedure. See the table below to get summarized information.

Chapters	Contents
Chapter 1	<ul style="list-style-type: none"> • Warning and Caution concerned with safety. • This chapter is directly related with human safety. We strongly recommend reading this chapter carefully.
Chapter 2	<ul style="list-style-type: none"> • Items Inside product Box • Before starting installation, please make it sure that all parts are found inside the product box.
Chapter 3	<ul style="list-style-type: none"> • Fundamental knowledge about THERMAV™. • Model identification, accessories information, refrigerant and water cycle diagram, parts and dimensions, electrical wiring diagrams, etc. • This chapter is important to understand THERMAV™.
Chapter 4	<ul style="list-style-type: none"> • Installation about the unit. • Installation location, constraints on installation site, etc • Electrical wiring at the unit. • System set-up and configuration. • Information about water pump
Chapter 5	<ul style="list-style-type: none"> • Information about supported accessories • Specification, Constraints, and wiring are described. • Before purchasing accessories, please find supported specification to buy proper one.
Chapter 6	<ul style="list-style-type: none"> • Information about DIP switch setting
Chapter 7	<ul style="list-style-type: none"> • check and input service contact • information about model and open source license
Chapter 8	<ul style="list-style-type: none"> • Information on the installer setup mode that sets the detailed functions of the remote control • Incorrectly setting the installer setup mode may result in product failure, personal injury, or property loss, so this chapter requires a deeper understanding
Chapter 9	<ul style="list-style-type: none"> • Check points before starting operation are explained. • Troubleshooting, maintenance, and error code list are presented to correct problems

SAFETY INSTRUCTIONS

	Read the precautions in this manual carefully before operating the unit.		This appliance is filled with flammable refrigerant (for R32)
	This symbol indicates that the Operation Manual should be read carefully.		This symbol indicates that a service personnel should be handling this equipment with reference to the Installation Manual.

The following safety guidelines are intended to prevent unforeseen risks or damage from unsafe or incorrect operation of the appliance. The guidelines are separated into 'WARNING' and 'CAUTION' as described below.

 This symbol is displayed to indicate matters and operations that can cause risk. Read the part with this symbol carefully and follow the instructions in order to avoid risk.

WARNING

This indicates that the failure to follow the instructions can cause serious injury or death.

CAUTION

This indicates that the failure to follow the instructions can cause the minor injury or damage to the product.

WARNING

Installation

- Do not use a defective or underrated circuit breaker. Use this appliance on a dedicated circuit.
 - There is risk of fire or electric shock.
- For electrical work, contact the dealer, seller, a qualified electrician, or an Authorized Service Center.
 - There is risk of fire or electric shock.

- Always ground the unit.
 - There is risk of fire or electric shock.
- Install the panel and the cover of control box securely.
 - There is risk of fire or electric shock.
- Always install a dedicated circuit and breaker.
 - Improper wiring or installation may cause fire or electric shock
- Use the correctly rated breaker or fuse.
 - There is risk of fire or electric
- Do not modify or extend the power cable.
 - There is risk of fire or electric shock.
- Do not install, remove, or reinstall the unit by yourself (customer).
 - There is risk of fire, electric shock, explosion, or injury
- For antifreeze, always contact the dealer or an authorized service center.
 - Almost the antifreeze is a toxic product.
- For installation, always contact the dealer or an authorized Service Center.
 - There is risk of fire, electric shock, explosion, or injury.
- Do not install the unit on a defective installation stand.
 - It may cause injury, accident, or damage to the unit.
- Be sure the installation area does not deteriorate with age.
 - If the base collapses, the unit could fall with it, causing property damage, unit failure, and personal injury.
- Do not install the water pipe system as Open loop type.
 - It may cause failure of unit.
- Use a vacuum pump or inert (nitrogen) gas when doing leakage test or purging air. Do not compress air or oxygen and do not use flammable gases.
 - There is the risk of death, injury, fire or explosion.
- Make sure the connected condition of connector in product after maintenance.
 - Otherwise, it may cause product damage

- Do not touch leaked refrigerant directly.
 - There is risk of frostbite.
- Compliance with national gas regulations shall be observed.
- Refrigerant tubing shall be protected or enclosed to avoid damage.
- The installation of pipe-work shall be kept to a minimum.
- A brazed, welded, or mechanical connection shall be made before opening the valves to permit refrigerant to flow between the refrigerating system parts. A vacuum valve shall be provided to evacuate the interconnecting pipe and/or any uncharged refrigerating system part.
- Any person who is involved with working on or breaking into a refrigerant circuit should hold a current valid certificate from an industry-accredited assessment authority, which authorizes their competence to handle refrigerants safely in accordance with an industry recognized assessment specification.
- Pipe-work shall be protected from physical damage and shall not be installed in an unventilated space, if that space is smaller than
 - 1) The minimum floor area : 49.4 m²
 - 2) The maximum refrigerant charge amount : 2.4 kg
- Do not use means to accelerate the defrosting process or to clean, other than those recommended by the manufacturer.
- Do not pierce or burn.
- Be aware that refrigerants may not contain an odour.
- Dismantling the unit, treatment of the refrigerant oil and eventual parts should be done in accordance with local and national standards.
- Ducts connected to an appliance shall not contain an ignition source.
- Copper in contact with refrigerants shall be oxygen-free or deoxidized, for example Cu-DHP as specified in EN 12735-1 and EN 12735-2.

Operation

- Take care to ensure that power cable could not be pulled out or damaged during operation.
 - There is risk of fire or electric shock.
- Do not place anything on the power cable.
 - There is risk of fire or electric shock.
- Do not plug or unplug the power supply plug during operation.
 - There is risk of fire or electric shock.
- Do not touch (operate) the unit with wet hands.
 - There is risk of fire or electric shock.
- Do not place a heater or other appliances near the power cable.
 - There is risk of fire or electric shock.
- Do not allow water to run into electric parts.
 - There is risk of fire, failure of the unit, or electric shock.
- Do not store or use flammable gas or combustibles near the unit.
 - There is risk of fire or failure of unit.
- Do not use the unit in a tightly closed space for a long time.
 - It may cause damage to the unit.
- When flammable gas leaks, turn off the gas and open a window for ventilation before turning the unit on.
 - There is risk of explosion or fire.
- If strange sounds or smell or smoke comes from unit, turn the breaker off or disconnect the power supply cable.
 - There is risk of electric shock or fire.
- Stop operation and close the window in storm or hurricane. If possible, remove the unit from the window before the hurricane arrives.
 - There is risk of property damage, failure of unit, or electric shock.
- Do not open the front cover of the unit while operation. (Do not touch the electrostatic filter, if the unit is so equipped.)
 - There is risk of physical injury, electric shock, or unit failure.

- Do not touch any electric part with wet hands. you should be power off before touching electric part.
 - There is risk of electric shock or fire.
- Do not touch refrigerant pipe and water pipe or any internal parts while the unit is operating or immediately after operation.
 - There is risk of burns or frostbite, personal injury.
- If you touch the pipe or internal parts, you should be wear protection or wait time to return to normal temperature.
 - Otherwise , it may cause burns or frostbite, personal injury.
- Turn the main power on 6 hours ago before the product starting operation.
 - Otherwise, it may cause compressor damage.
- Do not touch electric parts for 10 minutes after main power off.
 - There is risk of physical injury, electric shock.
- The inside heater of product may operate during stop mode. It is intended to protect the product.
- Be careful that some part of the control box are hot.
 - There is risk of physical injury or burns.
- When the unit is soaked (flooded or submerged), contact an Authorized Service Center.
 - There is risk of fire or electric shock.
- Be cautious that water could not be poured to the unit directly.
 - There is risk of fire, electric shock, or unit damage.
- Ventilate the unit from time to time when operating it together with a stove, etc.
 - There is risk of fire or electric shock.
- Turn the main power off when cleaning or maintaining the unit.
 - There is risk of electric shock.
- Take care to ensure that nobody could step on or fall onto the unit.
 - This could result in personal injury and unit damage.
- For installation, always contact the dealer or an Authorized Service Center.
 - There is risk of fire, electric shock, explosion, or injury.

- If the unit is not used for long time, we strongly recommend not to switch off the power supply to the unit.
 - There is risk of water freezing.
- The appliance shall be stored in a well-ventilated area where the room size corresponds to the room area as specified for operation.
- The appliance shall be stored in a room without continuously operating open flames (for example an operating gas appliance) and ignition sources (for example an operating electric heater).
- The appliance shall be stored so as to prevent mechanical damage from occurring.
- Servicing shall only be performed as recommended by the equipment manufacturer. Maintenance and repair requiring the assistance of other skilled personnel shall be carried out under the supervision of the person competent in the use of flammable refrigerants.
- When mechanical connectors are reused indoors, sealing parts shall be renewed. When flared joints are reused indoors, the flare part shall be re-fabricated.
- Be aware that refrigerants may not contain an odor.
- Periodic(more than once/year) cleaning of the dust or salt particles stuck on the heat exchangers by using water.
- Keep any required ventilation openings clear of obstruction.

CAUTION

Installation

- Always check for gas (refrigerant) leakage after installation or repair of unit.
 - Low refrigerant levels may cause failure of unit.
- Keep level even when installing the unit.
 - To avoid vibration or water leakage.
- Use two or more people to lift and transport the unit.
 - Avoid personal injury.
- Do not install the unit in potentially explosive atmospheres.

- Connect the water for filling or refilling the heating system as specified by EN 1717/EN 61770 to avoid contamination of drinking water by return flow.

Operation

- Do not use the unit for special purposes, such as preserving foods, works of art, etc.
 - There is risk of damage or loss of property.
- Use a soft cloth to clean. Do not use harsh detergents, solvents, etc.
 - There is risk of fire, electric shock, or damage to the plastic parts of the unit.
- Do not step on or put anything on the unit.
 - There is risk of personal injury and failure of unit.
- Use a firm stool or ladder when cleaning or maintaining the unit.
 - Be careful and avoid personal injury.
- Do not turn on the breaker or power under condition that front panel cabinet, top cover, control box cover are removed or opened.
 - Otherwise it may cause fire, electric shock, explosion or death.
- The appliance shall be disconnected from its power source during service and when replacing parts.
- Means for disconnection must be incorporated in the fixed wiring in accordance with the wiring rules.
- The Installation kit supplied with the appliance are to be used and that old Installation kit should not be reused.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. Installation work must be performed in accordance with the national wiring standards by authorized personnel only.
- In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.


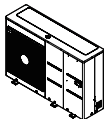
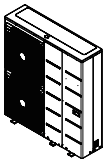





- This equipment shall be provided with a supply conductor complying with the national regulation.
- The instructions for service to be done by specialized personnel, mandated by the manufacturer or the authorized representative may be supplied in only one Community language which the specialized personnel understand.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

INSTALLATION PART

Thank you for choosing LG Electronics Air-to-Water Heat Pump **THERMAV.**

Before starting installation, please make it sure that all parts are found inside the product box.

*The parts can be found inside the outdoor unit by opening the side panel.

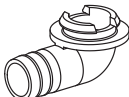Item	Image
Installation Manual	
Outdoor Unit UN36A Chassis (Product heating capacity : 5, 7, 9 kW)	
Outdoor Unit UN60A Chassis (Product heating capacity : 9, 12, 14, 16 kW)	
Remote Controller	
Remote Controller Cable (Default length : 10 m)	
Damper (x 6)	
Drain Cap (x 6)	
Drain Nipple	

GENERAL INFORMATION

With advanced inverter technology, **THERMAV** is suitable for applications like under floor heating, under floor cooling, and hot water generation. By Interfacing to various accessories user can customize the range of the application.

In this chapter, general information of **THERMAV** is presented to identify the installation procedure. Before beginning installation, read this chapter carefully and find helpful information on installation.

Model Information

Factory Model Name

Model	No.						
	1	2	3	4	5	6	7
Monobloc	ZH	B	W	09	6	A	0

No.	Signification
1	Air-to-Water-Heat Pump for R32
2	Classification - B : Monobloc
3	Model Type - W : Inverter Heat Pump
4	Heating Capacity - E.g) 9 kW → '09'
5	Electrical ratings - 6 : 1 phase 220-240 V~ 50 Hz - 8 : 3 phase 380-415 V~ 50 Hz
6	Function - A : General heating heat pump
7	Series Number

Buyer Model Name

- For 3 Series

Refrigerant	No.						
	1	2	3	4	5	7	8
R32	H	M	09	1	M	U3	3

No.	Signification
1	Air-to-Water-Heat Pump
2	Classification - M : Monobloc
3	Heating Capacity - E.g) 9 kW → '09'
4	Electrical ratings - 6 : 1 phase 220-240 V~ 50 Hz - 8 : 3 phase 380-415 V~ 50 Hz
5	Leaving Water Combination - M : Middle Temperature
6	Chassis Name - U3 : UN60A Chassis - U4 : UN36A Chassis
7	Series Number

- For 3 Series

Refrigerant	No.								
	1	2	3	4	5	6	7	8	9
R32	H	M	09	1	M	R	S	U3	3

No.	Signification
1	Air-to-Water-Heat Pump
2	Classification - M : Monobloc
3	Heating Capacity - E.g) 9 kW → '09'
4	Electrical ratings - 6 : 1 phase 220-240 V~ 50 Hz - 8 : 3 phase 380-415 V~ 50 Hz
5	Leaving Water Combination - M : Middle Temperature
6	Refrigerant - R : R32
7	Function - S : Silent
8	Chassis Name - U3 : UN60A Chassis - U4 : UN36A Chassis
9	Series Number

- For 4 Series

Refrigerant	No.							
	1	2	3	4	5	6	7	8
R32	H	M	09	1	M	R	U3	4

No.	Signification
1	Air-to-Water-Heat Pump
2	Classification - M : Monobloc
3	Heating Capacity - E.g) 9 kW → '09'
4	Electrical ratings - 6 : 1 phase 220-240 V~ 50 Hz - 8 : 3 phase 380-415 V~ 50 Hz
5	Leaving Water Combination - M : Middle Temperature
6	Refrigerant - R : R32
7	Chassis Name - U3 : UN60A Chassis - U4 : UN36A Chassis
8	Series Number

Check the model information based on the buyer model series number.
(e.g., geometry, cycle, etc.)

- Additional Information : Serial number refers to the barcode on the product.
- Max allowable pressure High side : 4.32 MPa / Low side : 2.4 MPa

[Operating condition]

- Maximum operating temperature of water : 65 °C
- Minimum operating temperature of water : 15 °C
- Maximum inlet water pressure : 0.3 MPa
- Minimum inlet water pressure : 0.03 MPa

Model name and related information

Model Name			Capacity (kW)		Power Source (Unit)
Chassis	Phase(Ø)	Capacity(kW)	Heating ¹⁾	Cooling ²⁾	
UN36A	1	5	5.5	5.5	220-240 V~ 50 Hz
		7	7	7	
		9	9	9	
UN60A	1	9	9	9	
		12	12	12	
		14	14	14	
		16	16	16	
	3	12	12	12	380-415 V 3N~ 50 Hz
		14	14	14	
		16	16	16	

1 : tested under EN14511
(water temperature 30 °C → 35 °C at outdoor ambient temperature 7 °C / 6 °C)

2 : tested under EN14511
(water temperature 23 °C → 18 °C at outdoor ambient temperature 35 °C / 24 °C)


✱ All appliances were tested at atmospheric pressure.

Parts and Dimensions

- For 3 Series

UN36A (5, 7, 9 kW)



(Unit : mm)

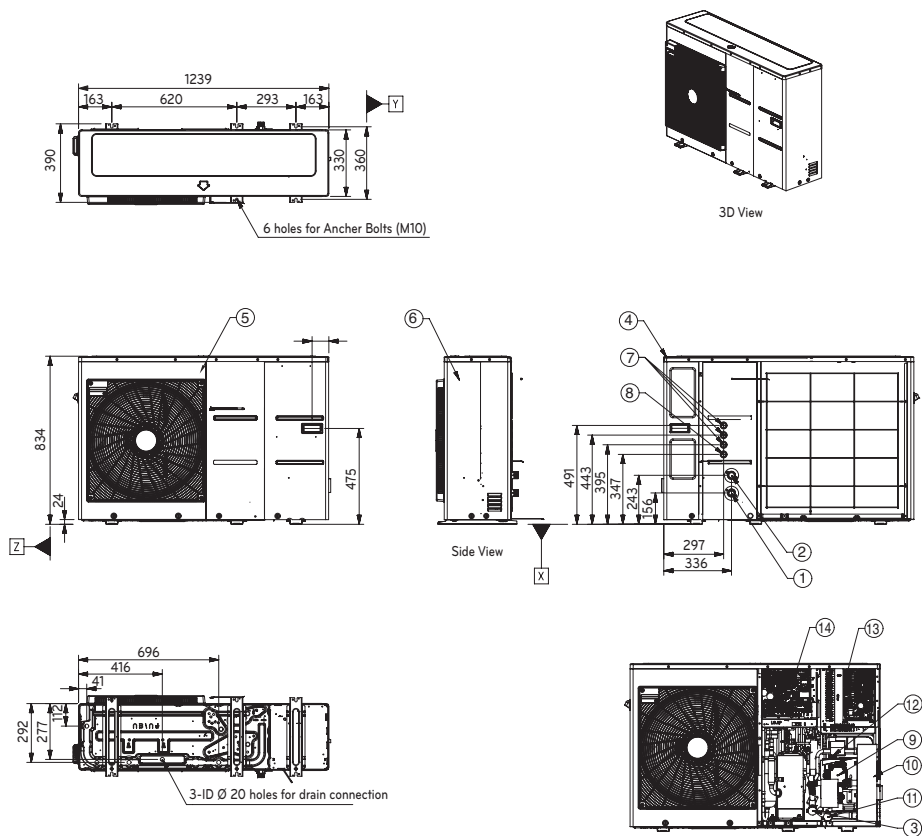





* The shape may differ depending on the model.

UN60A (9, 12, 14, 16 kW)

(Unit : mm)

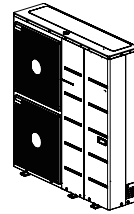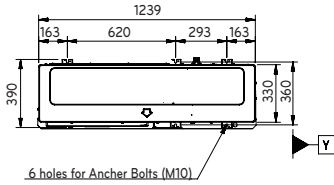

3D View

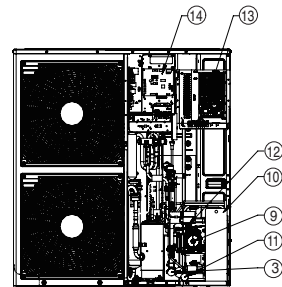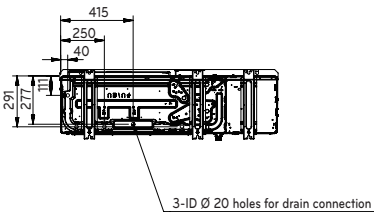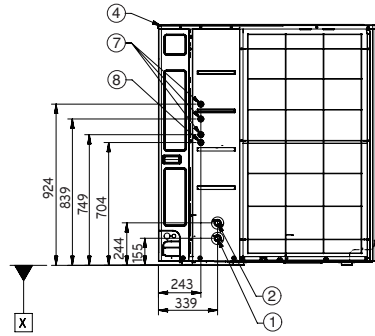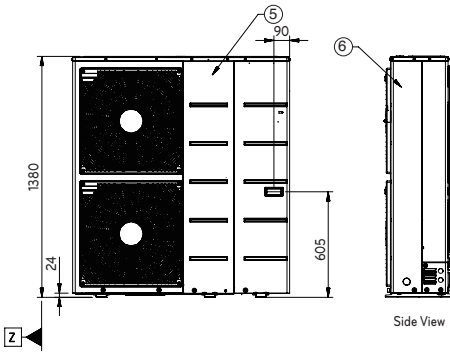

* The shape may differ depending on the model.





Description

No	Name	Remarks
1	Entering water pipe	Male PT 1 inch
2	Leaving water pipe	Male PT 1 inch
3	Strainer	Filtering and stacking particles inside circulating water
4	Top cover	-
5	Front Panel	-
6	Side Panel	-
7	Low Voltage	Communication Cable Hole
8	UNIT Power	Power Cable Hole
9	Water Pump	Circulating the water
10	Plate Heat Exchanger	Heat exchanger between refrigerant and water
11	Pressure Gage	Indicates circulating water pressure
12	Safety Valve	Open at Water pressure 3 bar
13	Heater Control Box	Heater PCB and terminal blocks
14	Outdoor Control Box	Outdoor PCB and terminal blocks

- For 4 Series

UN36A (5, 7, 9 kW)

(Unit : mm)

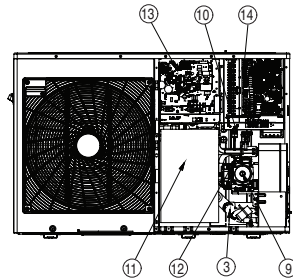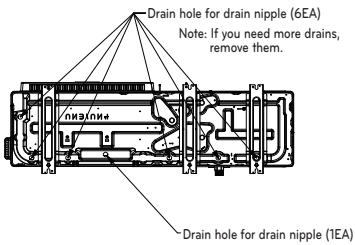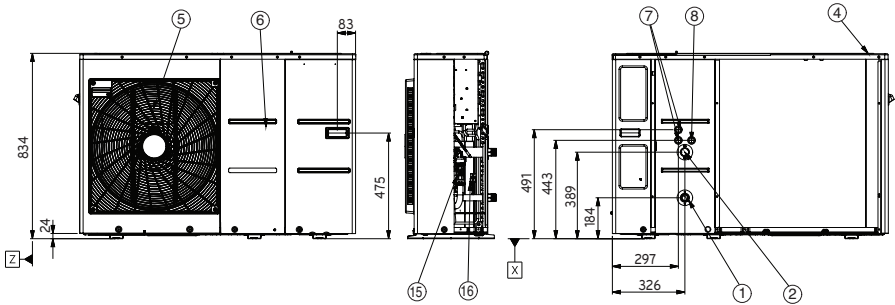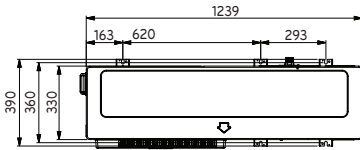


✱ The shape may differ depending on the model.

24 GENERAL INFORMATION

UN60A (12, 14, 16 kW)

(Unit : mm)

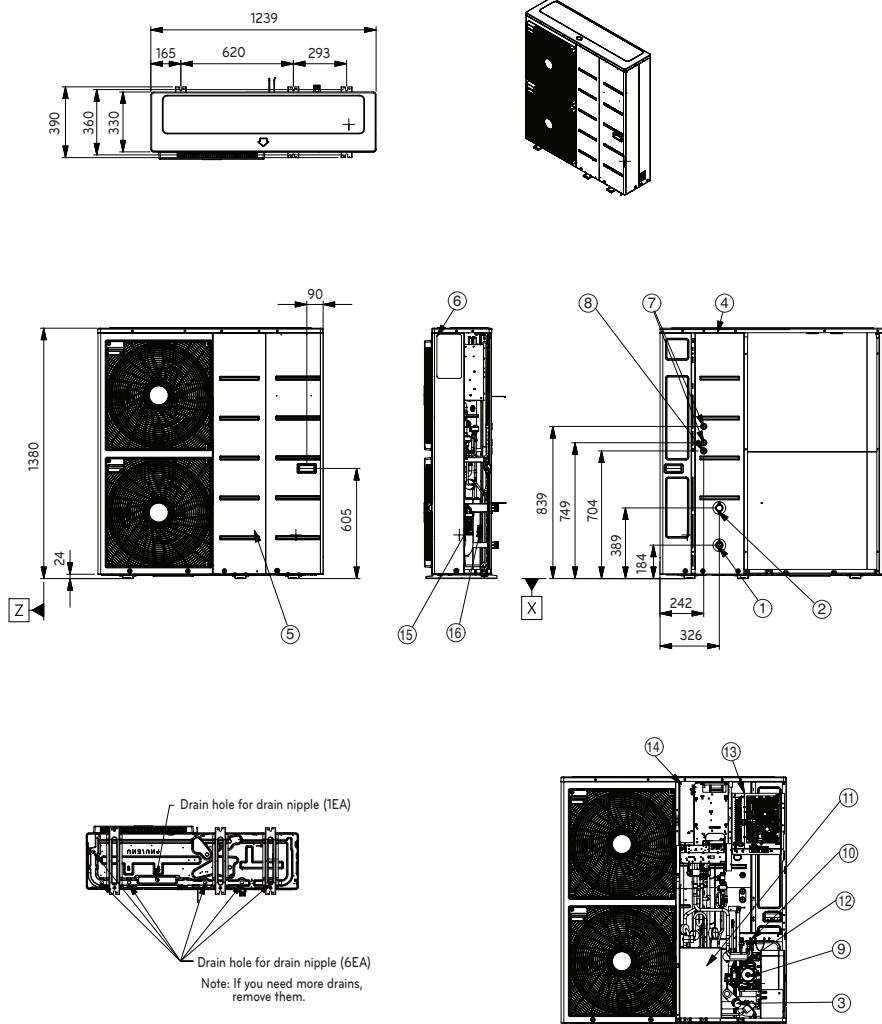

※ The shape may differ depending on the model.

Description


No	Name	Remarks
1	Entering water pipe	Male PT 1 Inch
2	Leaving water pipe	Male PT 1 Inch
3	Strainer	Filtering and stacking particles inside circulating water
4	Top cover	-
5	Front Panel	-
6	Side Panel	-
7	Low Voltage	Communication Cable Hole
8	UNIT Power	Power Cable Hole
9	Water Pump	-
10	Plate Heat Exchanger	Heat exchanger between refrigerant and water
11	Compressor shield panel	-
12	Safety Valve	Open at water pressure 3 bar
13	Indoor Control Box	PCB and terminal blocks
14	Outdoor Control Box	PCB and terminal blocks
15	Flow sensor	SIKA VVX20 5-80 LPM
16	Pressure Sensor	SENSATA 2HMP3-05W 02-MPa

Control Parts


- For 3 Series

Control box before structural change (Until August, 2020)


UN36A (5, 7, 9 kW)

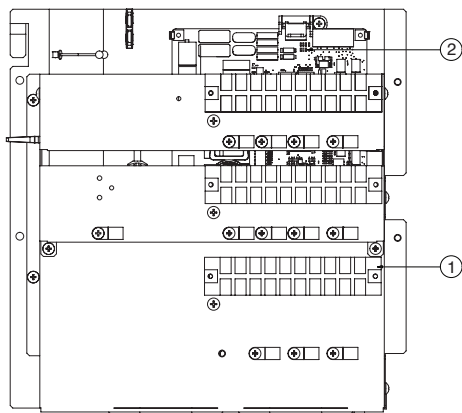

UN60A (9, 12, 14, 16 kW)

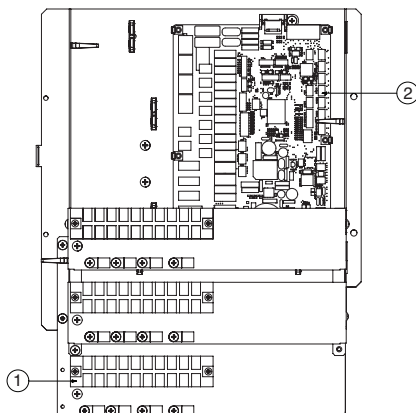

Control box after structural change (From September, 2020)

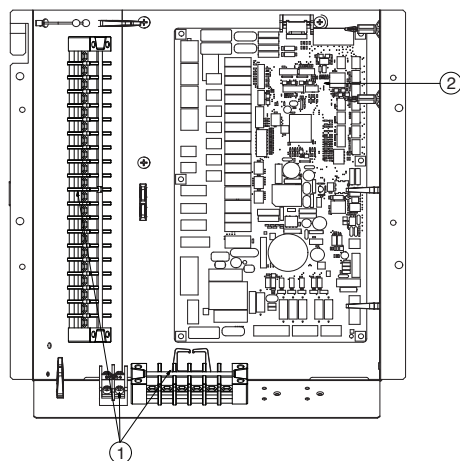


※ The shape may differ depending on the model. Refer to “Exploded View” in SVC Manual.

Description

No	Name	Remark
1	Terminal blocks	The terminal blocks allow easy connection of field wiring
2	Main PCB	The main PCB(Printed Circuit Board) controls the functioning of the unit

- For 4 Series

Control box

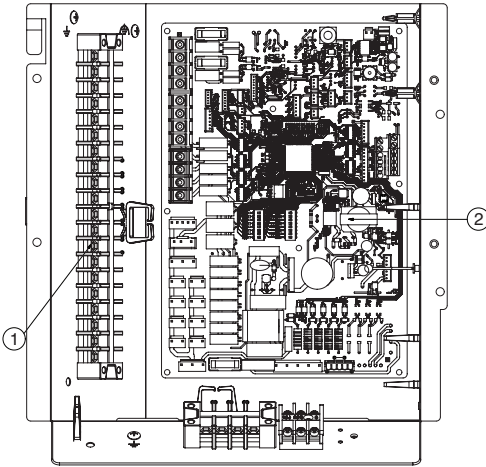


※ The shape may differ depending on the model. Refer to “Exploded View” in SVC Manual.

Description

No	Name	Remark
1	Terminal blocks	The terminal blocks allow easy connection of field wiring
2	Main PCB	The main PCB(Printed Circuit Board) controls the functioning of the unit

Remote Controller

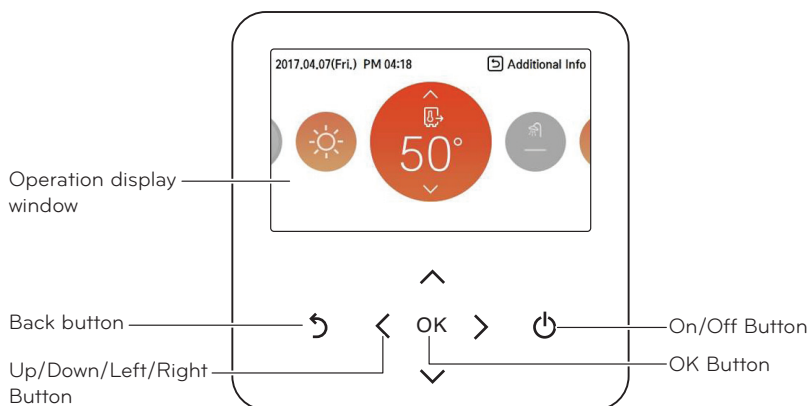

Operation display window	Operation and Settings status display
Back button	When you move to the previous stage from the menu's setting stage
Up/down/left/right button	When you change the menu's setting value
OK button	When you save the menu's setting value
On/Off button	When you turn ON/OFF the Unit

Typical Installation Example


CAUTION

If **THERMAV** is installed with pre-existing boiler, the boiler and **THERMAV** should not be operated together. If entering water temperature of **THERMAV** is above 55 °C, the system will stop operation to prevent mechanical damage of the product. For detailed electric wiring and water piping, please contact authorized installer.

Some installation scenes are presented for example. As these scenes are conceptual figures, installer should optimize the installation scene according to the installation conditions. Note that buffer tank should be installed.

CASE 1: Connecting Heat Emitters for Heating and Cooling

(Under floor loop, Fan Coil Unit, and Radiator)

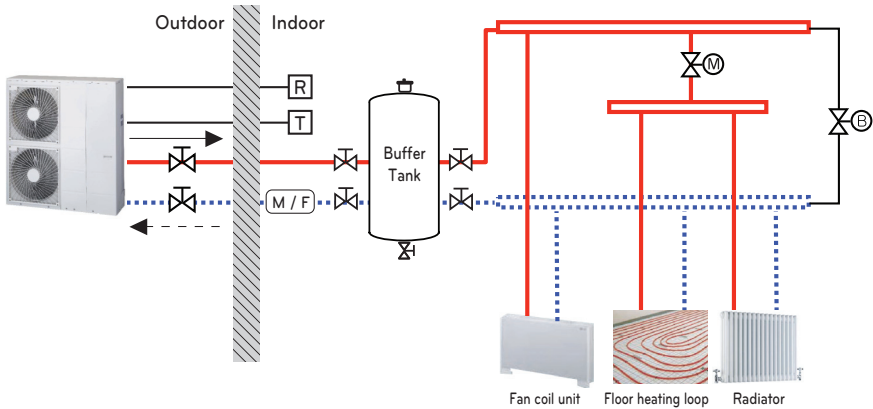

NOTE

- Room thermostat
 - Type of thermostat and specification should be complied with **THERMAV** installation manual.
- 2way valve
 - It is important to install 2way valve to prevent dew condensation on the floor and radiator while cooling mode.
 - Type of 2way control valve and specification should be complied with **THERMAV** installation manual.
 - 2way valve should be installed at the supply side of the collector.
- By-pass valve
 - To secure enough water flow rate, by-pass valve should be installed at the collector.
 - By-pass valve should guarantee minimum water flow rate in any case. Minimum water flow rate is described in water pump characteristics curve.

— High Temperature

.... Low Temperature

(M / F) Magnetic Filter (Mandatory)



Room Thermostat
(Field supply)



2way valve
(Field supply)



Shut-off valve




By-pass valve(Field supply)



Remote controller

CASE 2: Connecting DHW Tank

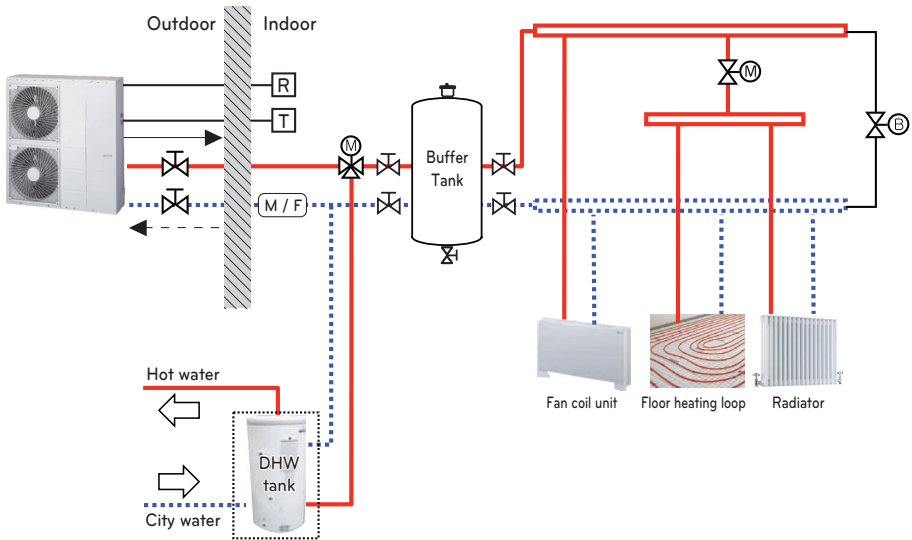

NOTE

- DHW tank
 - It should be equipped with internal electric heater to generate sufficient heat energy in very cold season.
 - DHW : Domestic Hot Water
- 3way valve
 - Type of 3way valve and specification should be complied with **THERMAV** installation manual.

— High Temperature

... Low Temperature

⊞ Shut-off valve

(M / F) Magnetic Filter (Mandatory)



Room Thermostat(Field supply)



2way valve
(Field supply)



By-pass valve(Field supply)




Remote controller




3way valve
(Field supply)

CASE 4-1: Connecting 2nd Circuit (For 3 Series)

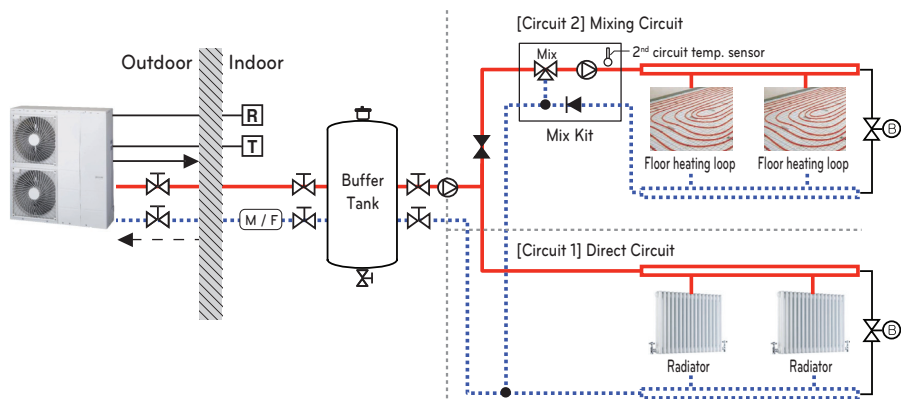

CASE 4-2: Connecting 2nd Circuit (For 4 Series)

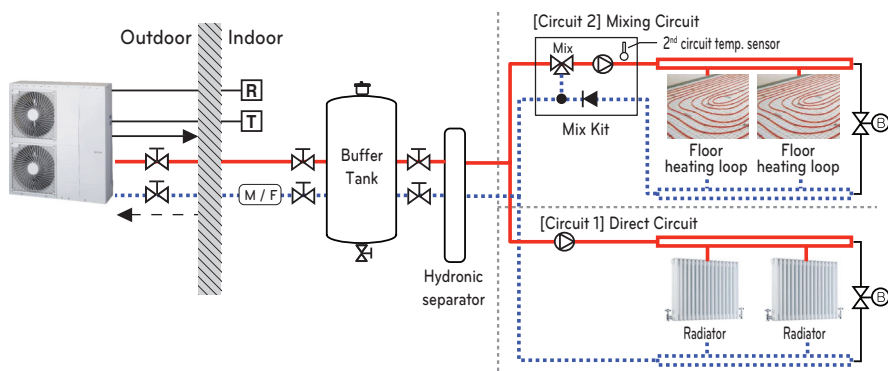

NOTE

- Mix Kit
 - You can install it when you want to set the temperature of two rooms individually
 - When heating, Circuit 2 can not be higher than Circuit 1.
 - When cooling, Circuit 2 can not be lower than Circuit 1.
 - The types and specifications of the Mix Kit are to comply with **THERMAV** Installation Manual.

— High Temperature

.... Low Temperature

⊞ Shut-off valve

(M / F) Magnetic Filter (Mandatory)

⊞ Pressure Regulation valve (Field supply)

⊞ Room Thermostat (Field supply)

⊞ 2way valve (Field supply)


⊞ By-pass valve(Field supply)

⊞ Air vent (Field supply)

⊞ 3way valve (Field supply)

⊞ Pump(Field supply)

⊞ Mix Kit (Field supply)

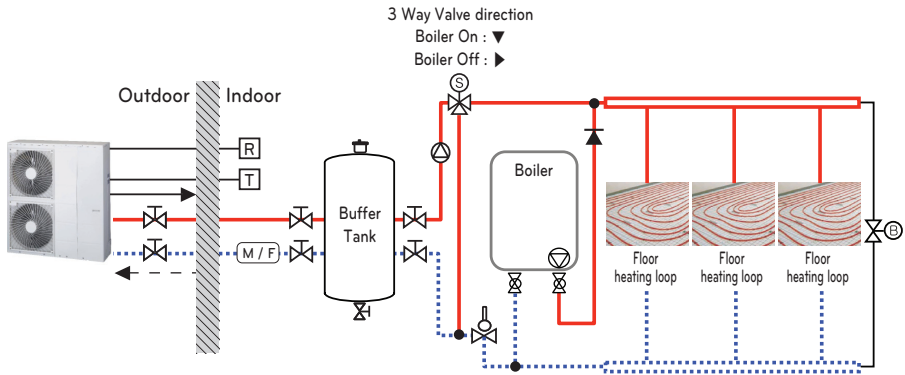CASE 5: Connecting 3rd Party

NOTE

- DHW tank
 - 3rd Party Boiler
 - You can control the boiler automatically and manually by comparing the outside temperature and the set temperature.
- 3way valve
 - It is a valve for DHW use.
 - Not installed when installing Buffer Tank
 - Type of 3way valve and specification should be complied with **THERMAV** installation manual.

— High Temperature

.... Low Temperature



Shut-off valve



M / F Magnetic Filter (Mandatory)



Reverse check valve



Room Thermostat(Field supply)



2way valve (Field supply)



By-pass valve(Field supply)



Air vent (Field supply)



3way valve
(Field supply)




Pump(Field supply)



Aquastat Valve

CASE 6 : Connecting backup heater

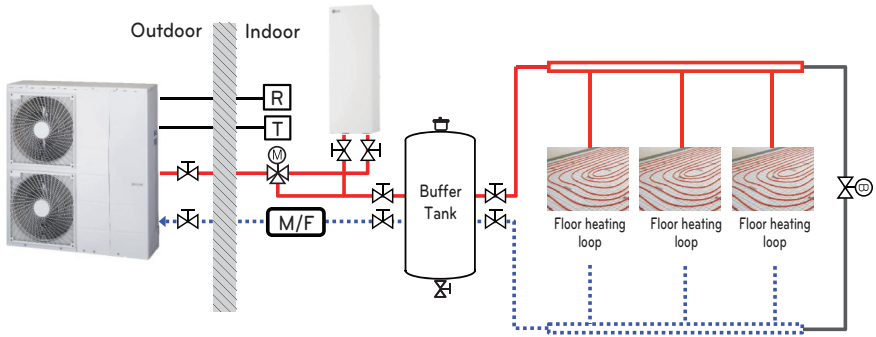

NOTE

- Backup heater(Accessory)
 - You can retain sufficient capacity even though ambient temperature will be decreased in winter.
 - During cooling operation, connect the 3-Way Valve with automatic reset function using the 2-Way Valve connection terminal to prevent water from going to the Backup Heater.

— High Temperature

.... Low Temperature


M / F Magnetic Filter (Mandatory)

T Room Thermostat (Field supply)


M 3way valve (Field supply)

R Remote controller

 Shut-off valve

 By-pass valve (Field supply)

UN60A (1Ø : 9 kW)

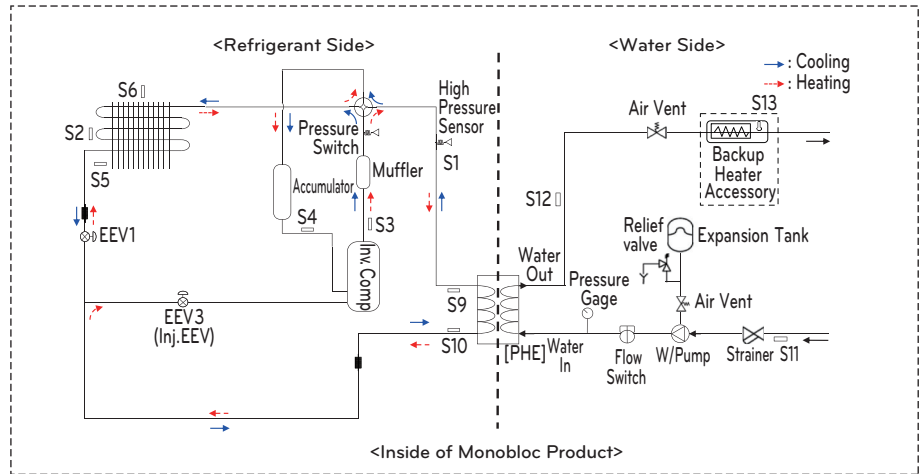

Description


Category	Symbol	Meaning	PCB Connector
Indoor Unit	S1	High pressure sensor	CN_H_PRESS
	S2	Condenser middle temperature sensor	CN_MID
	S3	Compressor-discharge pipe temperature sensor	CN_DISCHA
	S4	Compressor-suction pipe temperature sensor	CN_SUCTION
	S5	Condenser temperature sensor	CN_C_PIPE
	S6	Outdoor air temperature sensor	CN_AIR
	S7	Inlet IHX temperature sensor	CN_VI_IN
	S8	Outlet IHX temperature sensor	CN_VI_OUT
	S9	PHEX gas temp. sensor	CN_PIPE_OUT
	S10	PHEX liquid temp. sensor	CN_PIPE_IN
Water Side	S11	Entering water temperature sensor	CN_TH3
	S12	Leaving water temperature sensor	
	S13	Electric backup heater outlet (Accessory kit)	

-S9, S10, S5 : Description is expressed based on Cooling mode.

- For 4 Series

UN36A (5, 7, 9 kW)

UN60A (12, 14, 16 kW)

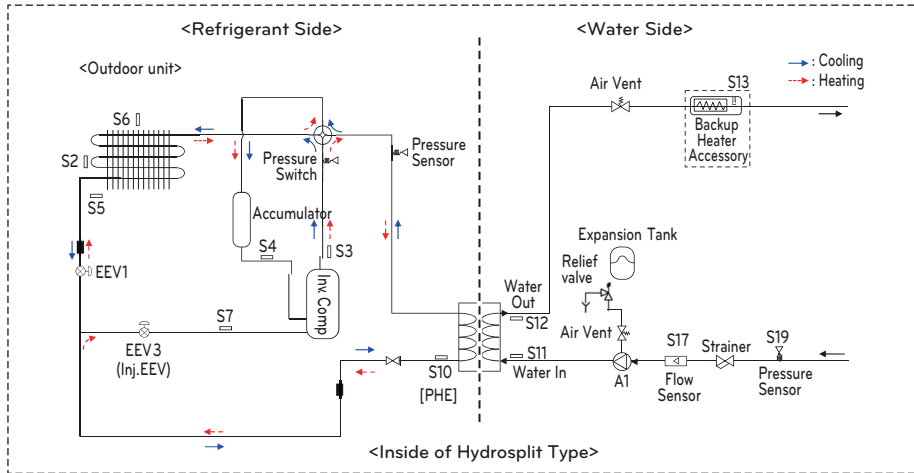


Description


Category	Symbol	Meaning	PCB Connector
Refrigerant side	S1	PEHEX liquid temperature sensor	CN_PIPE_IN
	S2	Outdoor-HEX middle temperature sensor	CN_MID
	S3	Compressor-discharge pipe temperature sensor	CN_DISCHARGE
	S4	Compressor-suction pipe temperature sensor	CN_SUCTION
	S5	Outdoor-HEX temperature sensor	CN_C_PIPE
	S6	Outdoor air temperature sensor	CN_AIR
	S7	Compressor-injection pipe temperature sensor	CN_VI_IN
	EEV1	Electronic Expansion Valve (Heating/Cooling)	CN_EEV1
	EEV2	Electronic Expansion Valve (Injection)	CN_EEV_MAIN
Water Side	S12	Outlet water temperature sensor	CN_WATER_OUT
	S11	Inlet water temperature sensor	CN_WATER_IN
	S13	Backup heater outlet sensor	CN_TH3
	S17	Flow sensor	CN_F_SENSOR
	S19	Water pressure sensor	CN_H2O_PRESS
	A1	Main Water Pump	CN_PUMP_A1 CN_MOTOR1
	A8	Electric backup heater(1Ø, Optional accessory)	CN_HEATER_PCB
	A9	Electric backup heater(3Ø, Optional accessory)	HEATER1

Water cycle

- For 3 Series

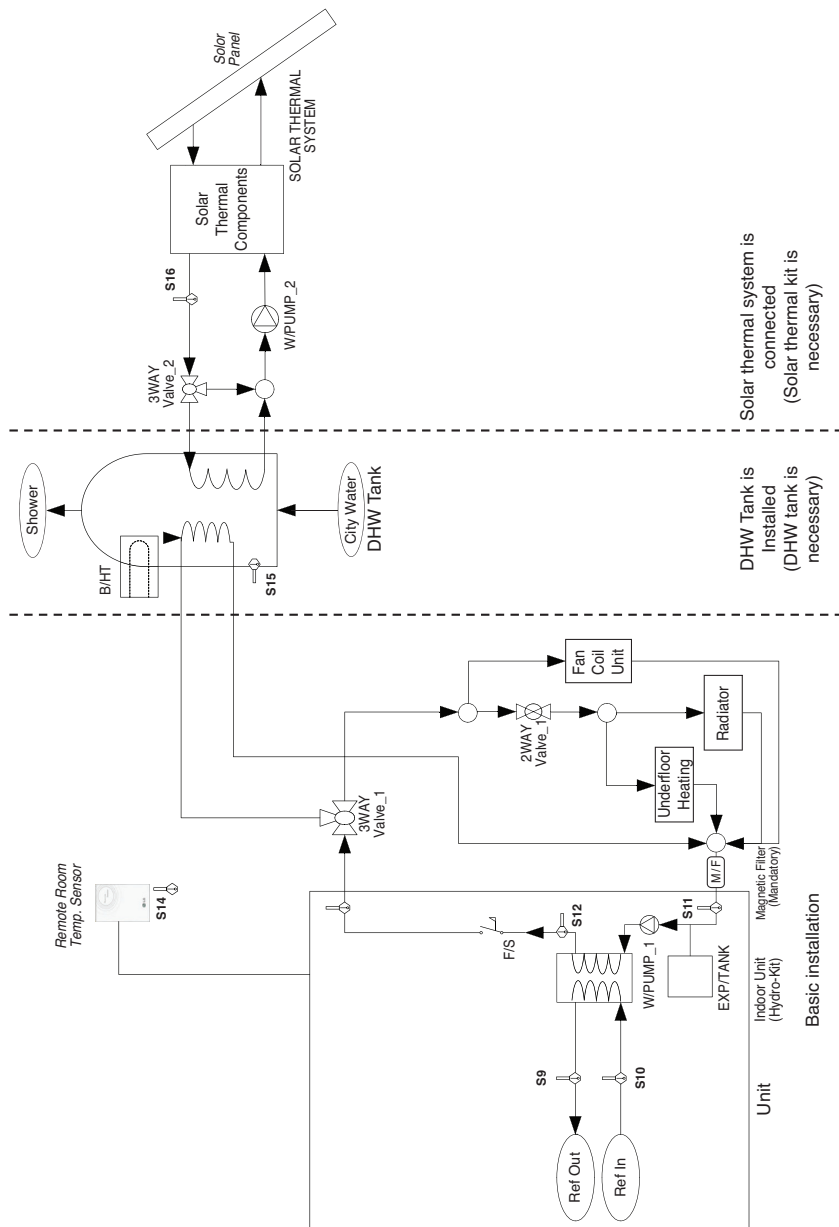

- For 4 Series

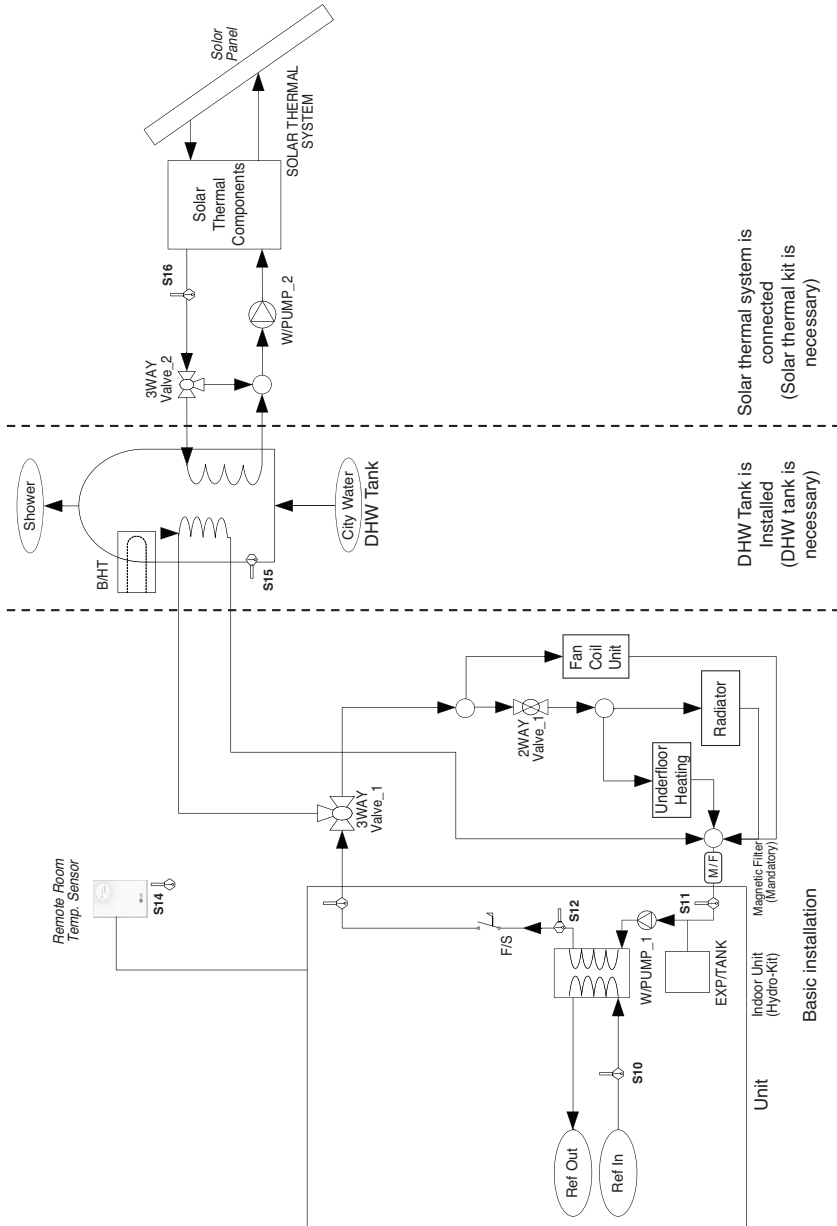



Description

Category	Symbol	Meaning	PCB Connector	Remarks
Unit	S9	Refrigerant temperature sensor (Gas side)	CN_PIPE_OUT	- Meaning is expressed based on Cooling mode.
	S10	Refrigerant temperature sensor (Liquid side)	CN_PIPE_IN	
	S11	Water temperature sensor (Water In)	Water_IN	
	S12	Water temperature sensor (Water Out)	Water_OUT	
	F/S	Flow Switch	CN_FLOW1	
	E/HT	Electric Heater	CN_E/HEAT(A) CN_E/HEAT(B)	<ul style="list-style-type: none"> - Optional accessory (sold separately) - Model : HA**1A E1 - Heating capacity is divided into two level : partial capacity by E/HEAT(A) and full capacity by E/HEAT(A) + E/HEAT(B). - Operating power(220-240 V~ 50 Hz) of E/HEAT(A) and E/HEAT(B) are supplied by external power source via relay connector and ELB.
	W_PUMP1	Internal Water Pump	CN_MOTOR1	- Water Pump is connected at CN_MOTOR1
	EXP/TANK	Expansion Tank	(no connector)	- Absorb volume change of heated water,
	S14	Remote Air temperature sensor	CN_ROOM	<ul style="list-style-type: none"> - Optional accessory (sold separately) - Model : PQRSTA0
	CTR/PNL	Remote Controller	CN_REMO	
	2WAY Valve_1	To control water flow for Fan Coil Unit	CN_2WAY(A)	<ul style="list-style-type: none"> - 3rd party accessory and Field installation (sold separately) - 2 wire NO or NC type 2way valve is supported.
Water Heating	M / F	Magnetic Filter	(No connector)	<ul style="list-style-type: none"> - 3rd party accessory and Field installation (sold separately) - It is Mandatory to install an additional filter on the heating water circuit.
	W/TANK	DHW Tank	(no connector)	<ul style="list-style-type: none"> - 3rd party accessory and Field installation (sold separately) - Generating and storing DHW by AWHP or built-in electric heater
	B/HT	Booster heater(in DHW tank)	CN_B/HEAT(A)	<ul style="list-style-type: none"> - 3rd party accessory and Field installation (usually built-in at W/TANK) - Supplying additional water heating capacity.
	3WAY Valve_1	<ul style="list-style-type: none"> - Flow control for water which is leaving from unit. - Flow direction switching between underfloor and water tank 	CN_3WAY(A)	<ul style="list-style-type: none"> - 3rd party accessory and Field installation (sold separately) - SPDT type 3way valve is supported.
	CITY WATER	Water to be heated by Indoor unit and B/HT of W/TANK	(no connector)	- Field installation
	SHOWER	Water supplied to end-user	(no connector)	- Field installation
	S15	W/TANK water temperature sensor	CN_TH4	<ul style="list-style-type: none"> - S15 and S16 are connected at 4 pin type connector CN_TH4. - S15 is a part of DHW tank kit.(Model : PHLTB) - S16 is a part of solar thermal kit (Model:PHLLA)
	S16	Solar-heated water temperature sensor		
	3WAY Valve_2	<ul style="list-style-type: none"> - Flow control for water which is heated and circulated by SOLAR THERMAL SYSTEM. - Flow direction switching between SOLAR THERMAL SYSTEM and W/TANK 	CN_3WAY(B)	<ul style="list-style-type: none"> - 3rd party accessory and Field installation (sold separately) - SPDT type 3way valve is supported.
	W_PUMP/2	External Water Pump	CN_W/PUMP(B)	<ul style="list-style-type: none"> - 3rd party accessory and Field installation (sold separately) - If water pump of SOLAR THERMAL SYSTEM is incapable of circulation,external water pump can be used.
Solar Heating	SOLAR THERMAL SYSTEM	<ul style="list-style-type: none"> - This system can include following components : Solar panel, Sensors, Thermostats, Interim heat exchanger, Water pump, etc. - To utilized hot water heated by SOLAR THERMAL SYSTEM, end-user must by LG AWHP Solar-Kit. 	(no connector)	- 3 rd party accessory and Field installation (sold separately)


INSTALLATION

Transporting the Unit


- When carrying the suspended unit, pass the ropes between legs of base panel under the unit.
- Always lift the unit with ropes attached at four points so that impact is not applied to the unit.
- Attach the ropes to the unit at an angle \textcircled{A} of 40° or less.
- Use only accessories and parts which are of the designated specification when installing.
- Forklift trucks are not available without a palette.
- Be careful not to damage the product when moving the forklift.

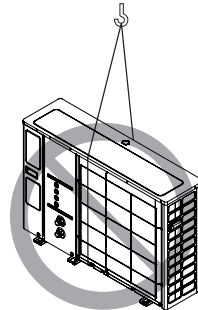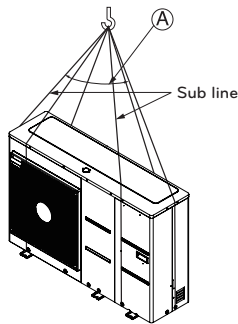

\textcircled{A} 40° or less

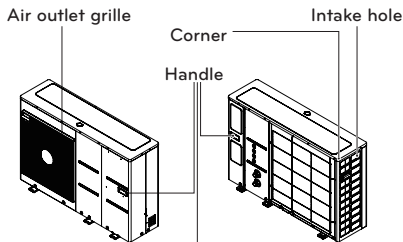


Always hold the unit by the corners, as holding it by the side intake holes on the casing may cause them to deform.

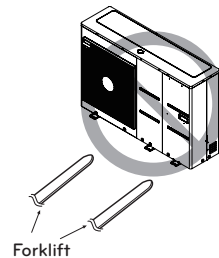

Installation places

- If an awning is built over the unit to prevent direct sunlight or rain exposure, make sure that heat radiation from the condenser is not restricted.
- Ensure that the spaces indicated by arrows around front, back and side of the unit.
- Do not place animals and plants in the path of the warm air.
- Take the Unit weight into account and select a place where noise and vibration are minimum.
- Select a place so that the warm air and noise from the air conditioner do not disturb neighbors.
- Place that can sufficiently endure the weight and vibration of the outdoor unit and where even installation is possible
- Place that has no direct influence of snow or rain
- Place with no danger of snowfall or icicle drop
- Place without weak floor or base such as decrepit part of the building or with a lot of snow accumulation
- In places where there is a lot of snow, place the unit higher than the snow can be accumulated.

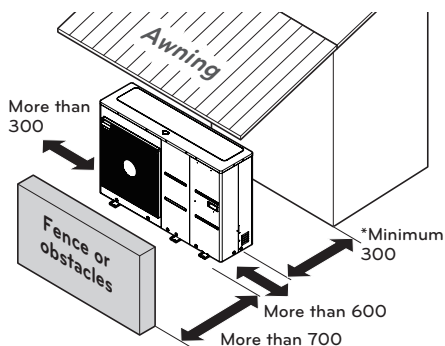

Unit : mm

CAUTION

Be very careful while carrying the product.


- Do not have only one person carry product if it is more than 20 kg.
- PP bands are used to pack some products. Do not use them as a mean for transportation because they are dangerous.
- Do not touch heat exchanger fins with your bare hands. Otherwise you may get a cut in your hands.
- Tear plastic packaging bag and scrap it so that children cannot play with it. Otherwise plastic packaging bag may suffocate children to death.
- When carrying in Unit, be sure to support it at four points. Carrying in and lifting with 3-point support may make Outdoor Unit unstable, resulting in a fall.
- Use 2 belts of at least 8 m long.
- Place extra cloth or boards in the locations where the casing comes in contact with the sling to prevent damage.
- Hoist the unit making sure it is being lifted at its center of gravity.

Multiple installation

When installing two or more units, please observe the installation space.


- If there is an obstruction in the intake

Unit : mm

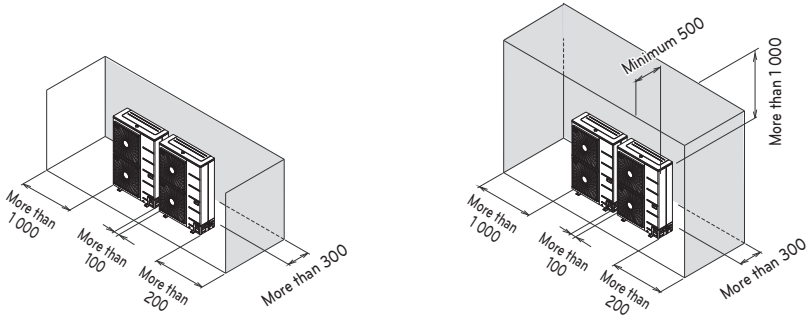


- If there is an obstruction in the discharge part

Unit : mm

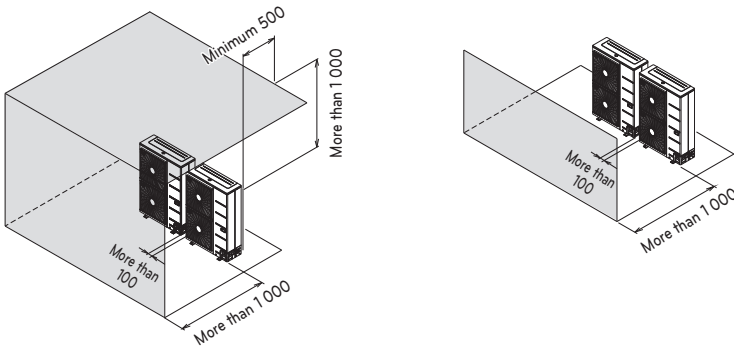


- When there is an obstacle in the suction or discharge part

Unit : mm

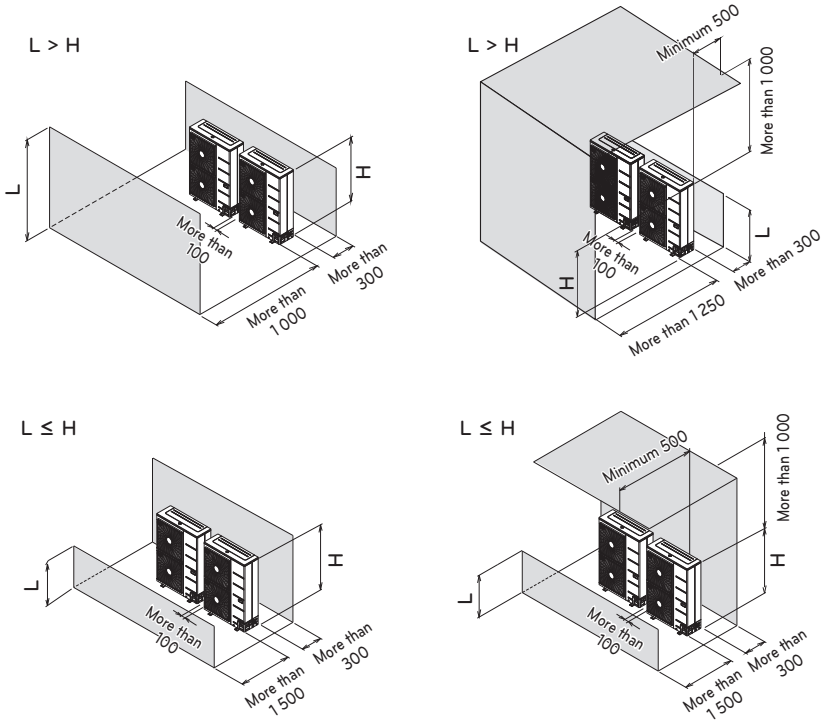

- Multiple installation on the roof

Unit : mm

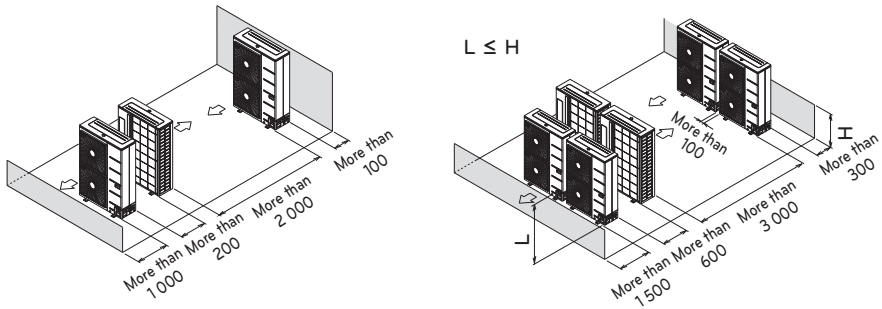


Installation at Seaside

⚠ CAUTION


- Unit should not be installed in areas where corrosive gases, such as acid or alkaline gas, are produced.
- Do not install the unit where it could be exposed to sea wind (salty wind) directly. It can result corrosion on the unit. Corrosion, particularly on the condenser and evaporator fins, could cause unit malfunction or inefficient performance.
- If unit is installed close to the seaside, it should avoid direct exposure to the sea wind. Otherwise it needs additional anticorrosion treatment on the heat exchanger.

Selecting the location

- If the unit is to be installed close to the seaside, direct exposure to the sea wind should be avoided. Install the unit on the opposite side of the sea wind direction.

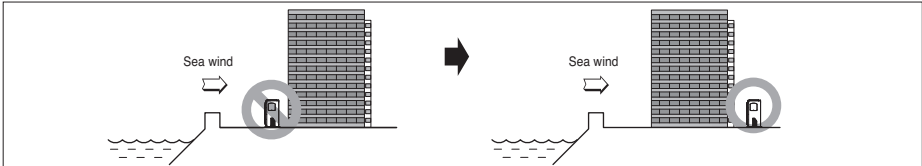

- In case, to install the unit on the seaside, set up a windbreak not to be exposed to the sea wind.

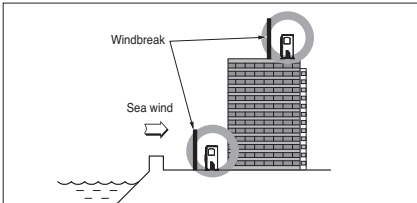

- It should be strong enough like concrete to prevent the sea wind from the sea.
- The height and width should be more than 150 % of the unit.
- It should be keep more than 700 mm of space between unit and the windbreak for easy air flow.

- Select a well-drained place.



- If you can't meet above guide line in the seaside installation, please contact your supplier for the additional anticorrosion treatment.
- Periodic (more than once/year) cleaning of the dust or salt particles stuck on the heat exchanger by using water

Seasonal Wind and Cautions in Winter

- Sufficient measures are required in a snow area or severe cold area in winter so that unit can be operated well.
- Get ready for seasonal wind or snow in winter even in other areas.
- Install a suction and discharge duct not to let in snow or rain.
- Install the unit not to come in contact with snow directly. If snow piles up and freezes on the air suction hole, the system may malfunction. If it is installed at snowy area, attach the hood to the system.
- Install the unit at the higher installation console by 500 mm than the average snowfall (annual average snowfall) if it is installed at the area with much snowfall.
- Where snow accumulated on the upper part of the unit by more than 100 mm, always remove snow for operation.
 - The height of H frame must be more than 2 times the snowfall and its width shall not exceed the width of the unit. (If width of the frame is wider than that of the unit, snow may accumulate.)
 - Don't install the suction hole and discharge hole of the unit facing the seasonal wind.

Foundation for Installation

- Check the strength and level of the installation ground so that the unit will not cause any operating vibration or noise after installation.
- Fix the unit securely by means of the foundation bolts. (Prepare 6sets of M12 foundation bolts, nuts and washers each which are available on the market.)
- It is best to screw in the foundation bolts until their length are 20 mm from the foundation surface.
- When installing the unit on the ground, install a separate pedestal with enough height to install the drain nipple.

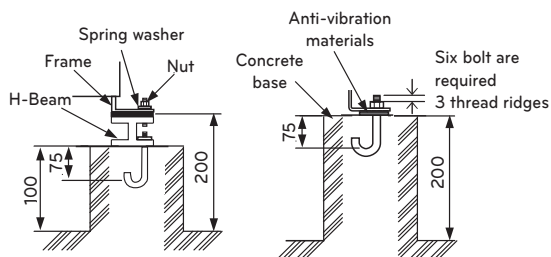
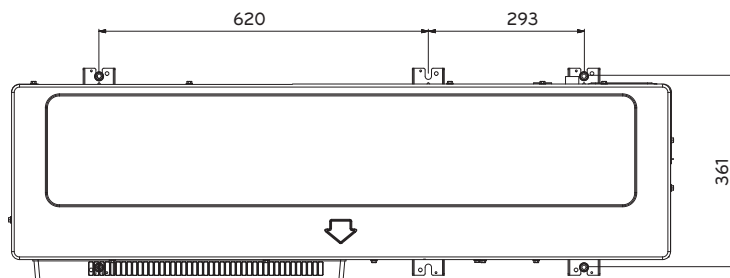


[Unit:mm]

Foundation bolt executing method

! WARNING

- Be sure to remove the Pallet(Wood Support) of the bottom side of the unit Base Pan before fixing the bolt. It may cause the unstable state of the unit settlement, and may cause freezing of the heat exchanger resulting in abnormal operations.
- Be sure to remove the Pallet(Wood Support) of the bottom side of the unit before welding. Not removing Pallet(Wood Support) causes hazard of fire during welding.

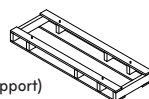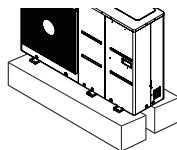

Pallet(Wood Support)
- Remove before Installation

Electrical Wiring

- Follow ordinance of your governmental organization for technical standard related to electrical equipment, wiring regulations and guidance of each electric power company.

WARNING

- Be sure to have authorized electrical engineers do the electric work using special circuits in accordance with regulations and this installation manual. If power supply circuit has a lack of capacity or electric work deficiency, it may cause an electric shock or fire.
- Install the Unit transmission line away from the power source wiring so that it is not affected by electric noise from the power source. (Do not run it through the same conduit.)
- Be sure to provide designated grounding work to Unit.

CAUTION

- Be sure to correct the unit to earth. Do not connect earth line to any gas pipe, liquid pipe, lightning rod or telephone earth line. If earth is incomplete, it may cause an electric shock.
- Give some allowance to wiring for electrical part box of Units, because the box is sometimes removed at the time of service work.
- Never connect the main power source to terminal block of transmission line. If connected, electrical parts will be burnt out.
- Only the transmission line specified should be connected to the terminal block for Unit transmission.

CAUTION

- This product have reversed phase protection detector that only works when the power is turned on. If there exists black out or the power goes on and off which the product is operating, attach a reversed phase protection circuit locally. running the product in reversed phase may break the compressor and other parts.
- Use the 2-core shield cables for communication lines. Never use them together with power lines.
- The conductive shielding layer of cable should be grounded to the metal part of both units.
- Never use multi-core cable
- As this unit is equipped with an inverter, to install a phase leading capacitor not only will deteriorate power factor improvement effect, but also may cause capacitor abnormal heating. Therefore, never install a phase leading capacitor.
- Make sure that the power unbalance ratio is not greater than 2 %. If it is greater, the unit's lifespan will be reduced.
- Introducing with a missing N-phase or with a mistaken N-phase will break the equipment

! CAUTION


The power cable connected to the unit should be complied with IEC 60245 or HD 22.4 S4 (This equipment shall be provided with a cable set complying with the national regulation. Pipes and wires should be purchased separately for installation of the product.)

Select a circuit breaker and power cable suitable for the current specification.


Factory Model Name	Buyer Model Name	Phase[Ø]	Capacity [kW]	ELCB
ZHBW056A0	HM051M U43	1	5	16 A
ZHBW076A0	HM071M U43		7	20 A
ZHBW096A0	HM091M U43		9	25 A
ZHBW096S0	HM091MRS U33	1	9	16 A
ZHBW126A0	HM121M U33		12	40 A
ZHBW146A0	HM141M U33		14	40 A
ZHBW166A0	HM161M U33		16	40 A
ZHBW128A0	HM123M U33	3	12	16 A
ZHBW148A0	HM143M U33		14	16 A
ZHBW168A0	HM163M U33		16	16 A
ZHBW056A1	HM051MR U44	1	5	16 A
ZHBW076A1	HM071MR U44		7	20 A
ZHBW096A1	HM091MR U44		9	25 A
ZHBW126A1	HM121MR U34	1	12	40 A
ZHBW146A1	HM141MR U34		14	40 A
ZHBW166A1	HM161MR U34		16	40 A
ZHBW128A1	HM123MR U34	3	12	16 A
ZHBW148A1	HM143MR U34		14	16 A
ZHBW168A1	HM163MR U34		16	16 A

Power cable (Type : H07RNF)	
Current [A]	Area [mm ²]
[A] ≤ 0.2	Tinsel cord ^a
0.2 < [A] ≤ 3	0.5 ^a
3 < [A] ≤ 6	0.75
6 < [A] ≤ 10	1.0 (0.75) ^b
10 < [A] ≤ 16	1.5 (1.0) ^b
16 < [A] ≤ 25	2.5
25 < [A] ≤ 32	4
32 < [A] ≤ 40	6
40 < [A] ≤ 63	10

- a These cords may only be used if their length does not exceed 2 m between the point where the cord or cord guard enters the appliance and the entry to the plug.
- b Cords having the cross-sectional areas indicated in the parentheses may be used for portable appliances if their length does not exceed 2 m.

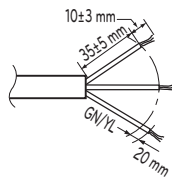


For the 1-Phase

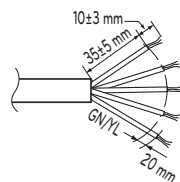

For the 3-Phase

Precautions when laying power wiring


Use round pressure terminals for connections to the power terminal block.

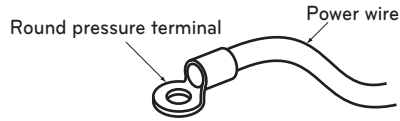


When none are available, follow the instructions below.

- Do not connect wiring of different thicknesses to the power terminal block. (Slack in the power wiring may cause abnormal heat.)
- When connecting wiring which is the same thickness, do as shown in the figure below.

Connect same thickness wiring to both sides.

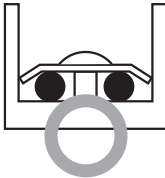

It is forbidden to connect two to one side.

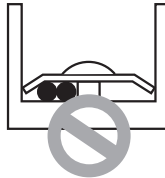

It is forbidden to connect wiring of different thicknesses.



- For wiring, use the designated power wire and connect firmly, then secure to prevent outside pressure being exerted on the terminal block.
- Use an appropriate manual screwdriver instead of electric screwdriver for tightening the terminal screws. A screwdriver with a small head will strip the head and make proper tightening impossible.
- Over-tightening the terminal screws may break them.

! WARNING

- Make sure that the screws of the terminal are free from looseness.

Point for attention regarding quality of the public electric power supply (For 3 Series)

- European/International Technical Standard setting the limits for voltage changes, voltage fluctuations and flicker in public low-voltage supply systems for equipment with rated current ≤ 75 A.
- European/International Technical Standard setting the limits for harmonic currents produced by equipment connected to public low-voltage systems with input current ≤ 16 A or > 75 A per phase.

For 1 Phase (12, 14, 16 kW)

- This equipment complies with IEC (EN) 61000-3-12 in harmonic currents emission limits corresponding $R_{sce} = 33$.
- This equipment complies with reference impedance for IEC (EN) 61000-3-3.

For 3 Phase (12, 14, 16 kW)

- This equipment complies with IEC (EN) 61000-3-12 provided that the short-circuit power S_{sc} is greater than or equal to 2067 kVA at the interface point between the user's supply and the public system. It is the responsibility of the installer or user of the equipment to ensure, by consultation with the distribution network operator if necessary, that the equipment is connected only to a supply with a short-circuit power S_{sc} greater than or equal to 2067 kVA.
- This equipment complies with IEC (EN) 61000-3-3.

For 1 Phase (5,7, 9 kW)

- This equipment complies with IEC (EN) 61000-3-12 in harmonic currents emission limits corresponding $R_{sce} = 33$.
- This equipment complies with IEC (EN) 61000-3-3.

Point for attention regarding quality of the public electric power supply (For 4 Series)

- European/International Technical Standard setting the limits for voltage changes, voltage fluctuations and flicker in public low-voltage supply systems for equipment with rated current ≤ 75 A.
- European/International Technical Standard setting the limits for harmonic currents produced by equipment connected to public low-voltage systems with input current ≤ 16 A or > 75 A per phase.

For 1 Phase (12, 14, 16 kW)

- This equipment complies with IEC (EN) 61000-3-12 in harmonic currents emission limits corresponding $R_{sce} = 33$.
- This equipment complies with reference impedance for IEC (EN) 61000-3-11.

For 3 Phase (12, 14, 16 kW)

- This equipment complies with IEC (EN) 61000-3-12 provided that the short-circuit power S_{sc} is greater than or equal to 2672 kVA at the interface point between the user's supply and the public system. It is the responsibility of the installer or user of the equipment to ensure, by consultation with the distribution network operator if necessary, that the equipment is connected only to a supply with a short-circuit power S_{sc} greater than or equal to 2672 kVA.
- This equipment complies with IEC (EN) 61000-3-3.

For 1 Phase (5,7 kW)

- This equipment complies with IEC (EN) 61000-3-2.
- This equipment complies with IEC (EN) 61000-3-3.


For 1 Phase (9 kW)

- This equipment complies with IEC (EN) 61000-3-12 in harmonic currents emission limits corresponding $R_{sce} = 33$.
 - This equipment complies with IEC (EN) 61000-3-3.
-

Circuit Breaker Specification

Perform the electrical wiring work according to the electrical wiring connection.

- All wiring must comply with local requirements.
- Select a power source that is capable of supplying the current required by the appliance.
- Use a recognized ELCB(Electric Leakage Circuit Breaker) between the power source and the unit. A disconnection device to adequately disconnect all supply lines must be fitted.
- Model of circuit breaker recommended by authorized personnel Only.
- Select a circuit breaker suitable for the current specification.

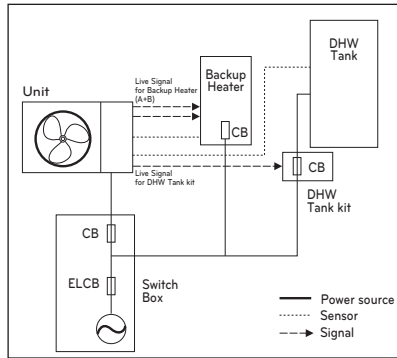

*CB : Circuit Breaker

*ELCB : Electric Leakage Circuit Breaker

Wiring procedure for power cable


This cable is generally connected between external power source (such as main electric power distribution panel of user's house) and the unit. Before starting wiring, check if wire specification is suitable and read following directions and cautions VERY carefully.

CAUTION


After checking and confirming following conditions, start wiring work.

- Secure dedicated power source for the Air-to-Water heat pump. The wiring diagram (attached inside the control box of the unit) is presenting related information.
- Provide a circuit breaker switch between power source and the outdoor unit.
- Although it is very rare case, sometimes the screws used to fasten internal wires can be loosen due to the vibration while product transportation. Check these screws and make it sure if they are all fastened tightly. If not tightened, burn-out of the wire can be occurred.
- Check the specification of power source such as phase, voltage, frequency, etc.
- Confirm that electrical capacity is sufficient.
- Be sure that the starting voltage is maintained at more than 90 percent of the rated voltage marked on the name plate.
- Confirm that the cable thickness is as specified in the power sources specification. (Particularly note the relation between cable length and thickness.)
- Provide an ELB(electric leakage breaker) when the installation place is wet or moist.
- The following troubles would be caused by abnormal voltage supply such as sudden voltage increasing or voltage drop-down.
 - Chattering of a magnetic switch (frequent on and off operation)
 - Physical damage of parts where magnetic switch is contacted
 - Break of fuse
 - Malfunction of overload protection parts or related control algorithms.
 - Failure of compressor start up
 - Ground wire to ground outdoor unit to prevent electrical shock.


Step 1. Disassemble side panel and front panel from the unit by loosening screws.

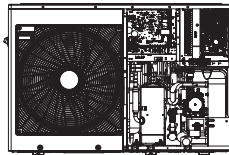

UN36A (5, 7, 9 kW)

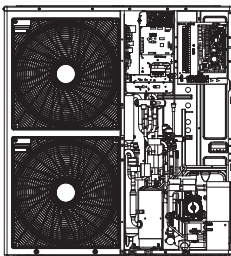

UN60A(1Ø : 9, 12, 14, 16 kW)

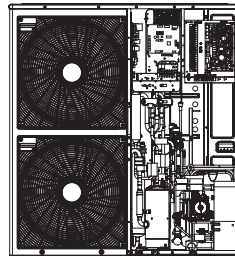


UN60A(3Ø : 12, 14, 16 kW)


* The feature may be vary according to the type of model.

Step 2. Connect power cable to main power terminal


See below figure for detailed information. When connecting earth cable, the diameter of cable should refer to the below table. The earth cable is connected to the Control box case where earth symbol is \oplus marked.

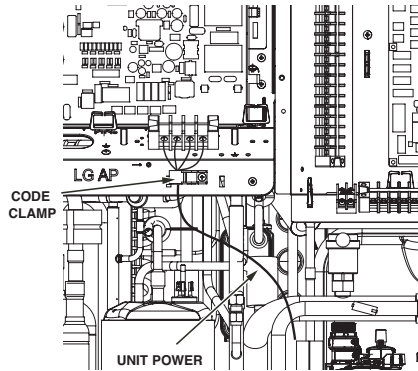Step 3. Use cable clamps (or cord clamps) to prevent unintended move of power cable.**Step 4.** Reassemble the side panel to the unit by fastening screws.

UN36A (5, 7, 9 kW)

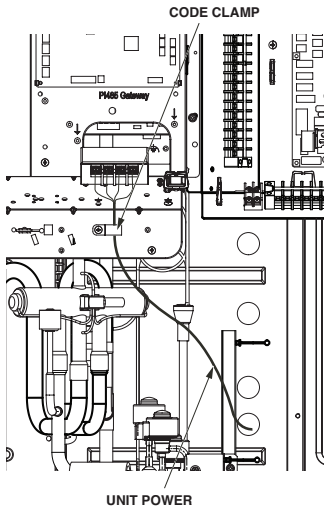

UN60A(1Ø : 9, 12, 14, 16 kW)

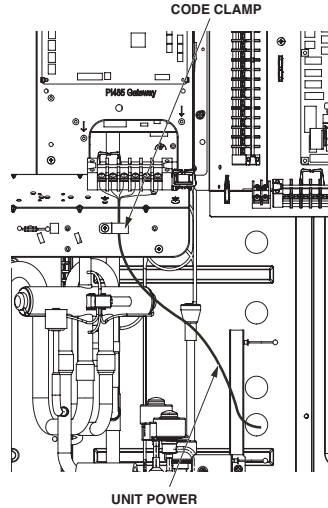

UN60A(3Ø : 12, 14, 16 kW)

Failure to do these instruction can result in fire, electric shock or death.

- Make sure the power cable do not touch to copper tube.
- Make sure to fix [cord clamp] firmly to sustain the connection of terminal.
- Make sure to connect unit power & heater power separately.

* The feature may be vary according to the type of model.

Terminal Block Information

- For 3 Series

Symbols used below pictures are as follows :


- L, L1, L2 : Live (220-240 V~)

- N : Neutral (220-240 V~)

- BR : Brown, WH : White, BL : Blue, BK : Black


Case 1 (From September, 2020)

Terminal Block 1

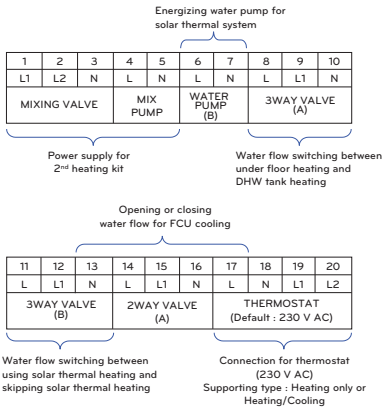


Case 2 (Until August, 2020)


Terminal Block 1

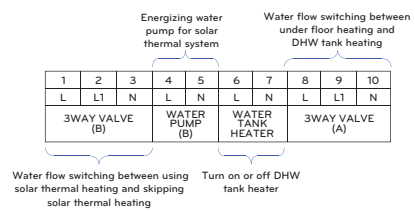


Terminal Block 2

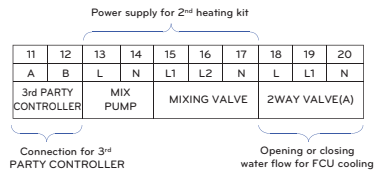


Terminal Block 2

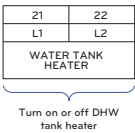


Terminal Block 3

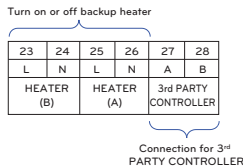


Terminal Block 3

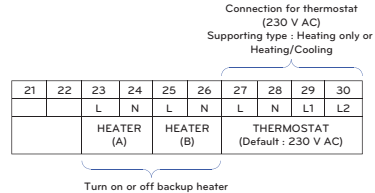

Terminal Block 4

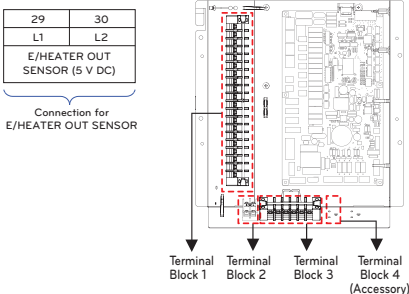

Terminal Block 4

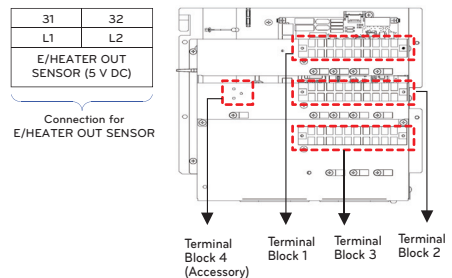

✱ Refer to Terminal Block Information according to the C/Box shape.

- For 4 Series

Symbols used below pictures are as follows :

- L, L1, L2 : Live (220-240 V~)
- N : Neutral (220-240 V~)
- BR : Brown, WH : White, BL : Blue, BK : Black

Terminal Block 1

1	2	3	4	5	6	7	8	9
L	L1	N	L	L1	N	L	L1	N
MIXING VALVE			2WAY VALVE (A)			3WAY VALVE (A)		

Power supply for
2nd heating kit


Water flow switching between
under floor heating and
DHW tank heating

Energizing water pump for
solar thermal system

10	11	12	13	14	15	16	17	18	19	20
L	L1	N	L	N	L	N	L	N	L	N
3WAY VALVE (B)			WATER TANK HEATER		WATER PUMP(B)		MIX PUMP		WATER PUMP(C)	

Water flow switching between
using solar thermal heating and
skipping solar thermal heating

Power supply for
2nd heating kit

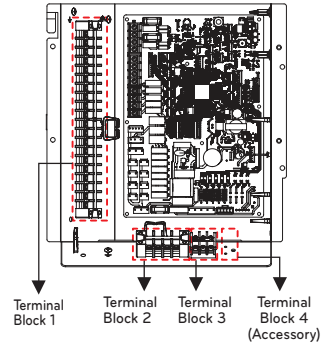

Terminal Block 2

Terminal Block 3

21	22	23	24	25	26	27
L	N	L1	L2	L3	A	B
THERMOSTAT (Default : 230 V AC)					3rd PARTY CONTROLLER (5V DC)	

Connection for thermostat
(230 V AC)
Supporting type : Heating
only or Heating/Cooling

Connection for 3rd
PARTY CONTROLLER

Terminal Block 4

28	29
L1	L2
E/HEATER OUT SENSOR (5 V DC)	

Connection for
E/HEATER OUT SENSOR

✱ Refer to Terminal Block Information according to the C/Box shape.

Wiring of main power supply and equipment capacity

1. Use a separate unit power and heater power.
2. Bear in mind ambient conditions (ambient temperature, direct sunlight, rain water, etc.) when proceeding with the wiring and connections.
3. The wire size is the minimum value for metal conduit wiring. The power cord size should be 1 rank thicker taking into account the line voltage drops. Make sure the power-supply voltage does not drop more than 10 %.
4. Specific wiring requirements should adhere to the wiring regulations of the region.
5. Power supply cords of parts of appliances for unit use should not be lighter than polychloroprene sheathed flexible cord.
6. Don't install an individual switch or electrical outlet to disconnect each of unit separately from the power supply.

WARNING

- Follow ordinance of your governmental organization for technical standard related to electrical equipment, wiring regulations and guidance of each electric power company.
- Make sure to use specified wires for connections so that no external force is imparted to terminal connections. If connections are not fixed firmly, it may cause heating or fire.
- Make sure to use the appropriate type of overcurrent protection switch. Note that generated overcurrent may include some amount of direct current.

CAUTION

- Some installation site may require attachment of an earth leakage breaker. If no earth leakage breaker is installed, it may cause an electric shock.
- Do not use anything other than breaker and fuse with correct capacity. Using fuse and wire or copper wire with too large capacity may cause a malfunction of unit or fire.

Water Piping and Water Circuit Connection

CAUTION

Followings are should be considered before beginning water circuit connection.

- Service space should be secured.
- Water pipes and connections should be cleaned using water.
- Space for installing external water pump should be provided if internal water pump capacity is not enough for installation field.
- Never connect electric power while proceeding water charging.

Definition of terms are as follow :

- Water piping : Installing pipes where water is flowing inside the pipe.
- Water circuit connecting : Making connection between the unit and water pipes or between pipes and pipes. Connecting valves or elbows are, for example, in this category.


Configuration of water circuit is shown in "Installation Scenes". All connections should be complied with presented diagram.

While installing water pipes, followings should be considered :

- While inserting or putting water pipes, close the end of the pipe with pipe cap to avoid dust entering.
- When cutting or welding the pipe, always be careful that inner section of the pipe should not be defective. For example, no weldments or no burrs are found inside the pipe.
- Drain piping should be provided in case of water discharge by operation of the safety valve, drain from condensate, and snow or rain.
This situation can be happened when the internal pressure is over 3.0 bar and water inside the unit will be discharged to drain hose.
- In a cold climate region, water drainage must be frost-proof.
- Pipe fittings (e.g. L-shape elbow, T-shape tee, diameter reducer, etc) should be tightened strongly to be free from water leakage.
- Connected sections should be leakage-proof treatment by applying tefron tape, rubber bushing, sealant solution, etc.
- Appropriate tools and tooling methods should be applied to prevent mechanical breakage of the connections.
- Operation time of flow valve(e.g. 3way valve or 2way valve) should be less than 90 seconds.
- While supplying water, pressure of supplying water should be 2.0 bar approximately.
- Pipe is insulated to prevent heat loss to external environment and to prevent dew generation on the surface of the pipe in cooling operation.
- Maximum allowable Torque at the water piping connection is 50 N·m

When the water pipes are connected. It must be tightened the nut with two wrench. Otherwise pipes can be deformed.

* The feature may be vary according to the type of model.

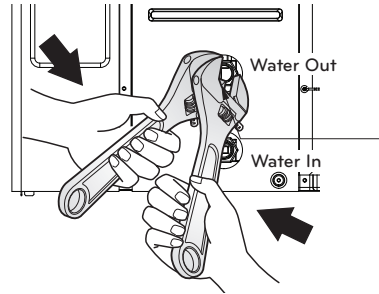

! WARNING

Installing shut-off valve

- While assembling two shut-off valves, pop sound will be heard when valve is open or close by rotating handles. It is normal condition because the sound is due to leakage of charged nitrogen gas inside the valve. The nitrogen gas is applied to secure quality assurance.
- Before starting water charging, these two shut-off valves should be assembled with water inlet and outlet pipe of the unit.

Water condensation on the floor

While cooling operation, it is very important to keep leaving water temperature higher than 16 °C. Otherwise, dew condensation can be occurred on the floor.

If floor is in humid environment, do not set leaving water temperature below 18 °C.

Water condensation on the radiator

While cooling operation, cold water may not flow to the radiator. If cold water enters to the radiator, dew generation on the surface of the radiator can be occurred.

Pipe Insulation

Purpose of water pipe insulation is :

- To prevent heat loss to external environment.
- To prevent dew generation on the surface of the pipe in cooling operation.
- To prevent pipe breakage by freeze at winter season.
- Minimum insulation thickness recommendations ensure correct operation of the product, but local regulations may vary and must be followed.

※ Insulation must be done at exterior water pipe, valve and other fittings between product and building.

Water Piping length (m)	Minimum insulation Thickness(mm)
<20	20
20~30	30
30~40	40
40~50	50

* $\lambda = 0.04 \text{ W/mk}$ (Thermal conductivity of pipe insulation)

Water Charging

For water charging, please follow below procedures.

- Step 1.** Open all valves of whole water circuit. Supplied water should be charged not only inside the unit, but also in the under floor water circuit, DHW water tank circuit, FCU water circuit, and any other water circuits controlled by the product.
- Step 2.** Connect supply water into drain valve and fill valve located at the side of the shut-off valve.



CAUTION

No water-leakage permitted at the drain and fill valve. Leakage-proof treatment which is described in previous section should be applied.

- Step 3.** Start to supply water. While supplying water, following should be kept.
- Pressure of supplying water should be pre-adjust value approximately.
 - For supplying water pressure, time to be taken from 0 bar to pre-adjust value should be more than 1 minute. Sudden water supply can yield water drain through safety valve.
 - Fully open the cap of air vent to assure air purging. If air is exist inside the water circuit, then performance degrade, noise at the water pipe, mechanical damage at the surface of electric heater coil.
 - Open both the air vent in the water pipe and the air vent in the pump.
- Step 4.** Stop water supplying when the pressure gauge located in front of the control panel indicates pre-adjust value.(For 3 Series)
Stop water supplying when the pressure located in remote control indicates pre-adjust value.(For 4 Series)
- Step 5.** Close drain valve and fill valve. Then wait for 20~30 seconds to observe water pressure being stabilized.
- Step 6.** If following conditions are satisfactory, then go to Next process(Pipe Insulation). Otherwise, go to step 3.
- Pressure gage indicates pre-adjust value. Note that sometimes pressure in decreased after step 5 due to water charging inside expansion vessel.
 - No air purging sound is heard or no water drop are popping out from air vent.



CAUTION

Keep the air vent of the water pipe open and keep the air vent of the pump closed. Otherwise, the pump may make noise.

Water pump Capacity

The water pump is variable type which is capable to change flow rate, so it may be required to change default water pump capacity in case of noise by water flow. In most case, however, it is strongly recommended to set capacity as Maximum.

NOTE

- To secure enough water flow rate, do not set water pump capacity as Minimum. It can lead unexpected flow rate error CH14.

Pressure Drop

NOTE

When installing the product, install additional pump in consideration of the pressure loss and pump performance. If flow rate is low, overloading of product can occur

(For GRUNDFOS Water Pump)


Capacity [kW]	Rated flow-rate [LPM(m ³ /h)]	Pump Head [m] (At rated flow rate)	Product pressure drop [m] (Plate heat exchanger)	Serviceable Head [m]
16	46.0 (2.8)	8.3	1.4	6.9
14	40.25 (2.4)	9.3	1.1	8.2
12	34.5 (2.1)	9.8	0.8	9.0
9	25.87 (1.5)	6.1	0.4	5.7
7	20.12 (1.2)	7.3	0.3	7.0
5	15.8 (0.9)	7.5	0.2	7.3

(For OH SUNG Water Pump)


Capacity [kW]	Rated flow-rate [LPM(m ³ /h)]	Pump Head [m] (At rated flow rate)	Product pressure drop [m] (Plate heat exchanger)	Serviceable Head [m]
16	46.0 (2.8)	8.5	1.4	7.1
14	40.3 (2.4)	9.1	1.1	8.0
12	34.5 (2.1)	9.7	0.8	8.9
9	25.9 (1.5)	10.3	0.4	9.9
7	20.1 (1.2)	10.7	0.3	10.4
5	15.8 (0.9)	10.9	0.2	10.7

Performance curve


GRUNDFOS Water Pump : UPML GEO 20 – 105 CHBL
UN60A (12, 14, 16 kW)

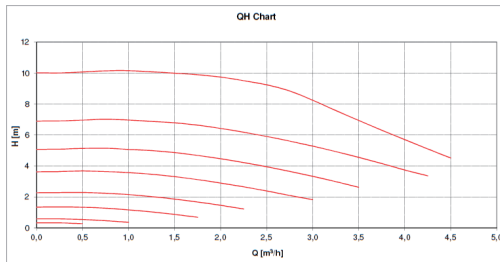

GRUNDFOS Water Pump : UPM3K GEO 20 – 75 CHBL
UN36A (5, 7, 9 kW), UN60A (9 kW)

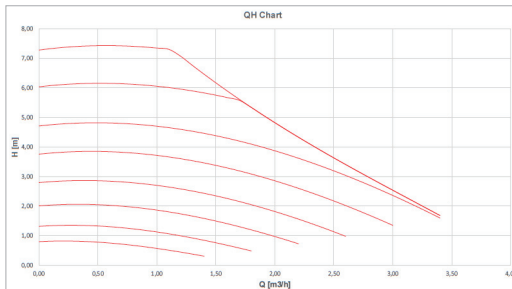

OH SUNG Water Pump : ODM-061P
UN60A (12, 14, 16 kW), UN36A (5, 7, 9 kW)

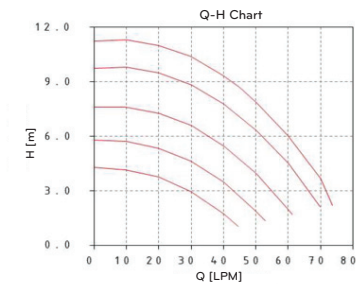

Performance test based on standard ISO 9906 with pre-pressure 2.0 bar and liquid temperature 20 °C.

WARNING

- Selecting a water flowrate outside the curves can cause damage to or malfunction of the unit.

Water Quality

Water quality should be complied with EN 98/83 EC Directives.
Detailed water quality condition can be found in EN 98/83 EC Directives.

CAUTION

- If the product is installed at existing hydraulic water loop, it is important to clean hydraulic pipes to remove sludge and scale.
- Installing sludge strainer in the water loop is very important to prevent performance degrade.
- Chemical treatment to prevent rust should be performed by installer.
- It is strongly recommended to install an additional filter on the heating water circuit. Especially to remove metallic particles from the heating piping, it is advised to use a magnetic or cyclone filter, which can remove small particles. Small particles may damage the unit and will NOT be removed by the standard filter of the heat pump system.

Frost protection by antifreeze

In areas of the country where entering water temperatures drop below 0 °C, the water pipe must be protected by using an approved antifreeze solution. Consult your AWHP unit supplier for locally approved solutions in your area. Calculate the approximate volume of water in the system. (Except the AWHP unit.) And add six liters to this total volume to allow for the water contained in AWHP unit.

Antifreeze type	Antifreeze mixing ratio					
	0 °C	-5 °C	-10 °C	-15 °C	-20 °C	-25 °C
Ethylene glycol	0 %	12 %	20 %	30 %	-	-
Propylene glycol	0 %	17 %	25 %	33 %	-	-
Methanol	0 %	6 %	12 %	16 %	24 %	30 %

If you use frost protection function, change DIP switch setting and input the temperature condition in Installation mode of remote controller. Refer to 'CONFIGURATION > DIP Switch Setting > DIP Switch Information > Option Switch 3' and 'INSTALLER SETTING > Antifreezing Temperature'.

CAUTION

- Use only one of the above antifreeze.
- If a antifreeze is used, pressure drop and capability degradation of the system can be occurred.
- If one of antifreezes is used, corrosion can be occurred. So please add corrosion inhibitor.
- Please check the concentration of the antifreeze periodically to keep same concentration.
- When the antifreeze is used (for installation or operation), take care to ensure that antifreeze must not be touched.
- Ensure to respect all laws and norms of your country about Anti-freeze usage.


Frost protection by antifreeze valve

About antifreeze valve




This is a valve to prevent freeze in winter. When no antifreeze is added to the water, you can use antifreeze valves at all lowest points of the field piping to drain the water from the system before it can freeze

To install antifreeze valve

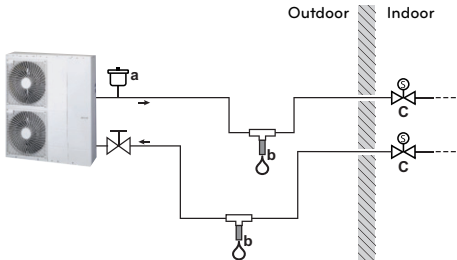To protect the field piping against freezing, install the following parts:




- a Automatic air intake
- b Antifreeze valve (Optional – field supply)
- c Normally closed valves (recommended – field supply)

Part	Description
 a	An automatic air intake (for air supply) should be installed at the highest point. For example, an automatic air purge.
 b	Protection for the field piping. The antifreeze valve must be installed: <ul style="list-style-type: none"> Vertically to allow water to flow out properly and free from obstructions. At all lowest points of the field piping. In the coldest part and away from heat sources.
 c	Isolation of water inside the house when there is a power interruption. Normally closed valves (located indoors near the piping entry/exit points) can prevent that all water from indoor piping is drained when the antifreeze valve open. <ul style="list-style-type: none"> When there is a power interruption: The normally closed valves close and isolate the water inside the house. If the antifreeze valve open, only the water outside the house is drained. In other circumstances (example: when there is a pump failure): The normally closed valves remain open. If the antifreeze valve open, the water from inside the house is also drained.

NOTE

- Do not make any trap connections. If the shape of the connection pipe has the potential to create a trap effect, part of the pipe will not be able to drain and frost protection will no longer be guaranteed.
- Leave at least 15 cm clearance from the ground to prevent ice from blocking the water exit.
- Keep a distance of at least 10 cm between the antifreeze valves.
- The valve must be free of insulation for the system to work properly.
- When antifreeze valves are installed, do NOT select a minimum cooling setpoint lower than 7 °C. If lower, antifreeze valves can open during cooling operation.
- When installed outdoors, the antifreeze valve must be protected from rain, snow and direct sunlight.

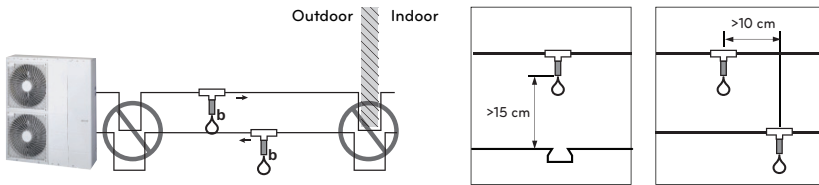


Water Volume and Expansion Vessel Pressure

Inside expansion vessel is included which is 8 liter capacity with 1 bar pre-pressure. That means, according to the volume-pressure graph, total water volume of 230 liter is supported as default. If total water volume is changed because of installation condition, the pre-pressure should be adjusted to secure proper operation.

If	Minimum water volume
The system contains a backup heater	20 L
The system does NOT contain a backup heater	80 L

* The internal water volume of the outdoor unit is NOT included

- Pre-pressure is adjusted by the total water volume. If the indoor is located at the highest position of the water circuit, adjustment is not required.
- To adjust pre-pressure, use nitrogen gas by certificated installer.

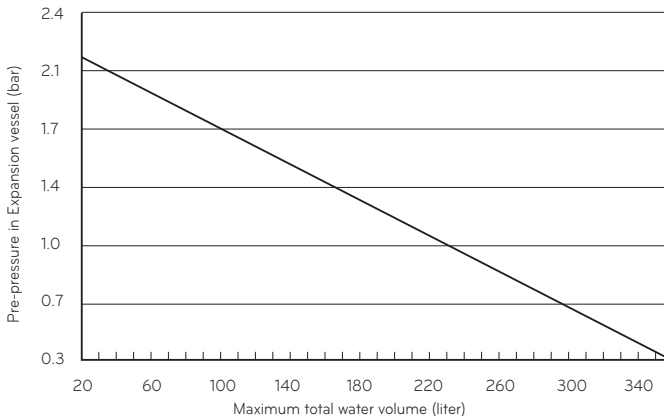

Adjusting pre-pressure of expansion vessel is as following :

Step 1. Refer "Volume-Height" table.

If installation scene is belong to Case A, go to Step 2.

Otherwise, if it is Case B, do nothing. (pre-pressure adjustment is not required.)

Otherwise, if it is Case C, go to Step 3.

Step 2. Adjust pre-pressure by following equation.

$$\text{Pre-pressure [bar]} = (0.1 \times H + 0.3) \text{ [bar]}$$

where H : difference between unit and the highest water pipe

0.3 : minimum water pressure to secure product operation

Step 3. Volume of expansion vessel is less than installation scene.

Please install additional expansion vessel at the external water circuit.

Volume-Height Table

	V < 230 liter	V ≥ 230 liter
H < 7 m	Case B	Case A
H ≥ 7 m	Case A	Case C

H : Difference between unit and the highest water pipe

V : Total water volume of installation scene

ACCESSORIES INSTALLATION

THERMAV. can interface to various accessories to extend its functionality and to improve user convenience. In this chapter, specifications about supported 3rd party accessories and how to connect to **THERMAV.** is introduced.

It is noted that this chapter only deal with 3rd party accessories. For accessories supported by LG Electronics, please refer to installation manual of each accessories.

Accessories supported by LG Electronics

Item	Purpose	Model
DHW Tank Install Kit	To operate with DHW tank	PHLTB
Thermistor for DHW Tank	To control hot water temperature of DHW tank	PHRSTA0
Remote Temperature Sensor	To control by air temperature	PQRSTA0
Dry Contact	To receive on & off external signal	PDRYCB000
	Dry contact for thermostat	PDRYCB300
Solar thermal Kit	To operate with solar heating system	PHLLA(Limit temperature : 96 °C)
Meter Interface	To measure production / consumption power	PENKTH000
Central Controller	Multiple installed products into one central control	AC EZ Touch (PACEZA000) AC Smart IV (PACS4B000) AC Smart 5 (PACS5A000) ACP 5 (PACP5A000) AC Manager 5 (PACM5A000)
Backup heater	To supplement insufficient capacity	HA031M E1 / HA061M E1 / HA063M E1
Thermistor for 2nd Circuit	To interlock with 2nd circuit operation and control temperature of main zone.	PRSTAT5K10
Extension wire	To connect remote controller with Indoor PCB for communication	PZCWRC1
PI485	To communicate and control through the central controller	For 3 Series: PMNFP14A1 For 4 Series: PP485A00T
ESS	To control the operation mode according to the energy storage state	HOME 8 (PCS) : D008KE1N211 HOME10(PCS) : D010KE1N211 HB7H(Battery) : BLGRESU7H HB10H(Battery) : BLGRESU10H

Item	Purpose	Model
DHW Tank	To generate and store hot water	OSHW-200F : 200 L, Single Heating Coil, 1Ø 230 V 50 Hz 2.4 kW Booster heater OSHW-300F : 300 L, Single Heating Coil, 1Ø 230 V 50 Hz 2.4 kW Booster heater OSHW-500F : 500 L, Single Heating Coil, 1Ø 230 V 50 Hz 2.4 kW Booster heater OSHW-300F : 300 L, Double Heating Coil, 1Ø 230 V 50 Hz 2.4 kW Booster heater
Cloud Gateway	To use Becon cloud	PWFMDB200
Wi-Fi Modem	To enable remote system operation from smartphone	PWFMDD200
Extension cable for Wi-Fi Modem	To connect with Wi-Fi modem to the USB cable	PWYREW000
Thermistor for 2nd Circuit or E/Heater	To interlock with 2nd circuit operation and control temperature of main zone or To interlock with 3rd party E/Heater and control temperature of water out 3rd party E/Heater.	PRSTAT5K10
RS3 remote controller	To control unit with 2 remote controllers	PREMTW101
2-Remo Control Wire	The wire for 2 remo control	PZCWRC2

Accessories supported by 3rd party Companies

Item	Purpose	Specification
Solar Heating System	To generate auxiliary heating energy for water tank	<ul style="list-style-type: none"> • Solar collector • 3way valve(B)
Mix Kit	To use 2nd Circuit	<ul style="list-style-type: none"> • Mixing valve • Mix pump
3rd Party Boiler	To use auxiliary boiler.	
3rd Party Controller	To connect external controller using modbus protocol	
Thermostat	To control by air temperature	Heating-Only type (230 V AC) Cooling/Heating type (230 V AC with Mode selection switch)
3way valve and actuator	(A) : To control water flow for hot water heating or floor heating / To control water flow when installing 3rd party boiler (B) : To control close/open mode of solar circuit	3 wire, SPDT (Single Pole Double Throw) type, 230 V AC
2way valve and actuator	To control water flow for Fan Coil Unit / To serve as 3way valve when installing backup heater	2 wire, SPST (Single Pole Sing Throw) type, 230 V AC
External Pump	To retain sufficient capacity using additional pump	
Smart Grid	To control operation mode depending on input signal from provider	
3 rd Party ESS	To control the operation mode according to the energy storage state	(For 4 Series)
3 rd party Backup heater	To supplement in sufficient capacity	(For 4 Series)
Antifreeze valve	To protect the pipes against freezing	
DHW Recirculation Pump	To control the water flow of DHW recirculation pump	(For 4 Series)

Before Installation

! WARNING

Followings should be kept before installation

- Main power must be turned off during installing 3rd party accessories.
- 3rd party accessories should be comply with supported specification.
- Proper tools should be chosen for installation.
- Never do installation with wet hands.

Thermostat

Thermostat is generally used to control the product by air temperature. When thermostat is connected to the product, the product operation is controlled by the thermostat.


Installation condition

! CAUTION

- USE 220-240 V~ Thermostat
- Some electro-mechanical type thermostat has internal delay time to protect compressor. In that case, mode change can takes time more than user's expectation. Please read thermostat manual carefully if the unit does not response quickly.
- Setting temperature range by thermostat can be different with that of the unit. The heating or cooling set temperature should be chosen within the setting temperature range of the unit.
- It is highly recommended that the thermostat should be installed where space heating is mainly applied.

Following location should be avoid to secure proper operation :

- Height from floor is approximately 1.5 m.
- Thermostat can not be located where the area may be hidden when door is open.
- Thermostat can not be located where external thermal influence may be applied. (such as above heating radiator or open window)

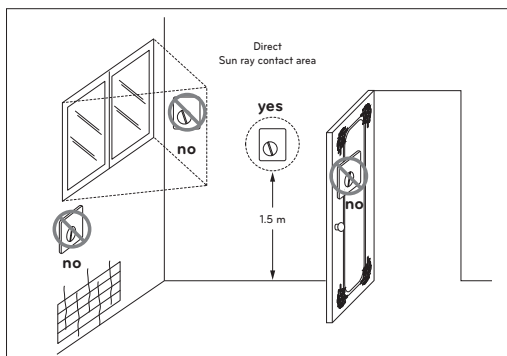

General Information

The Heat Pump supports following thermostats.

Type	Power	Operating Mode	Supported
Mechanical (1)	230 V~	Heating Only (3)	Yes
		Heating / Cooling (4)	Yes
		Heating / Cooling / DHW Heating (5)	Yes
Electrical (2)	230 V~	Heating Only (3)	Yes
		Heating / Cooling (4)	Yes
		Heating / Cooling / DHW Heating (5)	Yes

- (1) There is no electric circuit inside the thermostat and electric power supply to the thermostat is not required.
- (2) Electric circuit such as display, LED, buzzer, etc is included in the thermostat and electric power supply is required.
- (3) Thermostat generates "Heating ON or Heating OFF" signal according to user's heating target temperature.
- (4) Thermostat generates both "Heating ON or Heating OFF" and "Cooling ON or Cooling OFF" signal according to user's heating and cooling target temperature.
- (5) Thermostat generates "Heating ON or Heating OFF", "Cooling ON or Cooling OFF", "DHW Heating ON or DHW Heating OFF" signal according to user's heating, cooling and DHW heating target temperature. (For Split Indoor unit 5 Series, For Hydrosplit)



CAUTION

Choosing heating / cooling thermostat

- Heating / cooling thermostat must have "Mode Selection" feature to distinguish operation mode.
- Heating / cooling thermostat must be able to assign heating target temperature and cooling target temperature differently.
- If above conditions are not kept, the unit can not operation properly.
- Heating / cooling thermostat must send cooling or heating signal immediately when temperature condition is satisfied. No delay time while sending cooling or heating signal is permitted.

How to wire thermostat (For 3 series)


Follow below procedures Step 1 ~ Step 5.

Step 1. Uncover front cover of the unit and open the control box.

Step 2. Identify the power specification of the thermostat. If it is 220-240 V~, go to Step 3.

Step 3. If it is Heating only thermostat, go to step 4. Otherwise, if it is Heating / cooling thermostat, go to step 5.

Step 4. Find terminal block and connect wire as below.

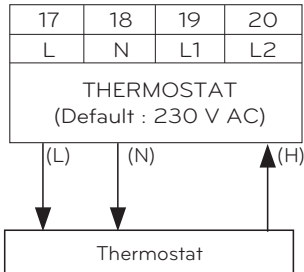

! WARNING

Mechanical type thermostat

Do not connect wire (N) as mechanical type thermostat does not require electric power supply.

! CAUTION

Do not connect external electric loads.

Wire (L) and (N) should be used only for operation electric type thermostat.

Never connect external electric loads such as valves, fan coil units, etc. If connected, Main PCB (Heater) can be seriously damaged.


(L) : Live signal from PCB to thermostat

(N) : Neutral signal from PCB to thermostat

(H) : Heating signal from thermostat to PCB

* The terminal block connection number may differ depending on the model. Refer to the "Wiring Diagram" in the SVC Manual.

Step 5. Find terminal block and connect wire as below.

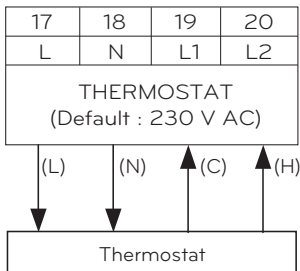

! WARNING

Mechanical type thermostat

Do not connect wire (N) as mechanical type thermostat does not require electric power supply.

! CAUTION

Do not connect external electric loads.

Wire (L) and (N) should be used only for operation Electric type thermostat.

Never connect external electric loads such as valves, fan coil units, etc. If connected, Main PCB (Heater) can be seriously damaged.

(L) : Live signal from PCB to thermostat

(N) : Neutral signal from PCB to thermostat

(C) : Cooling signal from thermostat to PCB

(H) : Heating signal from thermostat to PCB


How to wire Heating / Cooling / DHW Heating thermostat (For 4 Series)

Follow below procedures Step 1 ~ Step 3.

Step 1. Uncover front cover of the unit and open the control box.

Step 2. Identify the power specification of the thermostat. If it is 220-240 V~, go to Step 3.

Step 3. Find terminal block and connect wire as below.

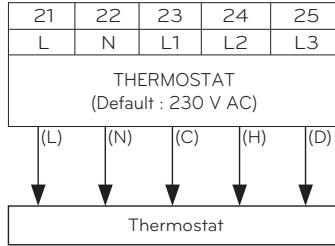

WARNING

Mechanical type thermostat.

Do not connect wire (N) as mechanical thermostat does not require electric power supply.



CAUTION

Do not connect external electric loads.

Wire (L) and (N) should be used only for operation electric type thermostat.

Never connect external electric loads such as valves, fan coil units, etc. If connected, Main PCB (Heater) can be seriously damaged.

(L) : Live signal from PCB to thermostat

(N) : Neutral signal from PCB to thermostat

(C) : Cooling signal from thermostat to PCB

(H) : Heating signal from thermostat to PCB

(D) : DHW Heating signal from thermostat to PCB

Final check

- DIP switch setting :
Set DIP switch No. 8 to 'ON'. Otherwise, the unit can not recognize the thermostat.
- Remote Controller :
 - 'Thermostat' text is displayed on the remote controller.
 - Only the water temperature setting is available and the other button input is prohibited.
 - In case of Heating / Cooling / DHW Heating thermostat, select 'Heat&Cool / DHW' as the Thermostat Control Type in the remote controller installer settings.
 - The product operates according to Thermo On / Off conditions of the thermostat and remote controller.

Thermo On / Off Condition		Product
Thermostat	Remote Controller	
Thermo Off	Thermo Off	Thermo Off
Thermo Off	Thermo On	Thermo Off
Thermo On	Thermo Off	Thermo Off
Thermo On	Thermo On	Thermo On

2nd Circuit

The 2nd circuit is generally used to control the temperature of 2 rooms differently. To use the 2nd Circuit, you need to prepare a separate Mix Kit. The mix kit must be installed in the main zone.

- Main Zone : zone where the water temperature is lowest when heating.
- Add. Zone : The other zone

- For 3 Series

[Install Guide 2nd Circuit Heating]

Main Zone Add. Zone	Floor (35 °C)	Convactor (FCU, 45 °C)	Radiator (45 °C)	Radiator (55 °C)
Floor (35 °C)	○	X	X	X
Convactor (FCU, 45 °C)	○	○	○	X
Radiator (45 °C)	○	○	○	○
Radiator (55 °C)	○	○	○	○

[Install Guide 2nd Circuit Cooling]

Main Zone Add. Zone	Floor (18 °C)	Convactor (FCU, 5 °C)
Floor (18 °C)	○	X
Convactor (FCU, 5 °C)	X	○

✱ To use a floor combination during cooling operation, the flow through the floor of the flow must be blocked by the 2 way valve.

- For 4 Series

[Install Guide 2nd Circuit Heating]

Circuit 1 \ Circuit 2	Floor (35°C)	Convector (FCU, 45 °C)	Radiator (45 °C)	Radiator (55 °C)
Floor (35 °C)	○	×	×	×
Convector (FCU, 45 °C)	○	○	○	×
Radiator (45 °C)	○	○	○	×
Radiator (55 °C)	○	○	○	○

[Install Guide 2nd Circuit Cooling]

Circuit 1 \ Circuit 2	Floor (18 °C)	Convector (FCU, 5 °C)
Floor (18 °C)	○	×
Convector (FCU, 5 °C)	○	○

✱ To use a floor combination during cooling operation, the flow through the floor of the flow must be blocked by the 2 way valve.

NOTE

Circuit 1 = Direct circuit : Zone where the water temperature is Highest when heating

Circuit 2 = Mixing circuit : The other zone


How to Wire Mix Pump, Mixing Valve and Thermistor for 2nd Circuit

- For 3 Series

Follow below procedures Step 1 ~ Step 3.

Step 1. Uncover front cover of the unit.

Step 2. Find terminal block and connect wire as below

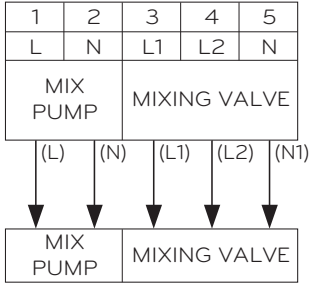

(L) : Live signal from PCB to mix pump

(N) : Neutral signal from PCB to mix pump

(L1) : Live signal (for Normal* Closed type) from PCB to mixing valve


(L2) : Live signal (for Normal Open type) from PCB to mixing valve

(N1) : Neutral signal from PCB to mixing valve

*Closed = NOT Mixed

※ The terminal block connection number may differ depending on the model. Refer to the "Wiring Diagram" in the SVC Manual.

Step 3. Insert the temperature sensor to 'CN_MIX_OUT' (Brown) of the main PCB as shown below. The sensor should be mounted correctly to outlet pipe of mix kit water pump as shown below.

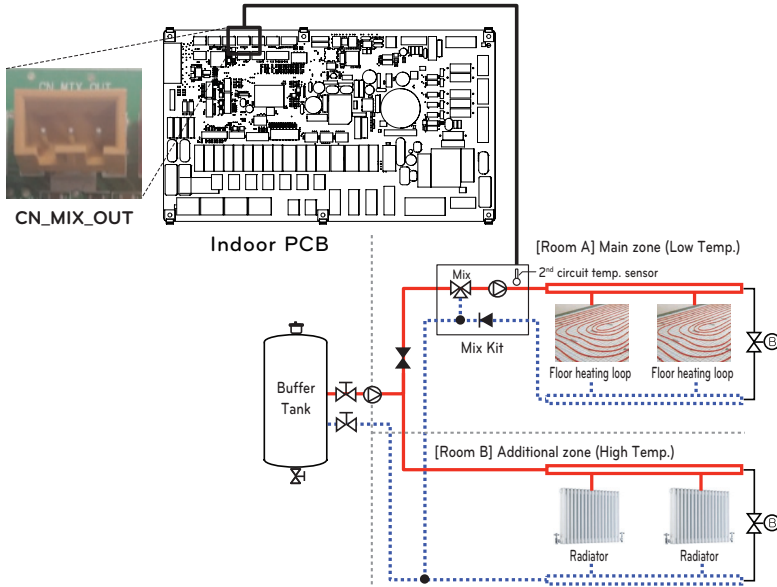

CAUTION


When connecting a pump of 1.05A or higher, its output must be used as a signal line only.

- For 4 Series

Follow below procedures Step 1 ~ Step 3.

Step 1. Uncover front cover of the unit.

Step 2. Find terminal block and connect wire as below

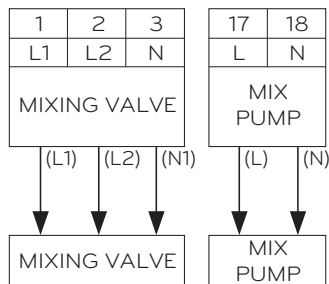

(L) : Live signal from PCB to mix pump

(N) : Neutral signal from PCB to mix pump


(L1) : Live signal (for Normal* Closed type) from PCB to mixing valve

(L2) : Live signal (for Normal Open type) from PCB to mixing valve

(N1) : Neutral signal from PCB to mixing valve

*Closed = NOT Mixed

Step3. Insert the temperature sensor to 'CN_MIX_OUT' (Brown) of the main PCB as shown below. The sensor should be mounted correctly to outlet pipe of mix kit water pump as shown below.

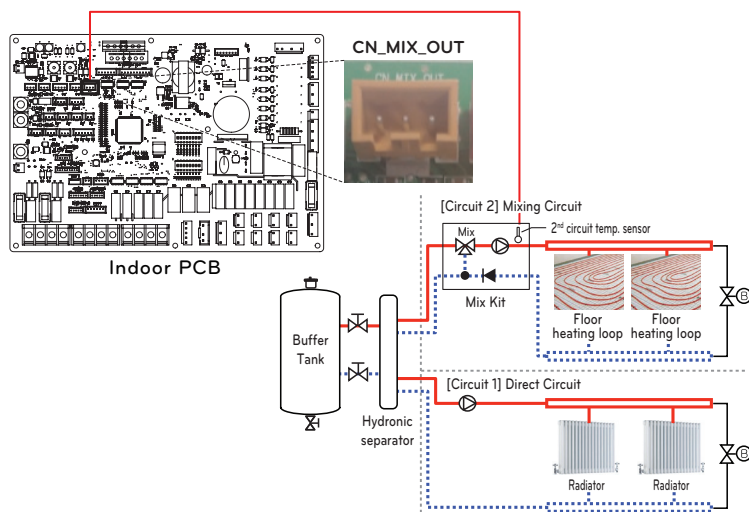

NOTE

2nd circuit temp. sensor is an accessory. (Model: PRSTAT5K10)



CAUTION

When connecting a pump of 1.05A or higher, its output must be used as a signal line only.

[Thermistor for 2nd circuit]

Sensor



Sensor Holder



Sensor Connector

Follow below procedures step 1 ~ step 4.

Step 1. Install sensor connector to outlet pipe of mix kit water pump.

(Welding must be performed to connect the sensor connector to the pipe.)

Step 2. Check if the power of the unit is turned off.

Step 3. Fasten the sensor connector to the sensor holder as shown in the figure below.

Step 4. Insert harness into PCB(CN_TH4) fully and fix the thermal sensor into tube connector as shown below.



3rd Party Boiler

The product can be used by connecting an Auxiliary boiler. You can control the boiler automatically and manually by comparing the outside temperature and the set temperature.

How to install 3rd party boiler


Follow below procedures step 1 ~ step 3.

Step 1. Check if the power of the unit is turned off.


Step 2. Disassemble front panels and Distinguish terminal block in Indoor PCB.

Step 3. Connect Power cable to terminal block (TB_BOILER) fully.

- For 3 Series

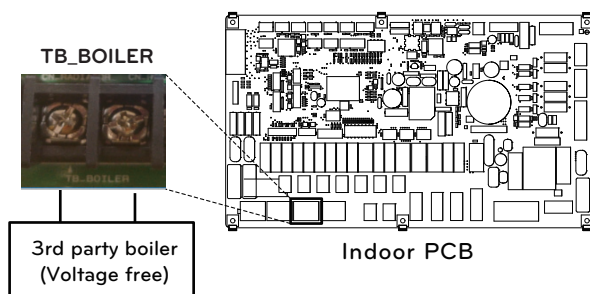

- For 4 Series

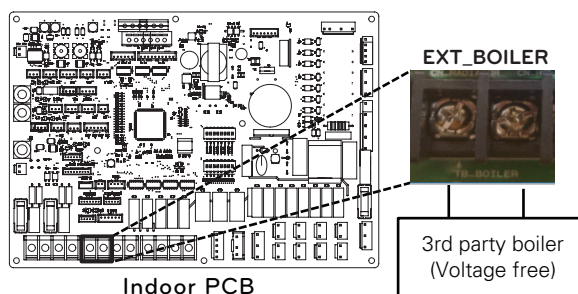

3rd Party Controller

The product can also be linked to 3rd party controller. You can connect external controllers using Modbus protocol except for LG controller. If 3rd party controller is used, LG controller is not applied to AWHP simultaneously.

How to install 3rd party controller

Follow below procedures step 1 ~ step 4.


Step 1. Check if the power of the unit is turned off.

Step 2. Disassemble front panels and distinguish control box(Indoor) of the unit.


Step 3. Check if the harness(White) is inserted fully to the indoor unit PCB (CN_COM).

Step 4. Connect the 3rd party controller to terminal block 2(11/12) completely. (including Meter interface module)

- For 3 Series

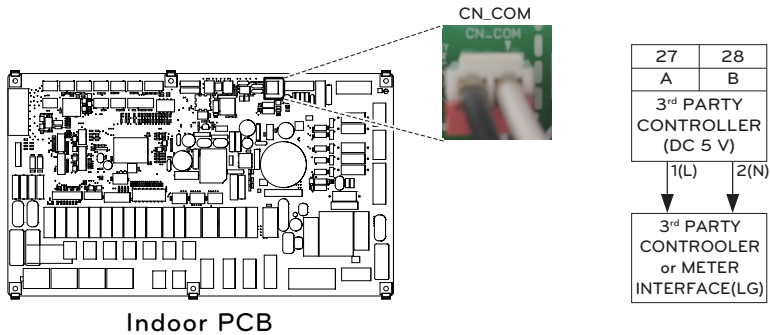

- For 4 Series

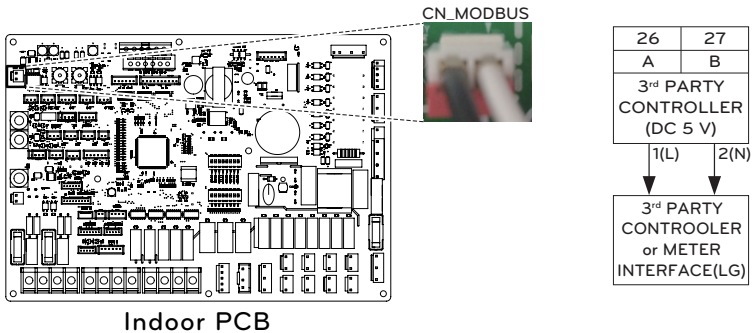


Meter Interface

This product can be used by connecting the meter interface module supplied in the field. The meter interface module can communicate with the wired remote controller. The meter interface module lets you know the amount of power generated by the product.

How to install Meter Interface

[Parts of Meter interface]

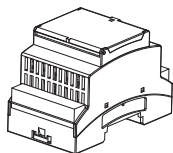

Meter interface body

Follow below procedures step 1 ~ step 4.


Step 1. Check if the power of the unit is turned off.

Step 2. Disassemble front panels and Distinguish control box(Indoor) of the unit.


Step 3. Check if the harness(White) is inserted fully to the indoor unit PCB (CN_COM).

Step 4. Connect the external pump to terminal block 2(11/12).


- For 3 Series

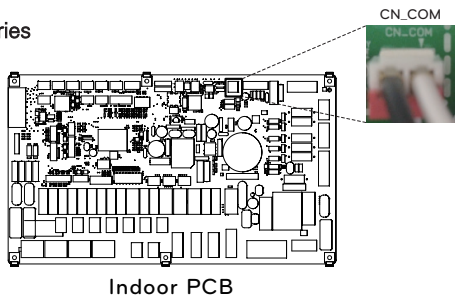


Indoor PCB

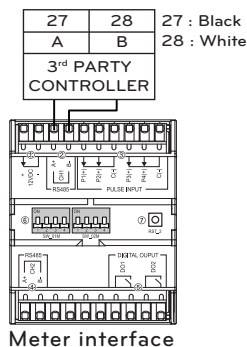

- For 4 Series

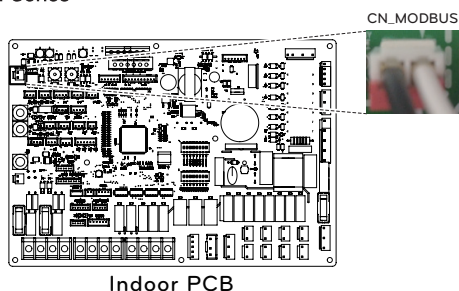

Indoor PCB

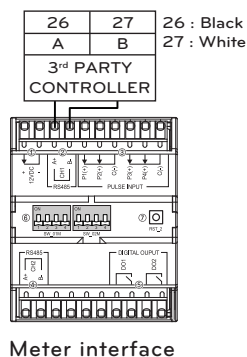

Central Controller

The product can communicate and control through the central controller. The following functions can be controlled in the central control linked state (Operation/Stop, Desired temperature, Hot water operation / stop, Warm water temperature, Full lock, Etc)

How to Install Central Controller

To use central controller, you need to establish an environment for mutual communication between central controller and the **THERMAV**. and register the corresponding devices through the functions of central controller. To use central controller, it shall be installed in the following order.

Step 1. Installation environment inspection and device address setting

Before installing central controller, check the network for any interfacing devices and assign non overlapping addresses to the connected devices.

Step 2. PI485 setting

Install PI485 and set the DIP switch accordingly.

Step 3. Connections

Connect PI485 and central controller through RS-485 cable.

Step 4. Access and Device Registration

Log in to central controller and register device with address set.



Consult a qualified engineer/ technician for the installation of central controller. If you have any installation queries, contact the LG service center or LG Electronics.

How to Installation PI485



Fix the PI485 PCB as shown in below images.

For detailed installation method refer to PI485 Installation Manual

UN60A (9, 12, 14, 16 kW)

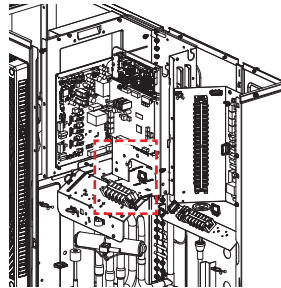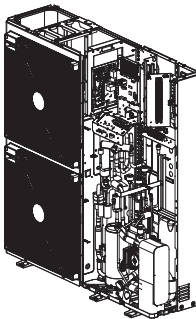

UN36A (5, 7, 9 kW)

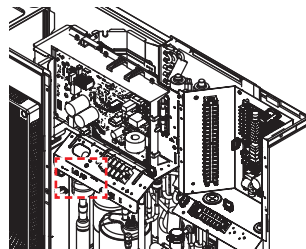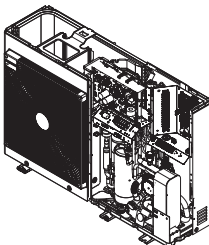


- For detailed installation instructions, refer to the manual included in the accessories.
- The shape may differ depending on the model.



Remote Controller

Installation of Remote Controller

- After fixing the remote controller installation plate on the desired location, fix it firmly with the provided screws.
 - If the installation plate is not flat on the surface, it may result in the controller being twisted and cause a defect.
 - If there is a mounting box, install the remote controller installation plate using the fixings holes which suit, as in the below diagrams.
 - Do not leave a gap with the wall or product loose after the installation.
 - If you are using the air temperature sensor in the remote control, refer to the Remote Temperature sensor guide.

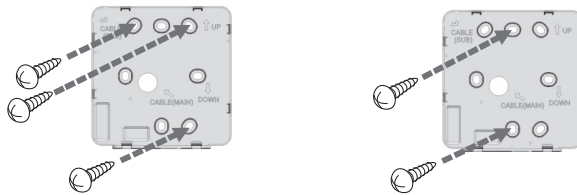


- The wired remote controller cable can be installed in 3 directions. Install to the suitable direction according to the installation environment.
 - Installation direction: Rear entry, top side, right side
 - When you install the remote controller cable at the top side and right side, remove the remote controller cable guide hole before the installation.
 - ※ Use a long nose pliers to remove the guide hole.
- After removing the hole, trim the cut surface neatly.

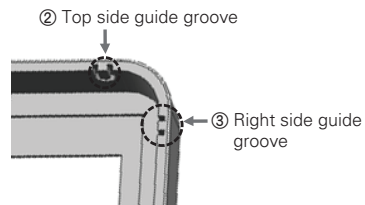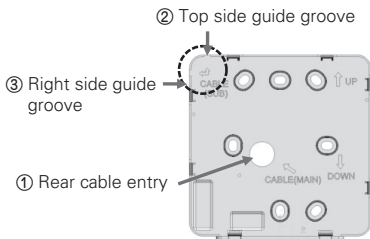


- After fixing the remote controller top side on the installation plate attached to the wall as in the following figure, press the bottom side to combine with the installation plate.
 - Do not leave a gap in the top, bottom, left, and right side of the remote controller and the installation plate after combining them.
 - Before combining with the installation plate, arrange the cables to avoid interference with the circuit parts.

<Procedure of Combining>

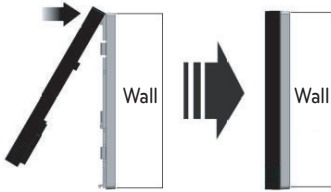


- When you remove the remote controller from the installation plate, insert a small flat head screwdriver into the bottom side separation hole and turn clockwise to separate the remote controller.
 - There are 2 separation holes at the bottom part. Slowly separate one by one.
 - Be careful not to damage the internal parts during the removal.

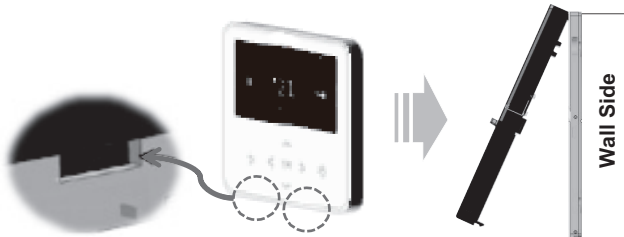

- Use the connection cables to connect the indoor unit with the remote controller.

DC 12 V	Red
Signal	Yellow
GND	Black

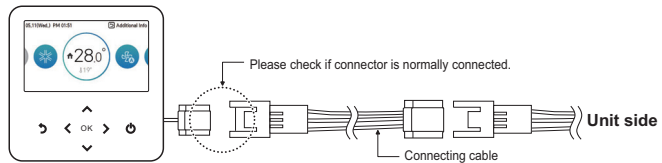

- For the following cases, separately purchase and use the cables suitable for the situation.
 - Do not install the cable over 50 m. (It may cause communication issues.)
 - If the distance between the wired remote controller and the unit is 10 m or more : 10 m extension cable (model name: PZCWRC1)



NOTE

During the wired remote controller installation, do not bury it in the wall. (It may cause temperature sensor failure.)

Do not install the cable over 50 m. (It may cause communication defect.)

When you install the extension cable, carefully check the direction of the connectors on the remote controller side and the product side before the installation.

Specification of extension cable: AWG 24, 3 conductor or above.

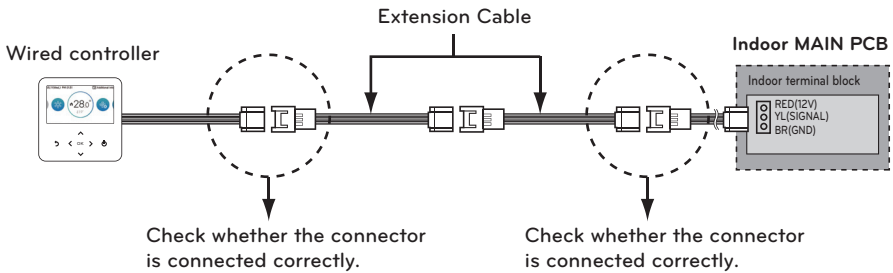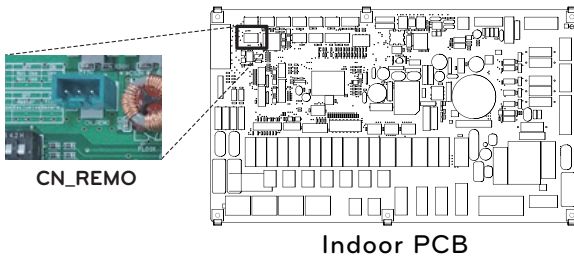

Cable connection method to use external device

1) Wired remote controller-cable connection method.

- In the wired remote controller, connect the part marked in the following figure (J02C, DO-Port) to the cable.
- According to the installation environment, there are 3 directions (Rear entry, top side, and right side) for the installation.


2) Cable extension connection method

- Among the cables connected to the wired remote controller, cut the remaining connectors on the other side, and then extend and connect the cables
- Extension cable specification: 24~26 AWG.

! CAUTION

For the External device connection, use the cable insulated with sheath for the extension connection.

Before combining with the installation plate, arrange the cables to avoid interference with the internal parts.

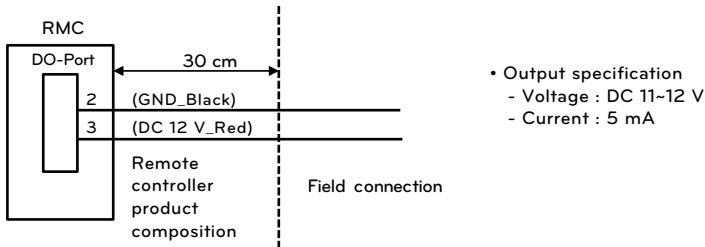


DHW Tank

To establish DHW circuit, 3way valve and DHW tank kit is required. If solar thermal system is pre-installed at the installation field, solar thermal kit is required to interface solar thermal system – to – DHW tank – to – **THERMAV.**

Installation condition

Installing DHW water tank requires following considerations :

- DHW water tank should be located at the flat place.
- Water quality should be complied with EN 98/83 EC directives.
- As this water tank is DHW water tank (indirect heat exchange), do not use anti water-freezing treatment like ethylene glycol.
- It is highly recommend to wash out inside of the DHW water tank after installation. It ensures generating clean hot water.
- Near the DHW water tank there should be water supply and water drain to easy access and maintenance.
- Set the maximum value of the temperature control device of DHW tank.

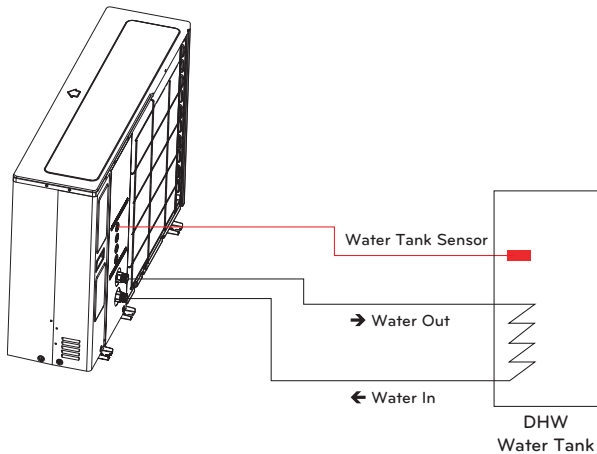

General Information

THERMAV. supports following 3way valve.

Type	Power	Operating Mode	Supported
SPDT ¹⁾ 3-wire	230 V AC	Selecting Flow A ²⁾ between Flow A and Flow B	Yes
		Selecting Flow B ³⁾ between Flow A and Flow B	Yes

1. SPDT = Single Pole Double Throw. Three wires consist of Live1 (for selecting Flow A), Live 2 (for selecting Flow B), and Neutral (for common).
2. Flow A means water flow from the unit to under floor water circuit.
3. Flow B means water flow from the unit to DHW tank.

Installing recirculation pump

- For 3 Series

When **THERMAV** is used with DHW tank, it is **STRONGLY** recommended to install recirculation pump to prevent flooding out cold water at the end of hot water supply and to stabilize the water temperature inside DHW tank

- The recirculation pump should be operated when DHW demand is not required. Therefore, external time scheduler to determine when the recirculation pump should turn on and turn off is required.

- The operating duration time of the recirculation pump is calculated as follow :


$$\text{Duration time [minute]} = k \times V / R$$

k : 1.2 ~ 1.5 is recommended. (If distance between pump and tank is far, then choose high number)

V : Volume of DHW water tank [liter]

R : Water flow rate of pump [liter per minute], which is determined by pump performance curve

- The pump operating start time should be prior to the DHW water demand.

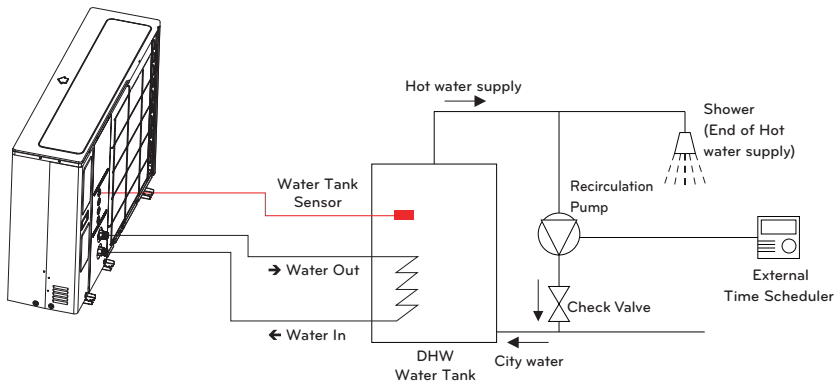

* Water In / Water Out installation scene may vary depending on the model.

- For 4 Series

When **THERMAV** is used with DHW tank, it is **STRONGLY** recommended to install recirculation pump to prevent flooding out cold water at the end of hot water supply and to stabilize the water temperature inside DHW tank


- The recirculation pump should be operated when DHW demand is not required. Therefore, external time scheduler to determine when the recirculation pump should turn on and turn off is required.
- The operating duration time of the recirculation pump is calculated as follow :

$$\text{Duration time [minute]} = k \times V / R$$

k : 1.2 ~ 1.5 is recommended. (If distance between pump and tank is far, then choose high number)

V : Volume of DHW tank [liter]

R : Water flow rate of pump [liter per minute], which is determined by pump performance curve.
- The pump operating start time should be prior to the DHW demand.


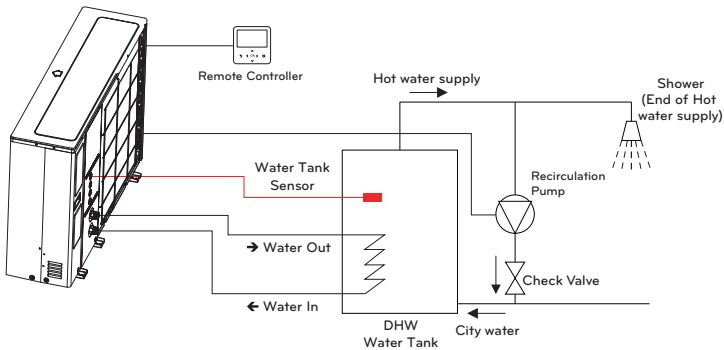


* Water In / Water Out installation scene may vary depending on the model.

How to wire recirculation pump

Follow below procedures step 1 ~ step 4.

- Step 1.** Check if the power of the unit is turned off.
- Step 2.** Disassemble front panels and distinguish control box(Indoor) of the unit.
- Step 3.** Check if the harness(Violet) is inserted fully to the indoor unit PCB (CN_PUMP_A15).
- Step 4.** Connect the DHW recirculation pump to terminal block 1(3/4).

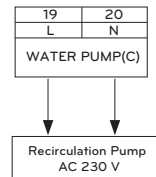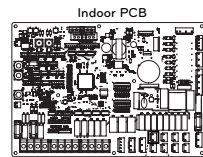

CAUTION

When connecting a pump of 1.05A or higher, its output must be used as a signal line only.

How to Wire Booster Heater

Step 1. Uncover heater cover of the DHW tank. It is located side of the tank.

Step 2. Find terminal block and connect wires as below. Wires are field-supplied item.

(L) : Live signal from PCB to Heater.

(N) : Neutral signal from PCB to Heater.

WARNING


Wire specification

- Cross-sectional area of the wire should be 6 mm².


Adjusting thermostat temperature

- To guarantee proper operation, it is recommended to set temperature of thermostat to maximum temperature (symbol **A** at the picture).
- 1Ø Backup Heater Model and 3Ø Backup Heater Model are set by same method as below.

For 3 Series

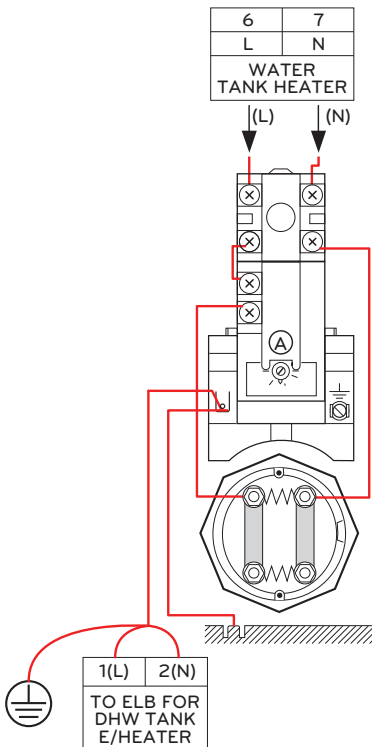

For 4 Series

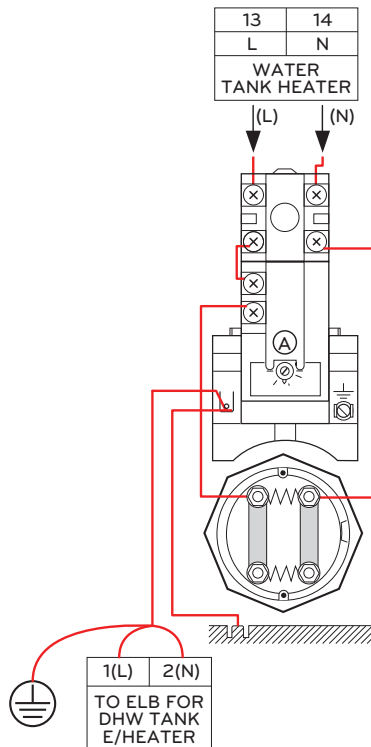

How to Wire DHW Tank Heater

Step 1. Uncover heater cover of the DHW tank. It is located side of the tank.

Step 2. Find terminal block and connect wires as below. Wires are field-supplied item.

(L) : Live signal from PCB to Heater

(N) : Neutral signal from PCB to Heater


WARNING

Wire specification

- Cross-sectional area of the wire should be 6 mm^2 .

Adjusting thermostat temperature

- To guarantee proper operation, it is recommended to set temperature of thermostat to maximum temperature (symbol at the picture).
- 1Ø Electric Heater Model and 3Ø Electric Heater Model are set by same method as below.

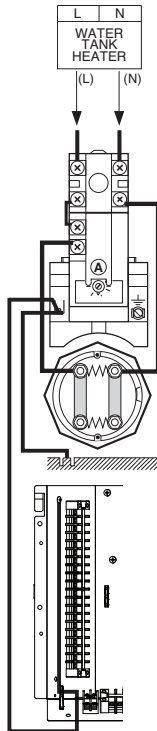


DHW Tank Kit

This product can be used by connecting the DHW tank kit in the field. It can be utilized hot water heated by booster heater in DHW tank.

How to install DHW tank kit


[Parts of DHW Tank Kit]

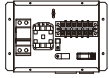

Tank kit body



Sensor

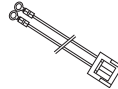

Multi harness

Temperature sensor for DHW tank is used to control hot water temperature of DHW tank. If sensor will be defective, you can purchase it separately.(Model name : PHRSTA0)

Follow below procedures step 1 ~ step 4.

Step 1. Uncover DHW tank kit and locate it on the wall.

Step 2. Connect Harness(Violet) of Main PCB assembly(TB1(6/7)) to 'CN_B_Heat_A' of the Main PCB like following fig. 1.

Step 3. Insert DHW tank sensor to 'CN_TH4' (Red) of the Main PCB refer as below.

Step 4. Connect power supply to the DHW tank kit as shown fig. 1.

✱ The sensor should be mounted correctly to the sensor hole of DHW water tank like below fig. 2.

- For 3 Series

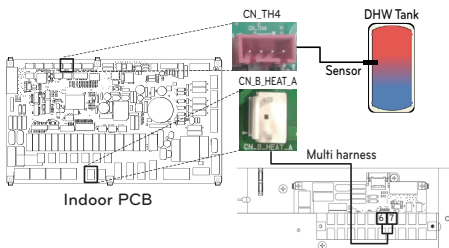


Fig. 1


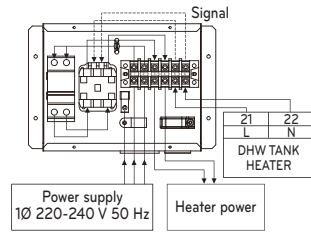


Fig. 3

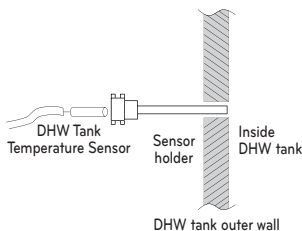

Insert sensor until the cable tie as shown below.


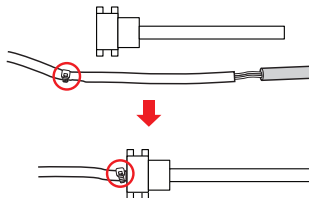


Fig. 2


✱ The terminal block connection number may differ depending on the model. Refer to the "Wiring Diagram" in the SVC Manual.

- For 4 Series

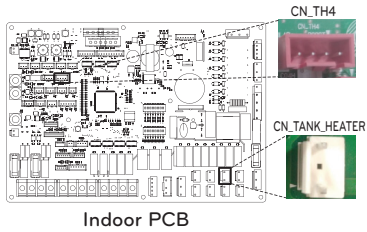

Indoor PCB

Fig. 1

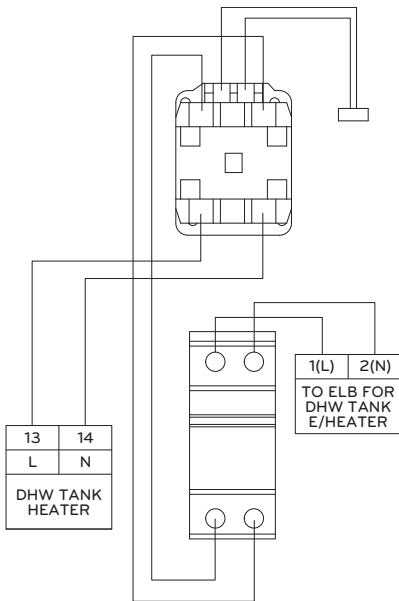


Solar Thermal Kit


This product can be used by connecting the solar thermal kit in the field. It can be utilized hot water heated by solar thermal system. End-user must be LG AWHP solar thermal kit.

How to Install Solar Thermal Kit

[Parts of Solar Thermal Kit]

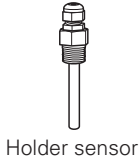

Holder sensor

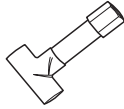

Tube Connector



Solar Thermal Sensor
12 m(1 EA)

Follow below procedures step 1 ~ step 4.

Step 1. Install tube connector(it is necessary to reduce or extend diameter of pipe.) the pipe and solar thermal kit.


Step 2. Check if the power of the unit is turned off.

Step 3. Disassemble front panels and distinguish control box(Indoor) of the unit.


Step 4. Insert harness into PCB(CN_TH4) fully and fix the thermal sensor into tube connector as shown below.


※ If the DHW tank sensor is connected, disconnect the sensor from PCB first.

- For 3 Series

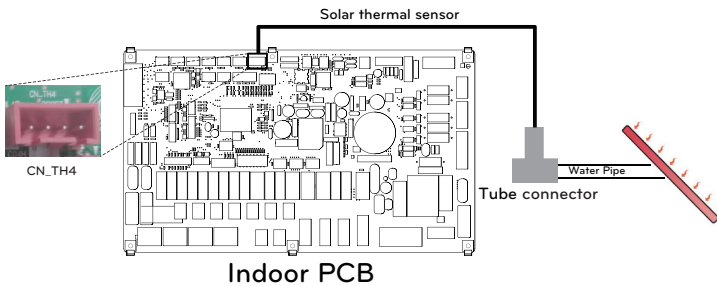

- For 4 Series

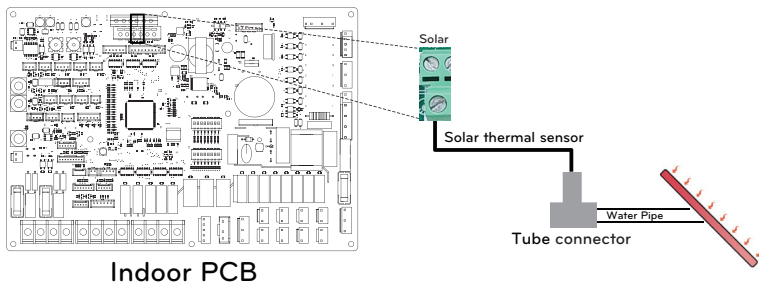

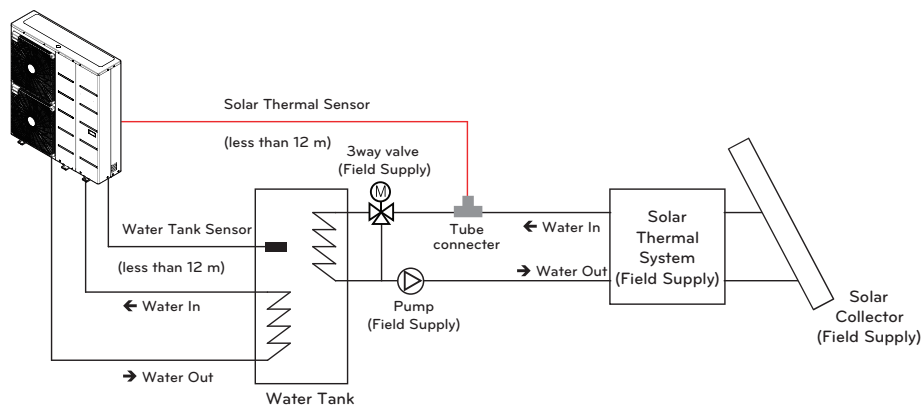

※ Water In / Water Out installation scene may vary depending on the model.

- Insert sensor until the cable tie as shown below.



CAUTION

Sensor mounting


Insert sensor into sensor socket and bolt it tightly.

Dry Contact

Dry Contact is a solution for automatic control of HVAC system at the owner's best. In simple words, it's a switch which can be used to turn the unit On/Off after getting the signal from external sources.

How to install dry contact

[Parts of Dry contact]

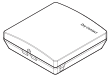

Dry Contact body



Cable(for connecting with IDU)

Follow below procedures step 1 ~ step 4.


Step 1. Check if the power of the unit is turned off.

Step 2. Disassemble front panels and distinguish terminal block in Indoor PCB.


Step 3. Connect cable to the unit PCB(CN_CC) fully.

Step 4. Then, Insert harness to the dry contact PCB(CN_INDOOR) firmly as shown below.

- For 3 Series

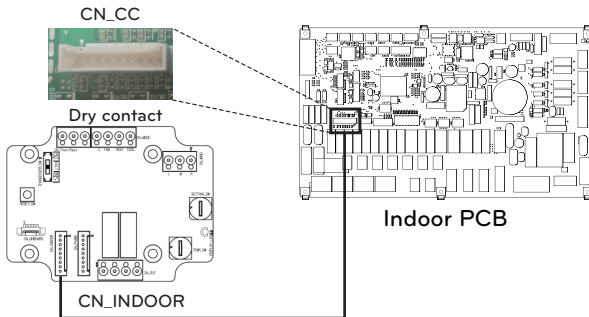

- For 4 Series

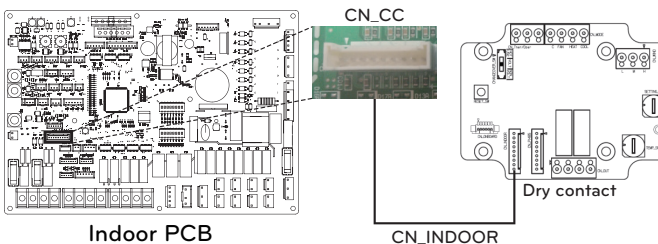


NOTE


- For more information about installing Dry Contact, Please refer installation manual provided with Dry Contact.
- For more settings about Dry Contact, Please refer to "Dry Contact Mode / CN_CC / CN_EXT" that installer setting part

[Setting of Contact Signal Input]

- For input contact closure only(No power input)

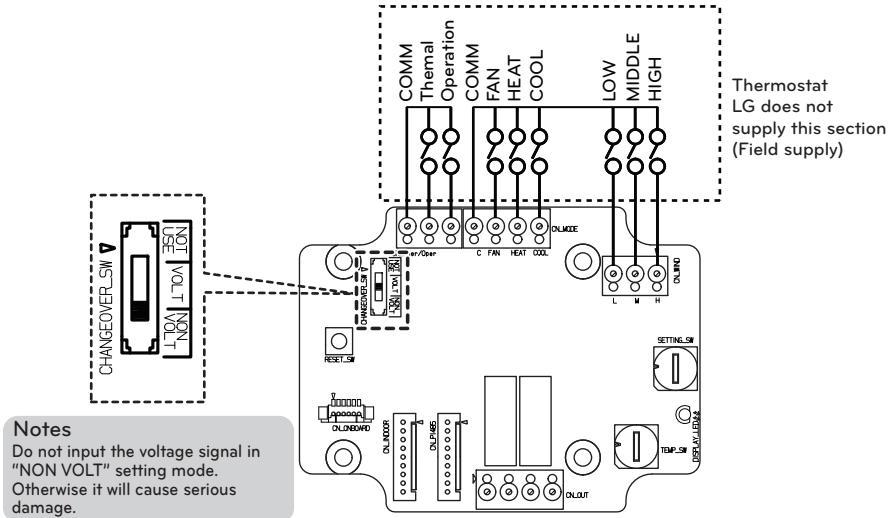

- For input contact voltage : DC 12 V, 24 V~

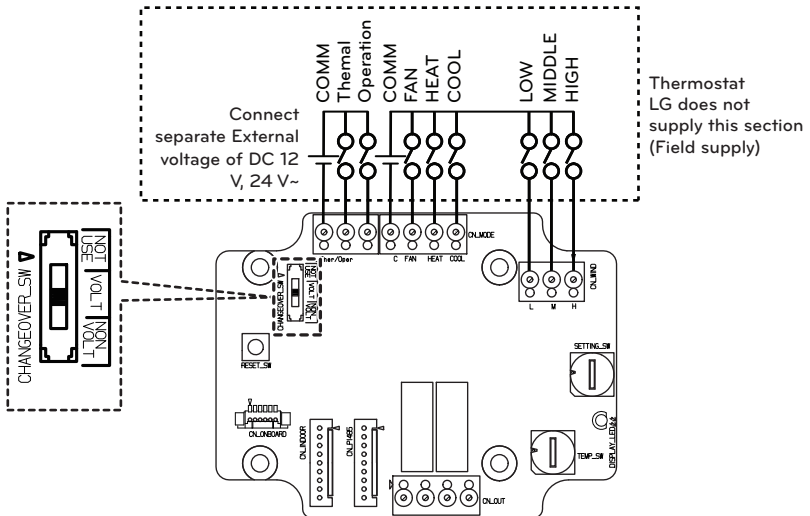

Setting_SW Setting

- Normal (0) : Possible to be controlled by the remote controller
- Forced (1) : Not possible to be controlled by the remote controller
- There is no OPER_SW setting that each input signal is disabled.

External Controller - Setting up programmable digital input operation

If you require to operate control depending on external digital input(ON/OFF), connect cable to indoor PCB(CN_EXT).

Follow below procedures step 1 ~ step 4.


Step 1. Check if the power of the unit is turned off.

Step 2. Disassemble front panels and distinguish control box(Indoor) of the unit



Step 3. Connect the external controller to PCB(CN_EXT) completely.

Step 4. Connect the cable and field installation part.

- For 3 Series

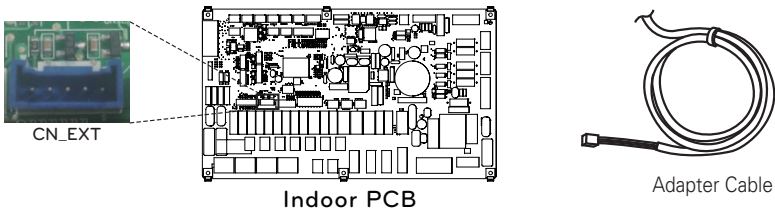

- For 4 Series

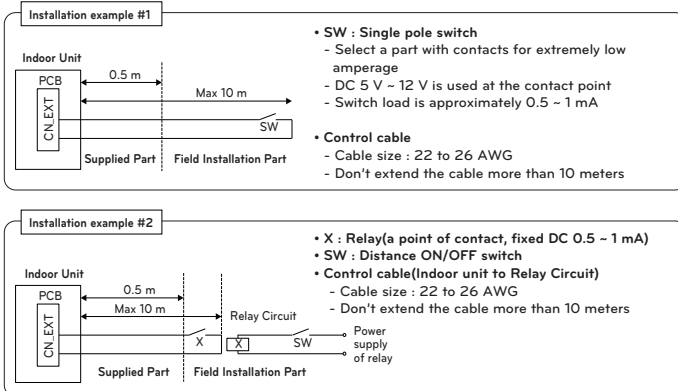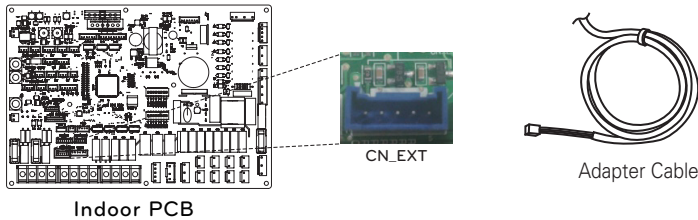

Determining the purpose of CN_EXT

Setting value: 0 ~ 5 step Indoor CN-EXT port setting

- 0: default
- 1: Simple operation on / off
- 2: Dry contact (simple contact)

- 3: Emergency stop only for indoor unit
- 4: Reattachment / absence
- 5: Emergency stop of all indoor units (It can be set only when indoor unit has emergency stop function)


Remote Temperature Sensor

Remote temperature sensor can be installed any place a user wants to detect the temperature.


Installation condition

Role and constraint while installation of remote air temperature sensor is very similar to that of thermostat.

- Distance between the unit and the remote air temperature sensor should be less than 15 m due to length of the connection cable of remote air temperature sensor.
- For other constraints, please refer to previous page where constraints about thermostat is described

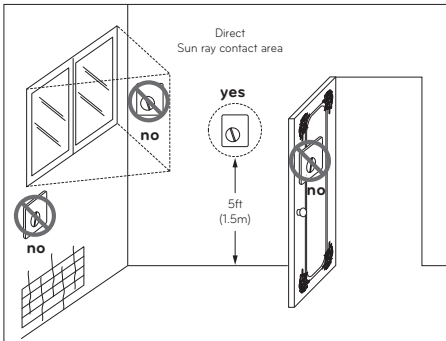

Thermostat

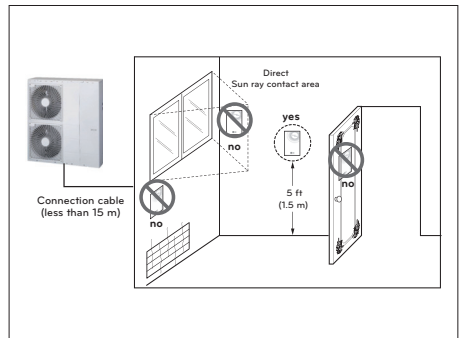

Remote Air Temperature Sensor

How to Install Remote Temperature Sensor

[Parts of Remote Temperature Sensor]



Sensor



Screw(to fix remote sensor)

Follow below procedures step 1 ~ step 5.

Step 1. Decide where the remote temperature sensor is Installed. Then, Determine the location and height of the fixing screws in fig. 1 (Interval between the screws : 60 mm)


Step 2. Check if the power of the unit is turned off.

Step 3. Disassemble front panels and distinguish control box(Indoor) of the unit.


Step 4. Insert temperature sensor into PCB(CN_ROOM) and fix the sensor firmly in fig. 2.

Step 5. The Connection wire does not matter if you change the color of the wire because of nonpolar.

- For 3 Series

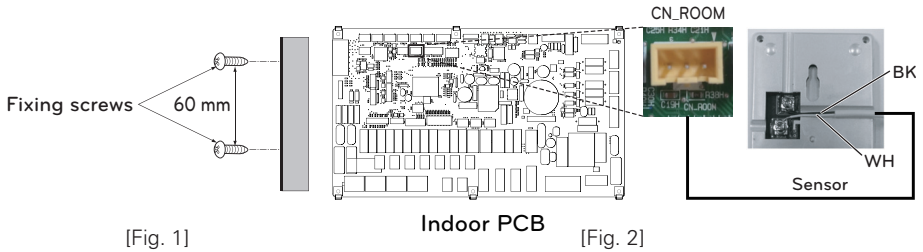


- For 4 Series

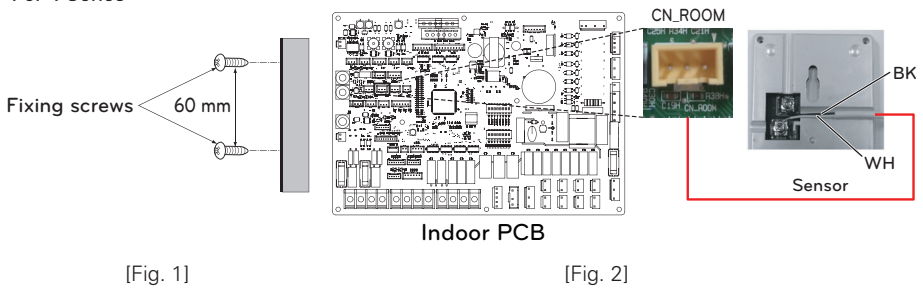

Step 6. Integrate the remote temperature sensor with the screws as the order of arrows.

Fixing the Remote Sensor

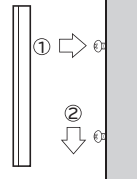

! CAUTION

- Choose the place where the average temperature can be measured for the unit operates.
- Avoid direct sunlight.
- Choose the place where the cooling/heating devices do not affect the remote sensor.
- Choose the place where the outlet of the cooling fan do not affect the remote sensor.
- Choose the place where the remote sensor isn't affected when door is open.

NOTE

- For more information about installing Remote Temperature Sensor, Please refer installation manual provided with Remote Temperature Sensor.
- For more settings about Remote Temperature Sensor, Please refer to 'Select Temperature Sensor / Air cooling set temp. / Air heating set temp. / TH on/off Variable, heating air / TH on/off Variable, cooling air' that 'installer setting' part
- Set DIP switch No. 1 of option switch 3 to 'ON' in order to use remote temperature sensor.(For 3 Series)
- Set DIP switch No. 5 of option switch 2 to 'ON' in order to use remote temperature sensor.(For 4 Series)

Solar pump

Solar pump can be required to energize water flow when solar thermal system is installed.

How to install solar pump

Follow below procedures step 1 ~ step 4.

Step 1. Check if the power of the unit is turned off.


Step 2. Disassemble front panels and distinguish control box(Indoor) of the unit.

Step 3. Check if the harness(Black) is inserted fully to the indoor unit PCB (CN_W_PUMP_B).


Step 4. Connect the external pump to terminal block 1(4/5).

✳ It is possible to un-use solar pump depending on installation environment.

- For 3 Series

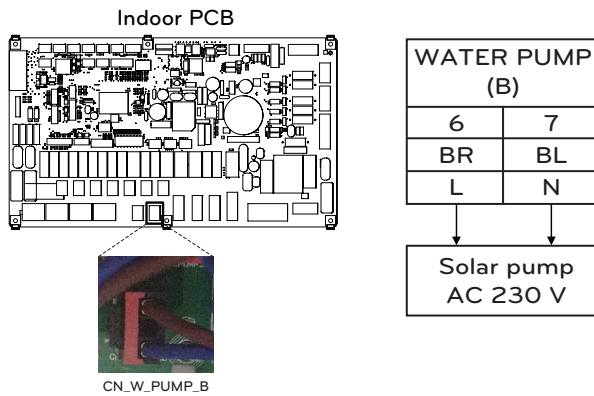

- For 4 Series

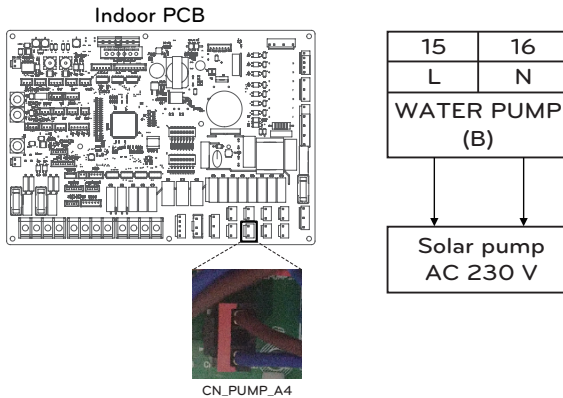

✳ The terminal block connection number may differ depending on the model. Refer to the "Wiring Diagram" in the SVC Manual.

⚠ CAUTION

When connecting a pump of 1.05A or higher, its output must be used as a signal line only.

External pump

External pump can be required when the room to take floor heating is too large or not well-insulated.(potential free) Also, External pump is installed with buffer tank to retain sufficient capacity.


How to install external pump

Follow below procedures step 1 ~ step 3.


Step 1. Check if the power of the unit is turned off.

Step 2. Disassemble front panels and distinguish terminal block in Indoor PCB.

Step 3. Connect signal cable to terminal block (TB_W_PUMP_C) fully.

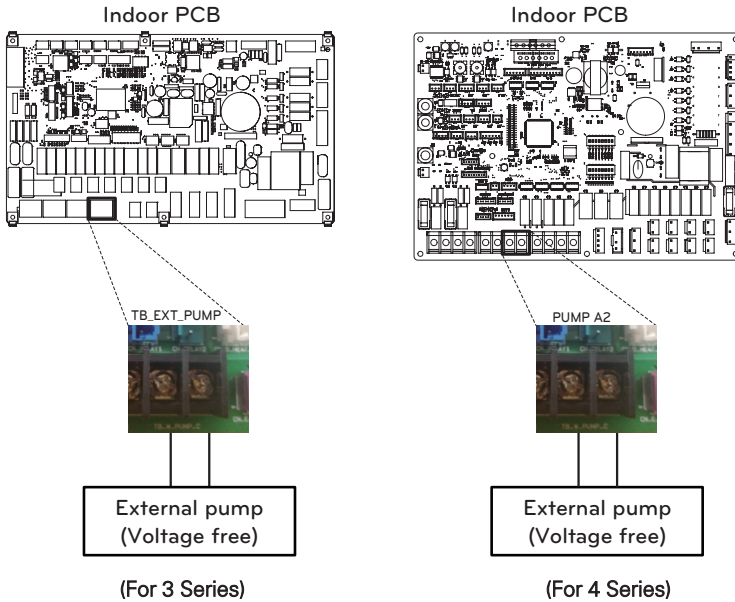

How to install Voltage Free

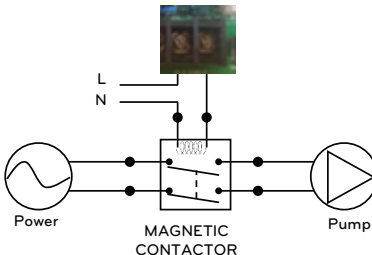


Wi-fi Modem


Wi-fi modem enables remote system operation from smartphone. Available functions include selection of on/off, operation mode, DHW heating, temperature setup and weekly scheduling etc.

How to install Wi-fi Modem


[Parts of Wi-fi modem]

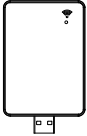

Wi-fi modem body

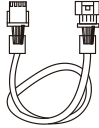

USB Cable

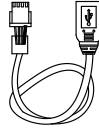

Extension Cable

Follow below procedures step 1 ~ step 5.

Step 1. Check if the power of the unit is turned off.


Step 2. Disassemble front panels and distinguish control box(Indoor) of the unit.

Step 3. Connect the USB cable to the indoor unit PCB (CN_WF ; Blue) until it clicks into place.


Step 4. Connect the Wi-Fi modem to the USB cable fully.

Step 5. Refer to the image below to install the Wi-Fi modem in the marked position.

- For 3 Series

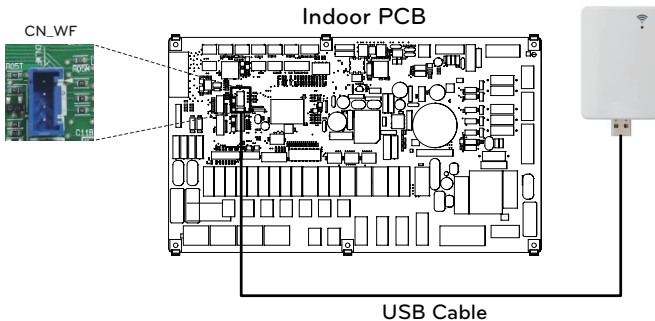

- For 4 Series

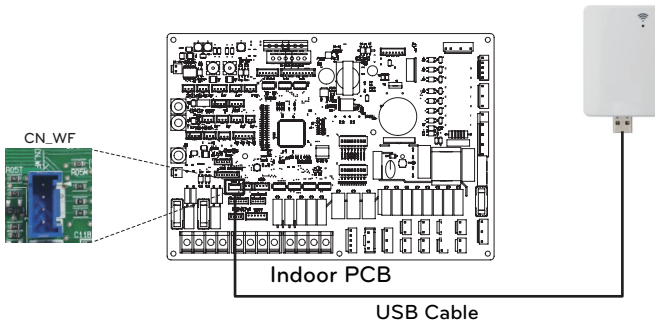

In case of using the extension wire (PWYREW000), fasten the core of extension wire to clamp of the indoor control box.

Energy State

This product provides energy states that enable customers to use as much as possible of their own renewable energy. It can shift setpoints depending on input signal from Energy Storage System (ESS) or from any other third-party device using Modbus RTU or Digital 230V inputs.

Available Energy States

There are 8 energy states available. 4 fixed and 4 customizable - each with the possibility to enhance self consumption of renewable energy.

Energy state	Command	Battery State of charge	Operation (standard setting)					
			Heating		Cooling		Domestic Hot Water	
			Setting	Range	Setting	Range	Setting	Range
1	Operation Off (Utility lock)	Low	Forced internal operation off	Fixed	Forced internal operation off	Fixed	Forced internal operation off	Fixed
2	Normal Operation	Normal	Maintain operation status	Fixed	Maintain operation status	Fixed	Maintain operation status	Fixed
3	Operation On Recommend	High	Increase 2 °C from target temperature	Fixed	Maintain operation Status	Fixed	Increase 5 °C from target temperature	Fixed
4	Operation On Recommend	Very High	Maintain operation status	Fixed	Maintain operation status	Fixed	DHW Target 80 °C	Fixed
5	Operation On Command	Very High	Increase from target temperature	0/+30 (Default : +5)	Decrease from target temperature	0/-30 (Default : -5)	Increase from target temperature	0/+50 (Default : +30)
6	Operation On Recommend	High	Increase from target temperature	0/+30 (Default : +2)	Decrease from target temperature	0/-30 (Default : -2)	Increase from target temperature	0/+50 (Default : +10)
7	Operation Save	Low	Decrease from target temperature	0/-30 (Default : -2)	Increase from target temperature	0/+30 (Default : +2)	Decrease from Target Temperature	0/-50 (Default : 0)
8	Operation Super Save	Very Low	Decrease from target temperature	0/-30 (Default : -5)	Increase from target temperature	0/+30 (Default : +5)	Decrease from Target Temperature	0/-50 (Default : 0)

Digital Input for energy saving (ESS, Smart Grid)

This product provides two digital inputs (TB_SG1 / TB_SG2) that can be used to switch between energy states when not using Modbus RTU (CN-COM).

Available Energy States

There are 8 energy states available in total. Four different states can be triggered using the 230V-inputs – by default Energy states 1-4.

With the digital input assignment in the menu 'Energy state/Digital input assignment of the control panel, different Energy states can be selected for Signals 0:1 and 1:1.

0:0 is always linked with ES2 (Normal operation) and 1:0 is always linked with ES1 (Operation off/Utility lock).


How to set Digital input signal

Follow below procedures step 1 ~ step 3.

Step 1. Check if the power of the unit is turned off.

Step 2. Disassemble front panels and distinguish terminal block in Indoor PCB.

Step 3. Connect signal cable to terminal block in PCB (TB_SG2, TB_SG1) fully as shown below.

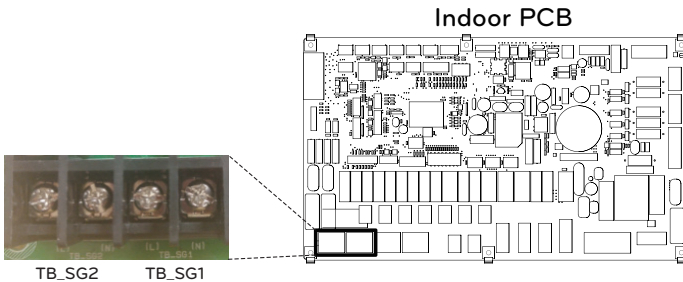

Energy state depending on input signal (TB_SG1/TB_SG2)

Input Signal		Output state	
TB_SG1	TB_SG2	Default	Range
0	0	ES2	fixed
1	0	ES1	
0	1	ES3	ES3-ES8
1	1	ES4	

2Way Valve

2way valve is required to control water flow while cooling operation. Role of 2way valve is to cut off water flow into under floor loop in cooling mode when fan coil unit is equipped for cooling operation.

General Information

THERMAV. supports following 2way valve.

Type	Power	Operating Mode	Supported
NO 2-wire ¹⁾	230 V AC	Closing water flow	Yes
		Opening water flow	
NC 2-wire ²⁾	230 V AC	Closing water flow	Yes
		Opening water flow	

1. Normal Open type. When electric power is NOT supplied, the valve is open. (When electric power is supplied, the valve is closed.)
2. Normal Closed type. When electric power is NOT supplied, the valve is closed. (When electric power is supplied, the valve is open.)


How to Wire 2Way Valve

Follow below procedures Step 1 ~ Step 2.


Step 1. Uncover front cover of the unit.

Step 2. Find terminal block and connect wire as below.

- For 3 Series

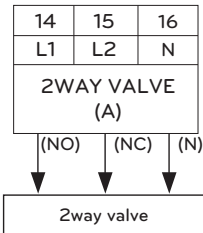

- For 4 Series

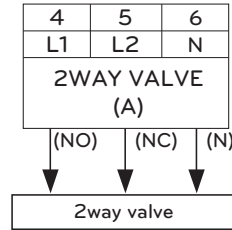

! CAUTION

Dew Condensation

- Wrong wiring can yield dew condensation on the floor. If radiator is connected at the under floor water loop, dew condensation can be occurred on the surface of the radiator.

WARNING

Wiring

- Normal Open type should be connected to wire (NO) and wire (N) for valve opening in cooling mode.
- Normal closed type should be connected to wire (NC) and wire (N) for valve closing in cooling mode.

(NO) : Live signal (for Normal Open type) from PCB to 2way valve

(NC) : Live signal (for Normal Closed type) from PCB to 2way valve

(N) : Neutral signal from PCB to 2way valve

✱ The terminal block connection number may differ depending on the model. Refer to the "Wiring Diagram" in the SVC Manual.

Final Check

- Flow direction :
 - Water should not flow into under floor loop in cooling mode.
 - To verify the flow direction, check temperature at the water inlet of the under floor loop.
 - If correctly wired, this temperatures should not be approached to 6 °C in cooling mode.

3Way Valve(A)

3Way Valve(A) is required to operate DHW water tank. Role of 3way valve is flow switching between under floor heating loop and water tank heating loop. Plus, it is required to operate 3rd party boiler.

General Information

THERMAV. supports following 3way valve.

Type	Power	Operating Mode	Supported
SPDT ¹⁾ 3-wire	220-240 V~	Selecting Flow A ²⁾ between Flow A and Flow B	Yes
		Selecting Flow B ³⁾ between Flow A and Flow B	Yes

1. SPDT = Single Pole Double Throw. Three wires consist of Live1 (for selecting Flow A), Live 2 (for selecting Flow B), and Neutral (for common).
2. Flow A means 'water flow from the unit to under floor water circuit.'
3. Flow B means 'water flow from the unit to DHW water tank.'


How to wire 3way valve(A)

Follow below procedures Step 1 ~ Step 2.


Step 1. Uncover front cover of the unit.

Step 2. Find terminal block and connect wire as below.

- For 3 Series

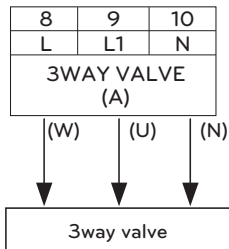

- For 4 Series

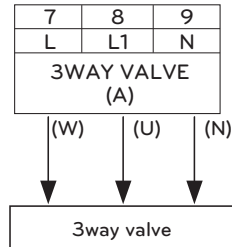

⚠ WARNING

- 3way valve should select water tank loop when electric power is supplied to wire (W) and wire (N).
- 3way valve should select under floor loop when electric power is supplied to wire (U) and wire (N).

(W) : Live signal (Water tank heating) from PCB to 3way valve

(U) : Live signal (Under floor heating) from PCB to 3way valve

(N) : Neutral signal from PCB to 3way valve

※ The terminal block connection number may differ depending on the model. Refer to the "Wiring Diagram" in the SVC Manual.

3Way Valve(B)

3way valve(B) is required to operate Solar thermal system. Role of 3way valve is flow switching between open and close mode of the solar circuit.

General Information

THERMA V. supports following 3way valve.

Type	Power	Operating Mode	Supported
SPDT ¹⁾ 3-wire	220-240 V~	Selecting Flow A ²⁾ between Flow A and Flow B	Yes
		Selecting Flow B ³⁾ between Flow A and Flow B	Yes

1. SPDT = Single Pole Double Throw. Three wires consist of Live1 (for selecting Flow A), Live 2(for selecting Flow B), and Neutral (for common).
2. Flow B means 'heat source toward solar panel repeatedly'. (close mode of circuit)
3. Flow A means 'heat source flow from solar panel to DHW tank in solar circuit'. (open mode of circuit)


How to wire 3way valve(B)

Follow below procedures Step 1 ~ Step 2.


Step 1. Uncover front cover of the unit.

Step 2. Find terminal block and connect wire as below.

- For 3 Series

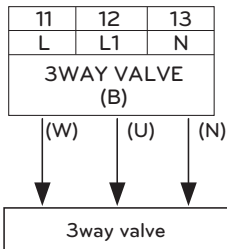

- For 4 Series

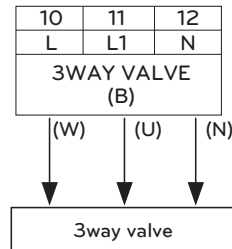

! WARNING

- 3way valve should select "close solar circuit" when electric power is supplied to wire (W) and wire (N).
- 3way valve should select "open solar circuit" when electric power is supplied to wire (U) and wire (N).

(W) : Live signal (close solar circuit) from PCB to 3way valve

(U) : Live signal (open solar circuit) from PCB to 3way valve

(N) : Neutral signal from PCB to 3way valve

※ The terminal block connection number may differ depending on the model. Refer to the "Wiring Diagram" in the SVC Manual.

Electric Heater

How to Pipe Electric Heater

Follow below procedures Step 1 ~ Step 4.

Step 1. Uncover the electric heater accessory.

Step 2. Check the diameter of pre-installed pipes of unit.

Step 3. If the diameter of pre-installed pipes is different from diameter of electric heater accessory kit, it is necessary to reduce or expand pipe's diameter.

Step 4. Connect the pipes. The inlet pipe of electric heater accessory must be connected to outlet of the unit.

WARNING

Followings should be kept before installation

- The unit should be stop before the piping work.
- Never connect electric power while piping electric heater.
- Before the piping working, water in the part(or to heating loop) installed with electric heater should be drained. After working, water should be charged.

CAUTION


- Electric Heater should be installed with enough space for installation and service.
- Water pipes and connections should be cleaned using water.
- Methods to prevent leakage in plumbing connections must be applied.
- Heater must not be impacted.
- Do not let dirty particle be dropped inside tank to avoid possibility of degrade.
- After installation, make it sure that no leakage is appeared in the connection.

Terminal Block Information

Symbols used below pictures are as follows :


- L, L1, L2 : Live (220-240 V~)
- N : Neutral (220-240 V~)
- R, S, T : Live (380-415 V 3N~)
- BR : Brown, WH : White, BL : Blue, BK : Black

<1Ø 3 kW>

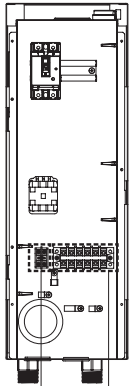


Terminal Block 1
Terminal Block 2

<1Ø 6 kW>

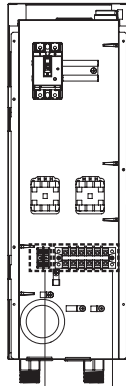

Terminal Block 1
Terminal Block 2

<3Ø 6 kW>

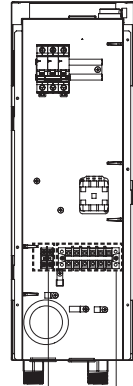

Terminal Block 1
Terminal Block 2

How to Wire Electric Heater

- For 3 Series

Follow below procedures Step 1 ~ Step 4.

Step 1. Uncover the electric heater accessory.


Step 2. Find the terminal block and connect wires. Refer to the installation manual of the electric heater. (Wires are field-supplied item.)

Step 3. Connect terminal block ports unit and electric heater accessory.

- 1Ø 3kW, 3Ø 6kW = single capacity


- 1Ø 6kW = 2Step control is possible through Heater(A)/Heater(B).

(1Ø 3 kW) Terminal Block 2 (In Backup Heater)

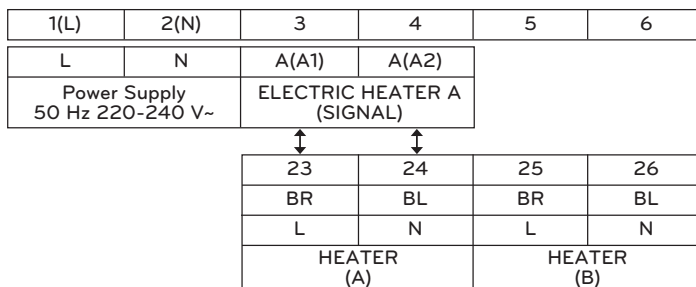


Terminal Block 3 (In Unit)

(1Ø 6 kW) Terminal Block 2 (In Backup Heater)

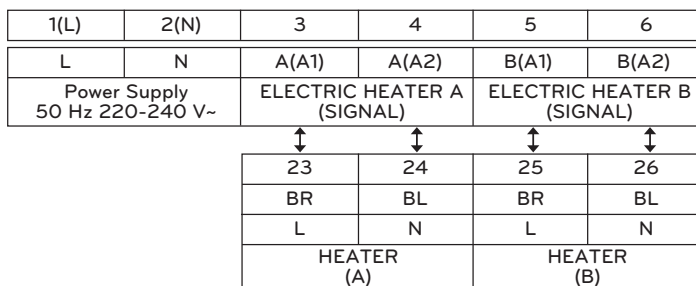

Terminal Block 3 (In Unit)

(3Ø 6 kW) Terminal Block 2 (In Backup Heater)

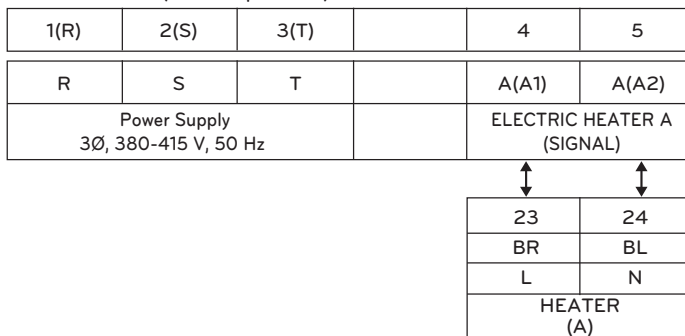


Terminal Block 3 (In Unit)


Step 4. Connect power supply cable to terminal block 2.

When Tightening the power cable on terminal block, Be careful to prevent a shock or injury.

Terminal Block 2 (In 1Ø Backup Heater)

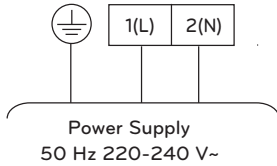

Terminal Block 2 (In 3Ø Backup Heater)

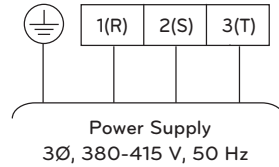

- For more information about installing Electric Heater, Please refer installation Manual provided with Electric Heater

※ The terminal block connection number may differ depending on the model. Refer to the "Wiring Diagram" in the SVC Manual.


- For 4 Series

Follow below procedures Step 1 ~ Step 4.


Step 1. Uncover the electric heater accessory.

Step 2. Find the terminal block and connect wires. (Wires are field-supplied item.)


Step 3. Connect terminal block ports of unit and electric heater accessory.

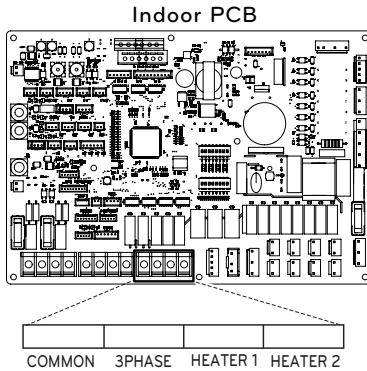


(1Ø 3 kW) Terminal Block 2 (In Backup Heater)

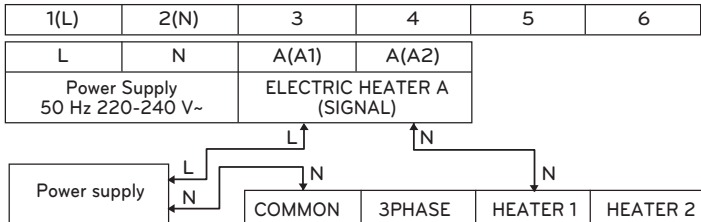

(1Ø 6 kW) Terminal Block 2 (In Backup Heater)

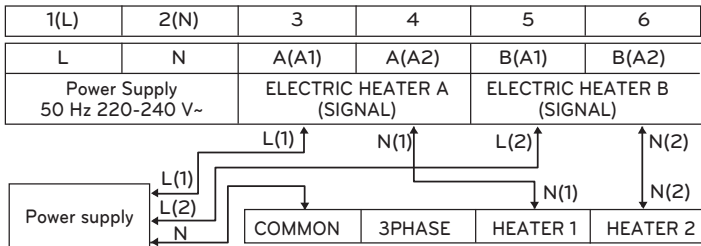


(3Ø 6 kW) Terminal Block 2 (In Backup Heater)

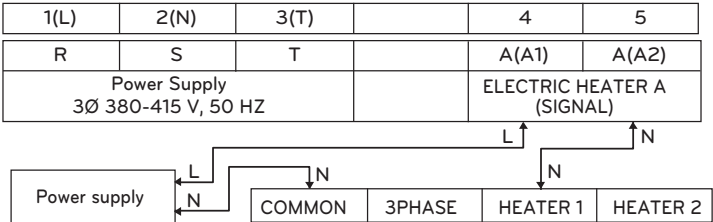


Step 4. Connect power supply cable to terminal block 2.

Terminal Block 2 (In 1Ø Backup Heater)

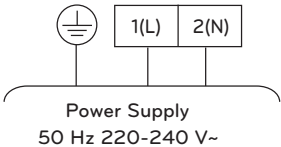

Terminal Block 2 (In 3Ø Backup Heater)

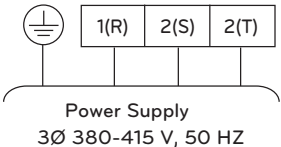

NOTE


Turn off electric power supply before setting DIP switch.
Whenever adjusting DIP switch, turn off electric power supply to avoid electric shock.

Description	Setting		Default
Selecting electric heater capacity		Electric heater is not used	
		Half capacity is used only for HA061M(AHEH066A)	
		Full capacity is used	


* For the above change, you need to adjust 6 and 7 of Indoor PCB option switch2.

Typical Installation Example (Backup heater for Monobloc)

Floor heating + Backup Heater (Only Heating)

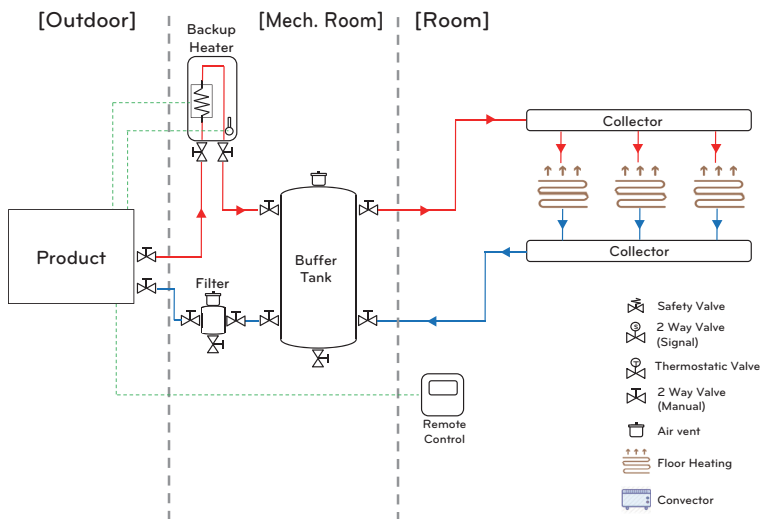

Floor heating + Convactor + Backup Heater (Heating + Cooling)

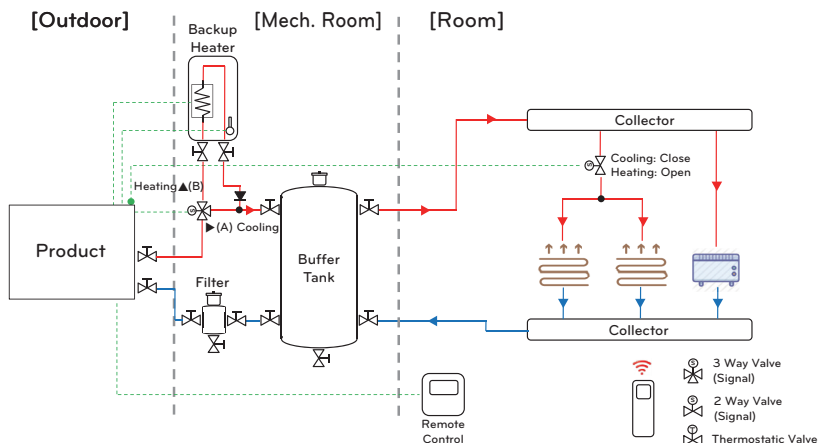

NOTE

- When the Backup Heater is installed in a reversible system, condensation may occur inside the Backup Heater.
- To provide a bypass for the condensate, install 3way valve.
- During cooling operation, connect the 3-Way Valve using the 2-Way Valve connection terminal to prevent water from going to the Backup Heater

How to Install 3way Valve for Backup Heater Bypass


Follow below procedures Step 1 ~ Step 2.

Step 1. Uncover front cover of the unit.

Step 2. Find terminal block and connect wire as below.

When Tightening the connect wire on terminal block, Be careful to prevent a shock or injury.
(230 VAC)


- For 3 Series

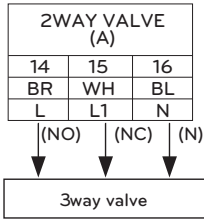

! WARNING

- When type of 2way valve is NO type, 3way valve should select Flow A(bypass). Electric power is supplied to wire(NO) and wire(N).
- When type of 2way valve is NC type, 3way valve should select Flow B(heating In Backup heater). Electric power is supplied to wire(NC) and wire(N).

- For 4 Series

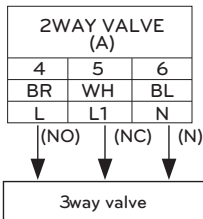

! CAUTION

- 3way valve should be connected together with 2way valve in terminal block.
- Keep the distance between 3way valve and Backup Heater more than 0.5m.
- To prevent reverse flow, It is important to use one way valve(check valve) to Backup Heater water outlet.

How to Connect Backup Heater Sensor to Unit

Follow below procedures Step 1 – Step 5.

- ① Find backup heater terminal block Kit(Fig. 1).
- ② Assemble the terminal block kit using screw on unit.
- ③ Plug it to 'E/Heater Out' (White Connector) of CN_TH3 in the Main PCB (Unit) as shown Fig.2.
- ④ Connect harness between the unit and the Backup Heater until it clicks into place.(Fig. 3).
- ⑤ Use the cord clamp to fix the cable through low voltage hole.

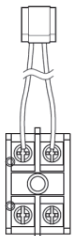


Fig.1

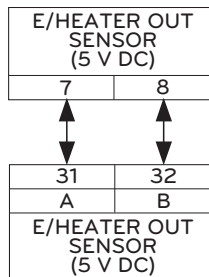


Fig.2



Fig.3

* The terminal block connection number may differ depending on the model. Refer to the "Wiring Diagram" in the SVC Manual.

Final check

No.	Check point	Description
1	Connection of Water Inlet/Outlet	<ul style="list-style-type: none"> - Check if the shut-off valves should be assembled with Water inlet and outlet pipe of the unit - Check the location of the water inlet/outlet water pipe
2	Hydraulic pressure	<ul style="list-style-type: none"> - Check the pressure of supplying water by using pressure gage inside the unit - Pressure of Supplying water should be Under 3.0 bar approximately
3	Water pump capacity	<ul style="list-style-type: none"> - To secure enough water flow rate, do not set water pump capacity as Minimum. - It can lead unexpected flow rate error CH14. (Refer to 'Water Piping and Water Circuit Connection')
4	Transmission line and power source wiring	<ul style="list-style-type: none"> - Check if Transmission line and power source wiring are separated from each other. - If it is not, electronic noise may occur from the power source.
5	The power cord specifications	<ul style="list-style-type: none"> - Check the power cord specifications (Refer to 'Connecting Cables')
6	3Way Valve	<ul style="list-style-type: none"> - Water should flow from Water outlet of the unit to DHW tank Water inlet when DHW tank heating is selected. - To verify the flow direction, Make sure that the water outlet temperature of the unit and water inlet temperature of DHW Water tank are similar
7	2Way Valve	<ul style="list-style-type: none"> - Water should not flow into under floor loop in cooling mode. - To verify the flow direction, check temperature at the water inlet of the under floor loop. - If correctly wired, this temperatures should not be approached to 6 °C in cooling mode.
8	Air Vent	<ul style="list-style-type: none"> - Air-vent must be located highest level of Water pipe system - It should be installed at the point which is easy to service. - It takes some times to remove air in the water system if air purge is not performed sufficiently it may occur CH14 error. (Refer to 'Water Charging')

CONFIGURATION

As **THERMAV** is designed to satisfy various installation environment, it is important to set up system correctly. If not configured correctly, improper operation or degrade of performance can be expected.

- For 3 Series


DIP Switch Setting

⚠ CAUTION

Turn off electric power supply before setting DIP switch






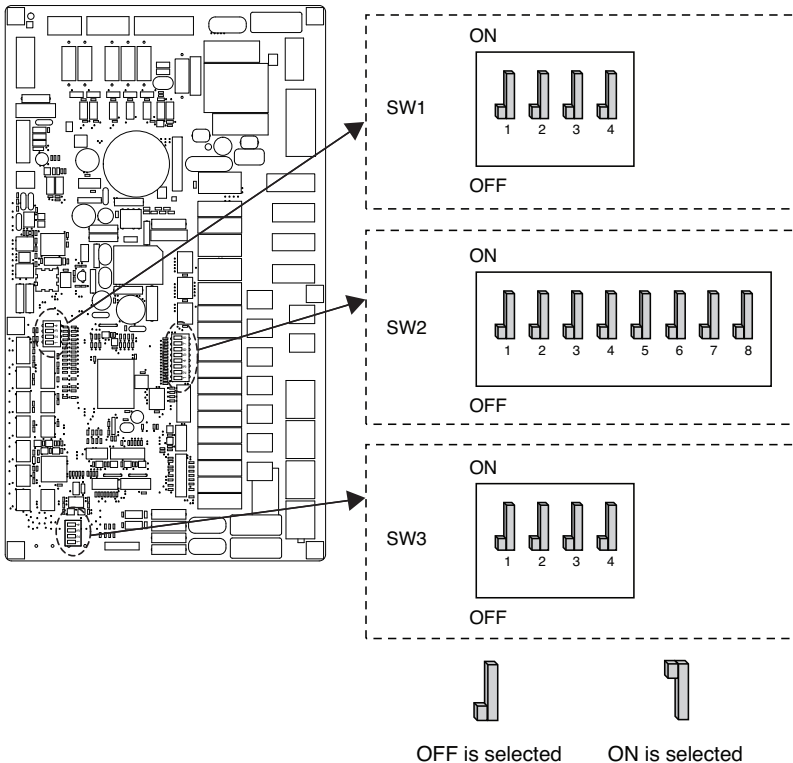








- Whenever adjusting DIP switch, turn off electric power supply to avoid electric shock.

Indoor PCB








DIP Switch Information

Option Switch 2

Description	Setting		Default
Accessory installation information	 2 3	Unit + Outdoor unit is installed	
	 2 3	Unit + Outdoor unit + DHW tank is installed	
	 2 3	Unit + Outdoor unit + DHW tank + Solar thermal system is installed	
Cycle	4 	Heating Only	
	4 	Heating & Cooling	
Selecting electric heater capacity	 6 7	Electric heater is not used	
	 6 7	Half capacity is used only for HA061M(AEH066A)	
	 6 7	Full capacity is used	
Thermostat installation information	8 	Thermostat is NOT installed	
	8 	Thermostat is installed	


Option Switch 1

Description	Setting		Default
MODBUS	1 	As Master	
	1 	As Slave	
MODBUS Function	2 	Common 3 rd party	


Option Switch 3

Description	Setting		Default
Remote Air Sensor	1	Remote sensor is not installed	1
	1	Remote sensor is installed	
ANTIFREEZE	2	Antifreezing solution not using mode	2
	2	Antifreezing solution using mode	



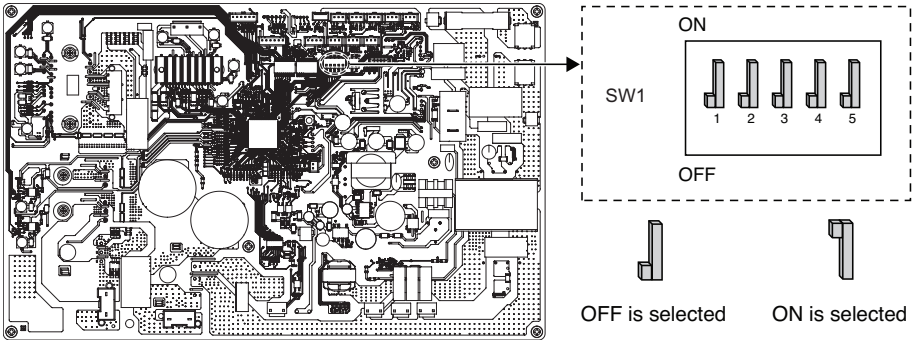



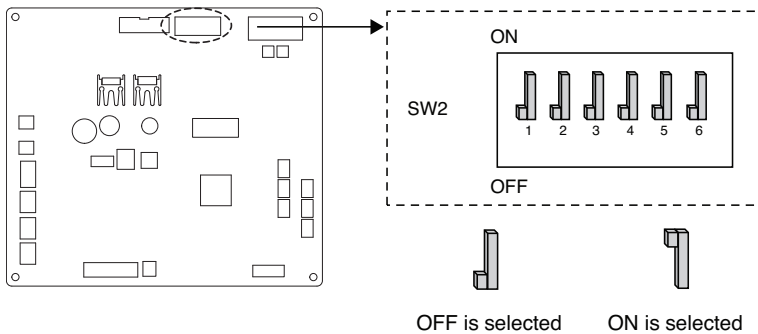




Outdoor PCB (5, 7, 9 kW)



Outdoor PCB (12, 14, 16 kW)



DIP Switch Information

Description	Setting		Default
Low Noise Mode	2 	Normal Low Noise Mode	2 
	2 	Limited Low Noise Mode	
Peak Control	3  4 	Max Mode	3  4 
	3  4 	Peak Control Step 1 - To limit maximum current (Power saving)	
	3  4 	Peak Control Step 2 - To limit maximum current (Power saving)	

- * Only DIP Switch no. 2 and no.3 has a function. Others have no function.
- * When setting the limited low noise mode, Mode can be exited to secure capacity after operating for a certain time.

NOTE

* Input current value can be limited by DIP Switch operation.

Model Name			Max. Mode Running Current (A)	Peak Control Mode Running Current (A)	
Chassis	Phase (Ø)	Capacity (kW)		1 Step	2 Step
UN36A	1	5	23	13	
		7	23	14	
		9	23	15	
UN60A	1	9	15	15	
		12	35	23	20
		14	35	24	21
		16	35	25	22
	3	12	15	8	6
		14	15	9	7
		16	15	10	8

- For 4 Series


DIP Switch Setting

CAUTION

Turn off electric power supply before setting DIP switch





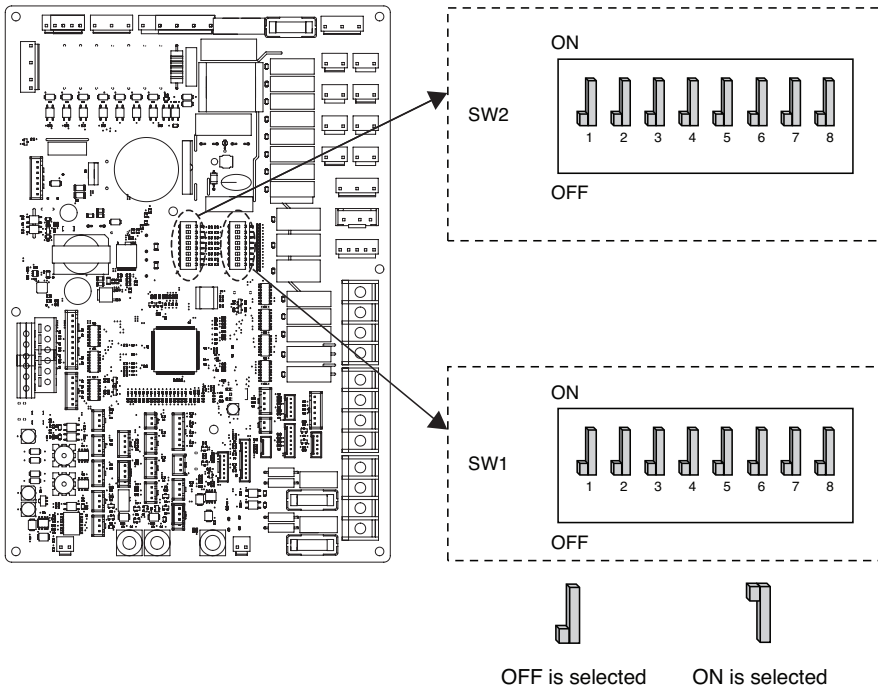












- Whenever adjusting DIP switch, turn off electric power supply to avoid electric shock.

Indoor PCB











DIP Switch Information

Option Switch 2


Description	Setting		Default
Accessory installation information	 2 3	Heat pump is installed (Heating(Cooling) circuit only)	
	 2 3	Heat pump + DHW tank is installed	
	 2 3	Heat pump + DHW tank + Solar thermal system is installed	
Cycle	4  4	Heating Only	
	4  4	Heating & Cooling	
Room Air Sensor	5  5	Room Air Sensor is not installed	
	5  5	Room Air Sensor is installed	
Selecting electric heater capacity	 6 7	Electric heater is not used	
	 6 7	Half capacity is used only for HA061M(AEH066A)	
	 6 7	Full capacity is used	
Thermostat installation information	8  8	Thermostat is NOT installed	
	8  8	Thermostat is installed	

Option Switch 1


Description	Setting		Default
MODBUS Communication Type	1 	As Master (LG extension modules)	1 
	1 	As Slave (3rd party controller)	
MODBUS Function	2 	Unified Open Protocol	2 
Antifreeze Agent	8 	Antifreeze agent is not used	8 
	8 	Antifreeze agent is used *	

* Possibility to allow colder water temperature by setting.
Bridge at CN_ANTI_SW must be dis-connected to enable setting.



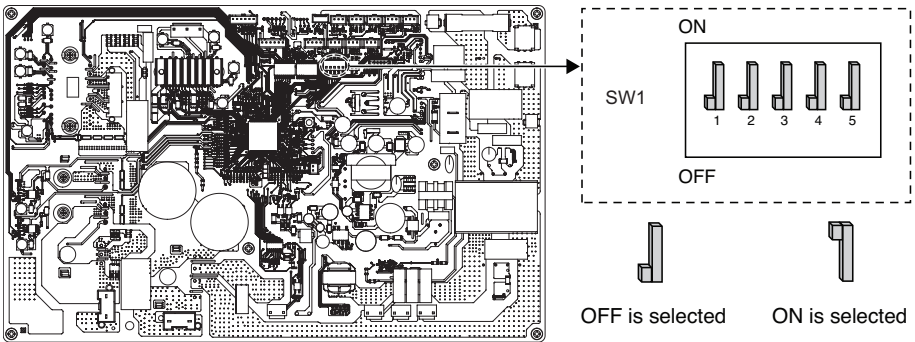



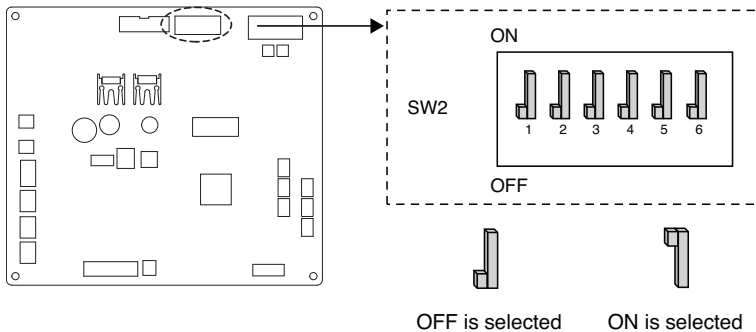




Outdoor PCB (5, 7, 9 kW)



Outdoor PCB (12, 14, 16 kW)



DIP Switch Information

Description	Setting		Default
Low Noise Mode	2 	Normal Low Noise Mode	2 
	2 	Limited Low Noise Mode	
Peak Control	3  4 	Max Mode	3  4 
	3  4 	Peak Control Step 1 - To limit maximum current (Power saving)	
	3  4 	Peak Control Step 2 - To limit maximum current (Power saving)	

- ※ Only DIP Switch no. 2 and no.3 has a function. Others have no function.
- ※ When setting the limited low noise mode, Mode can be exited to secure capacity after operating for a certain time.

NOTE

* Input current value can be limited by DIP Switch operation.

Model Name			Max. Mode Running Current (A)	Peak Control Mode Running Current (A)	
Chassis	Phase (Ø)	Capacity (kW)		1 Step	2 Step
UN36A	1	5	23	13	
		7	23	14	
		9	23	15	
UN60A	1	12	35	23	20
		14	35	24	21
		16	35	25	22
	3	12	15	8	6
		14	15	9	7
		16	15	10	8